

# Combi

## Umbretta 4CAS



EN Instruction manual

 
繁體中文 說明書

 
 
 
 
 
 
 
KOR 사용설명서

 
 
 
 
 
 
# Umbretta 4CAS

 
 
 
 
<b>ENGLISH</b>	Instruction manual .....	7
<b>繁體中文</b>	使用說明書 .....	19
<b>KOREAN</b>	사용설명서 .....	28

 
 
 
# List of components

 
 
 
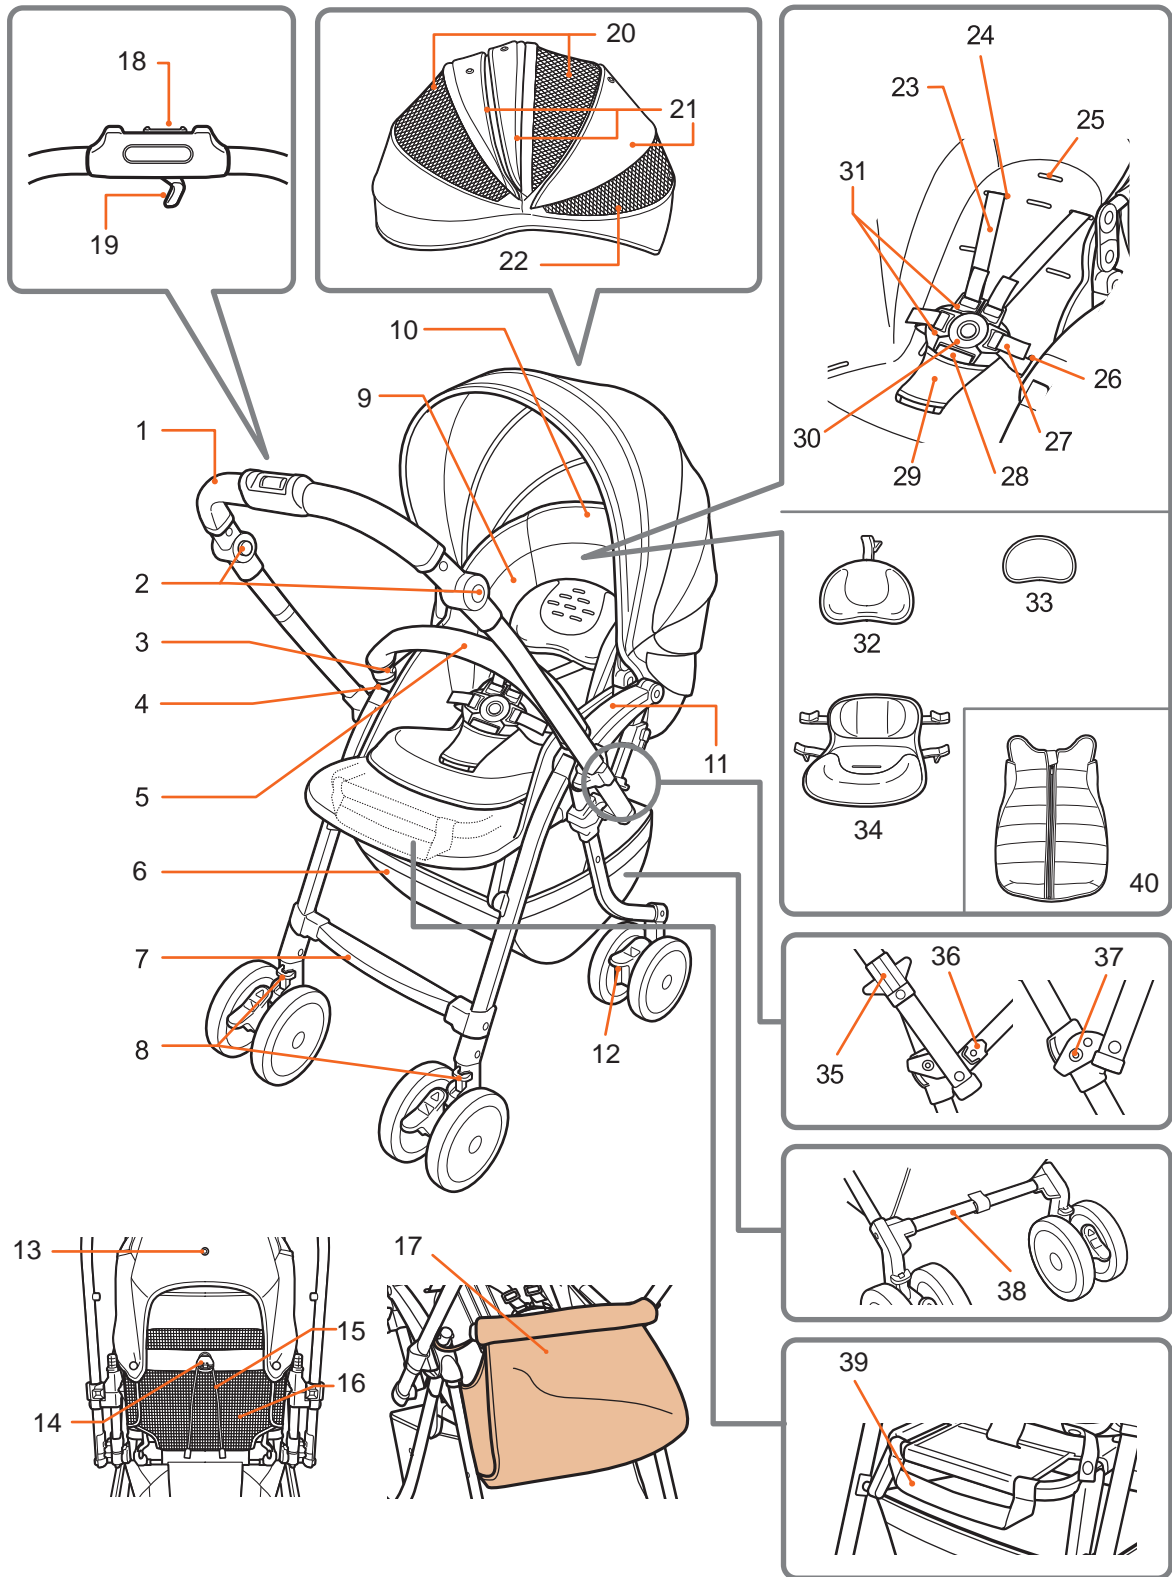 


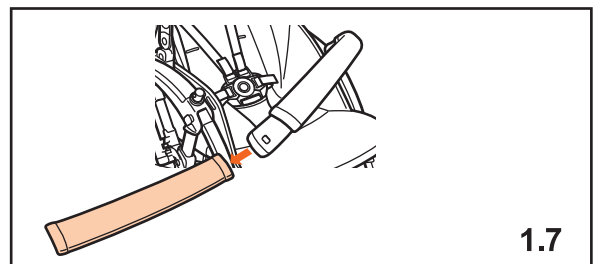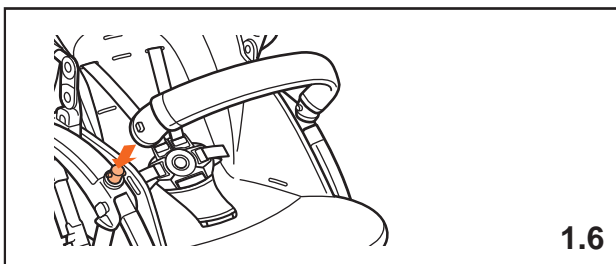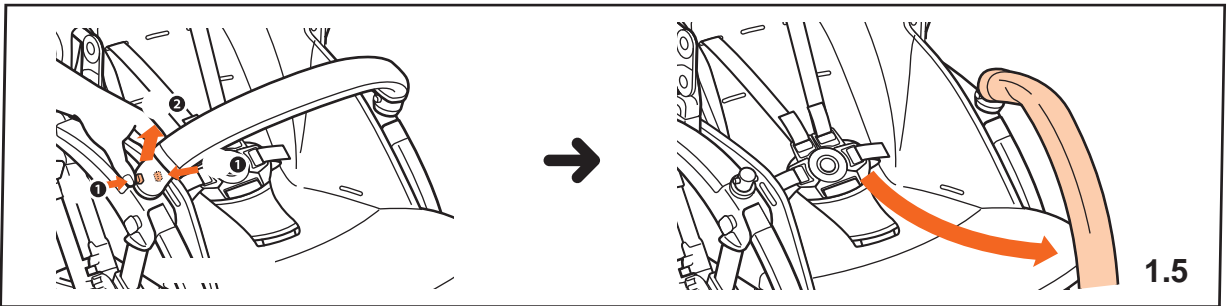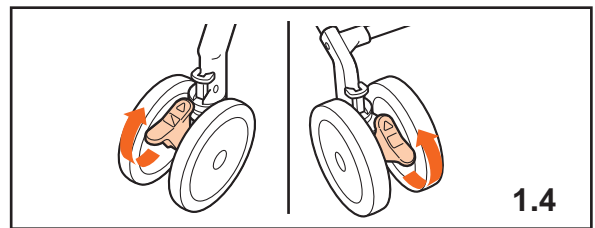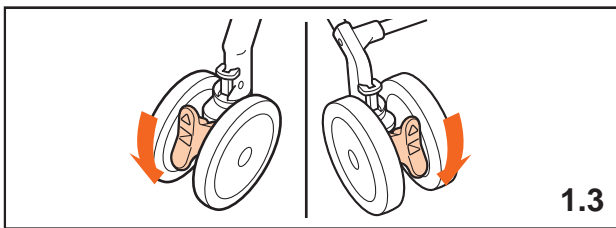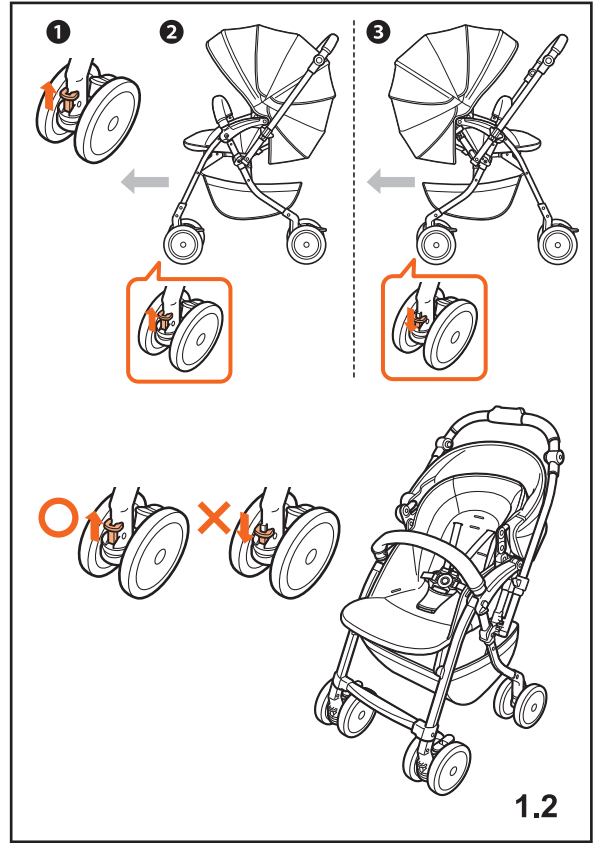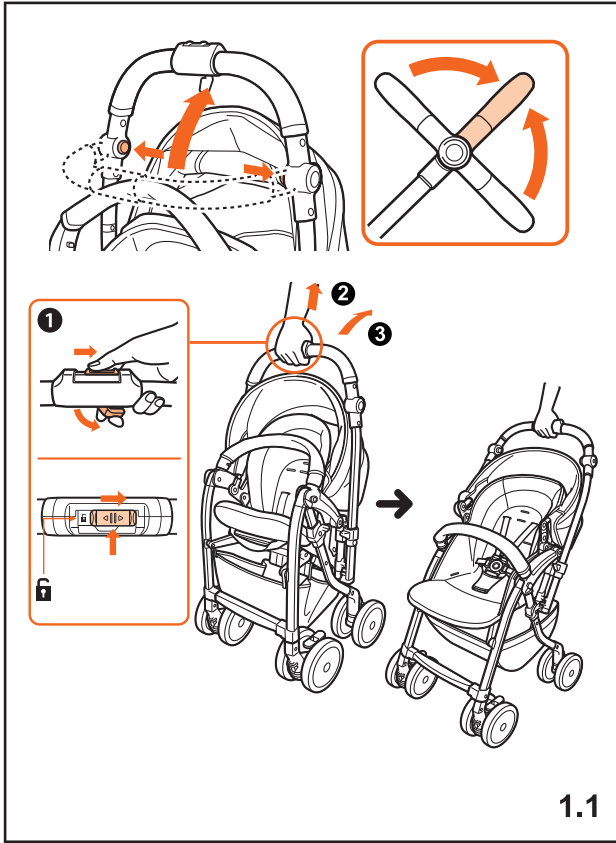

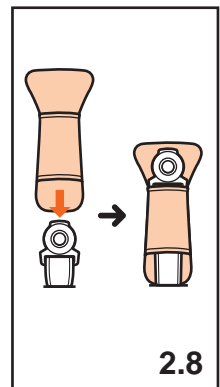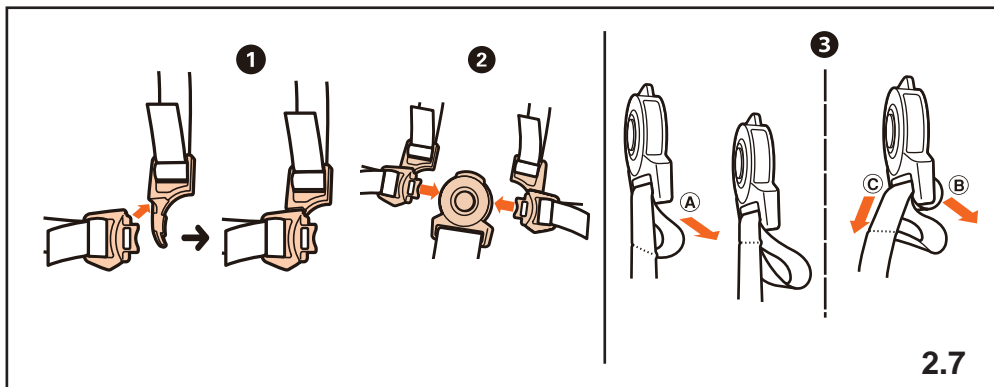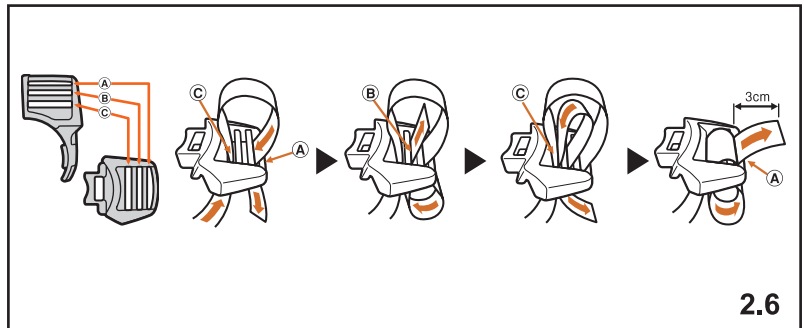 
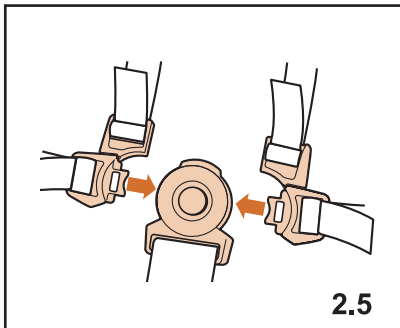 
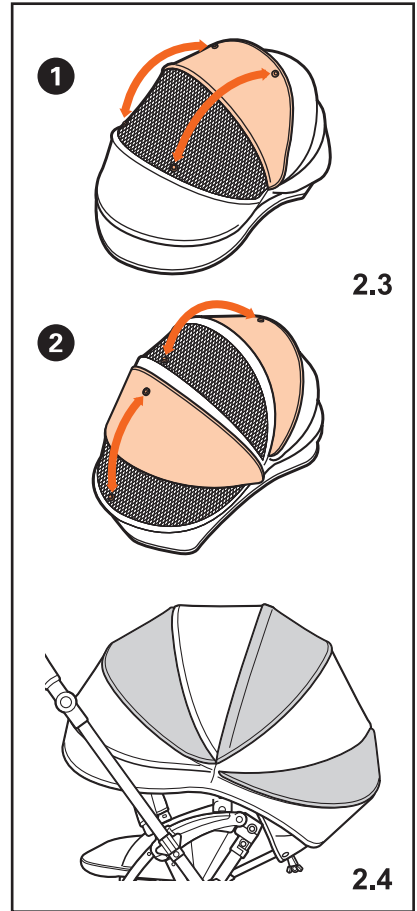 
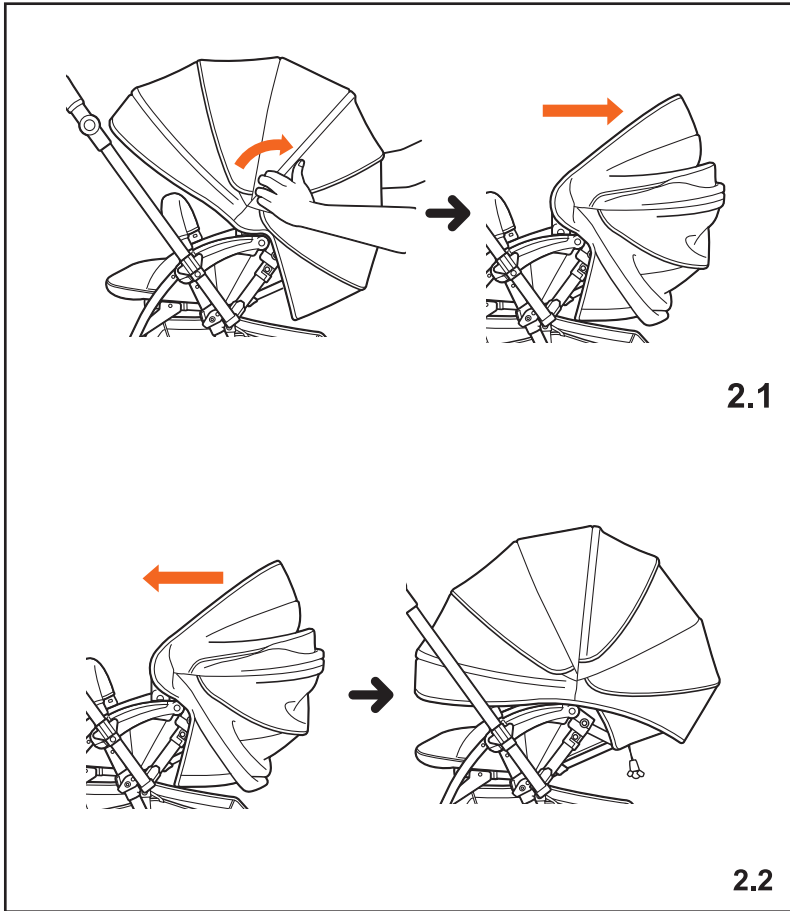 


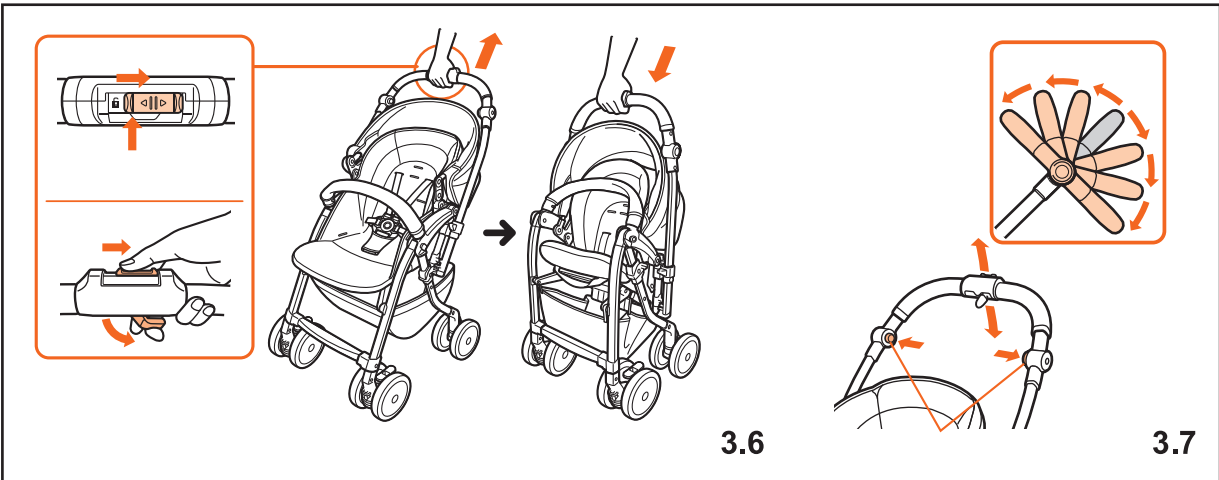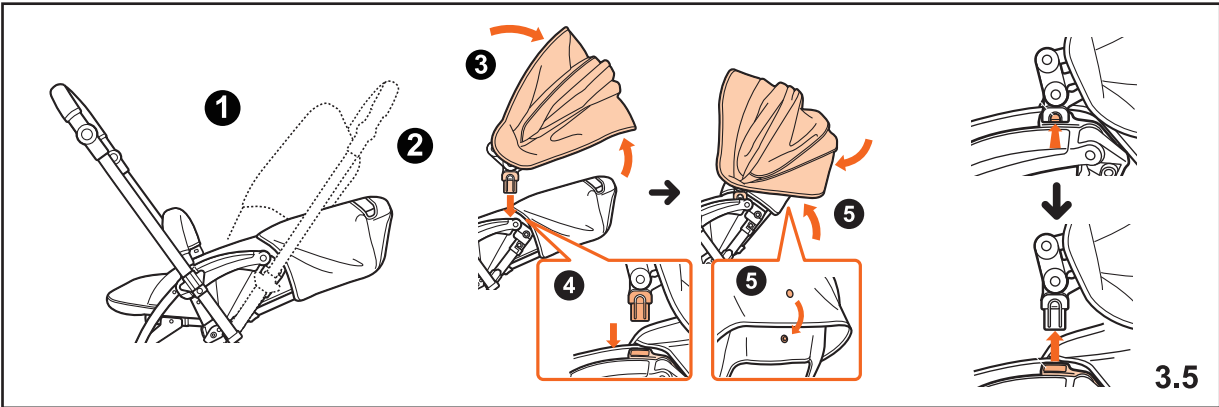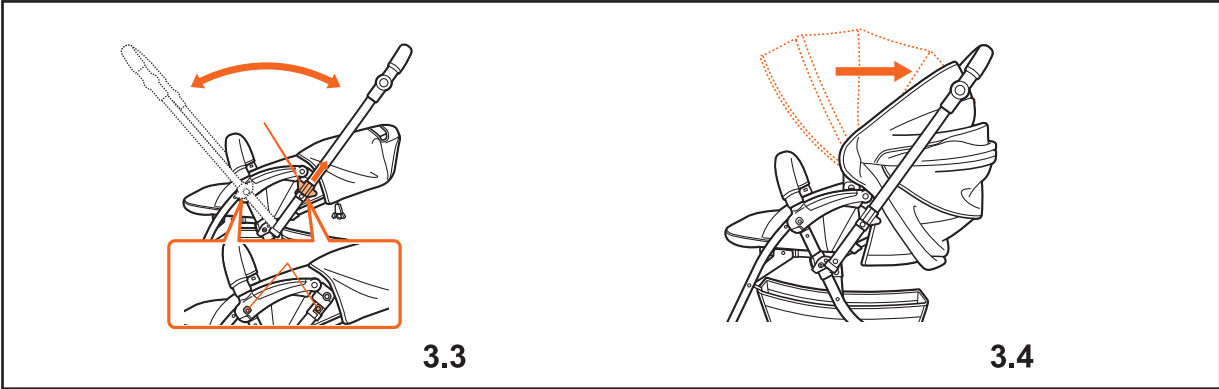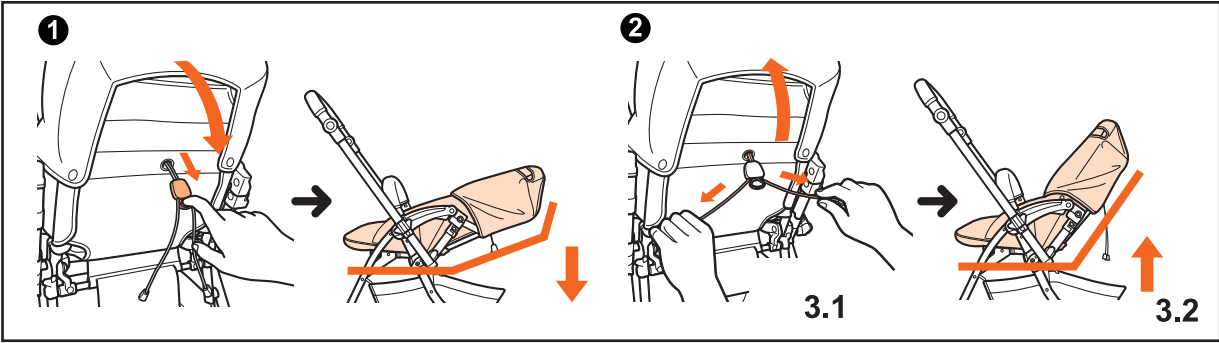

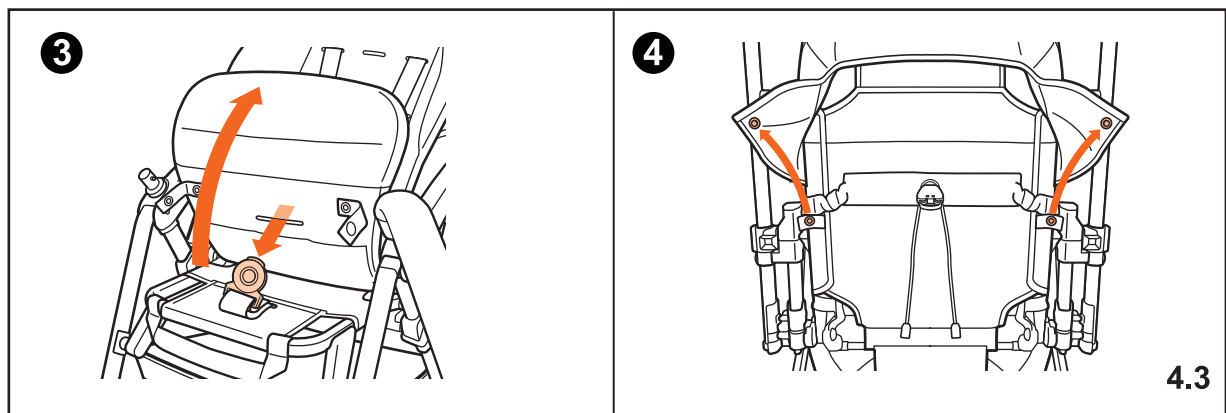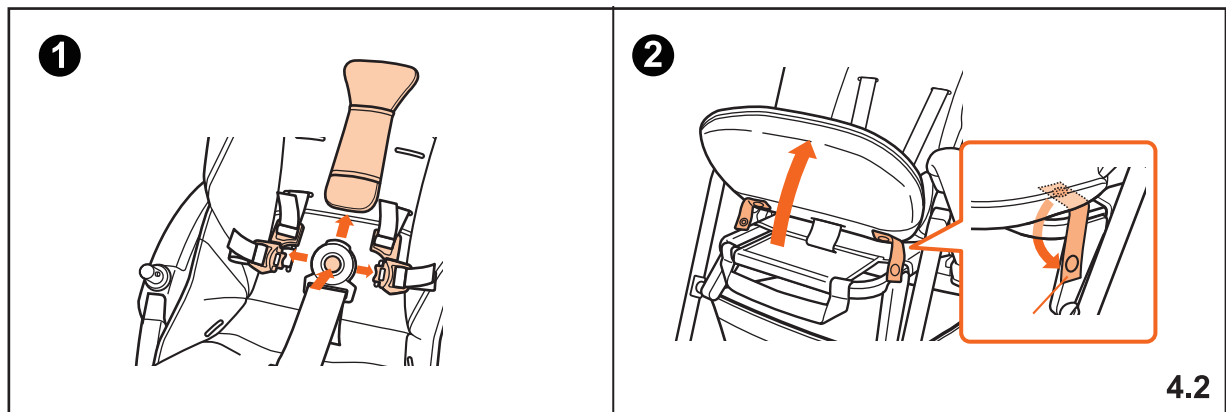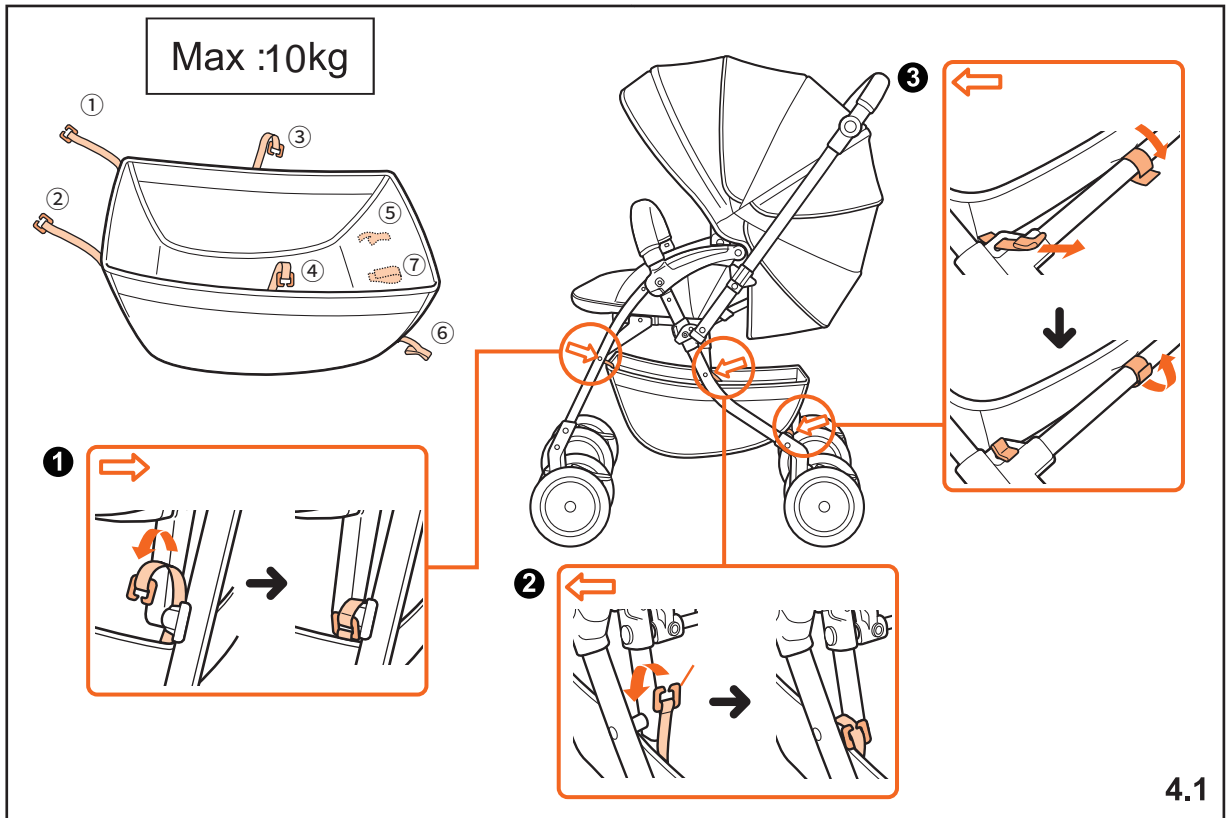

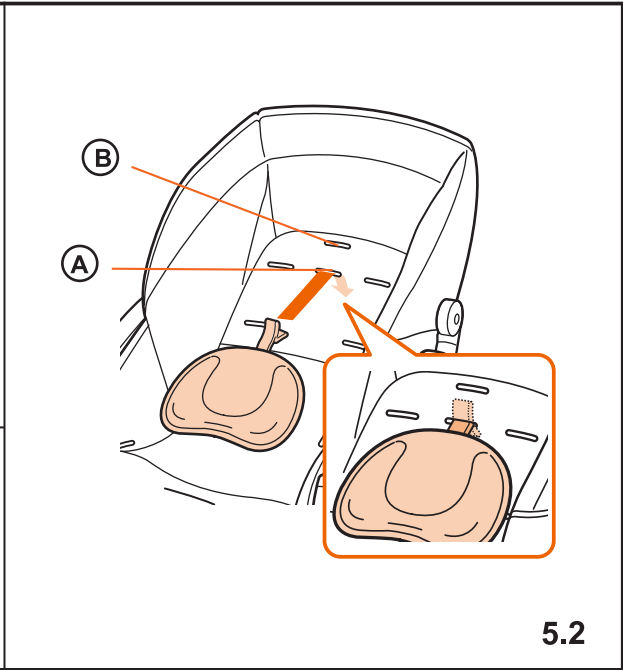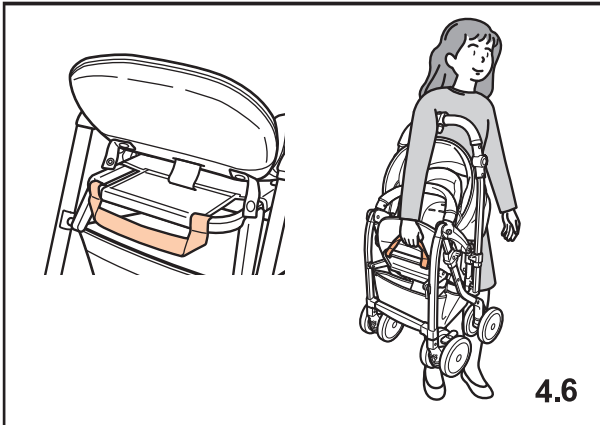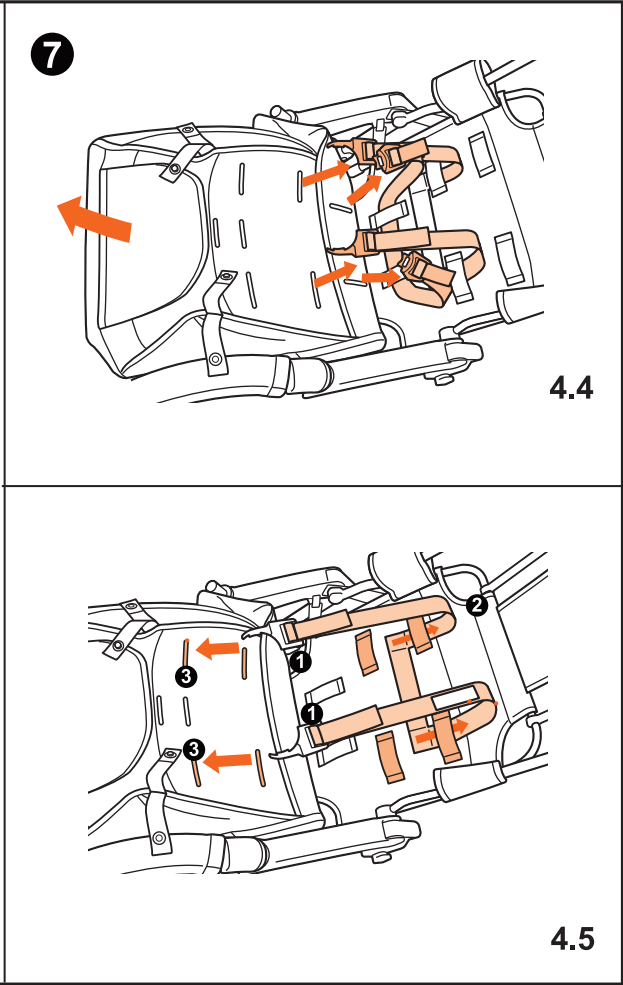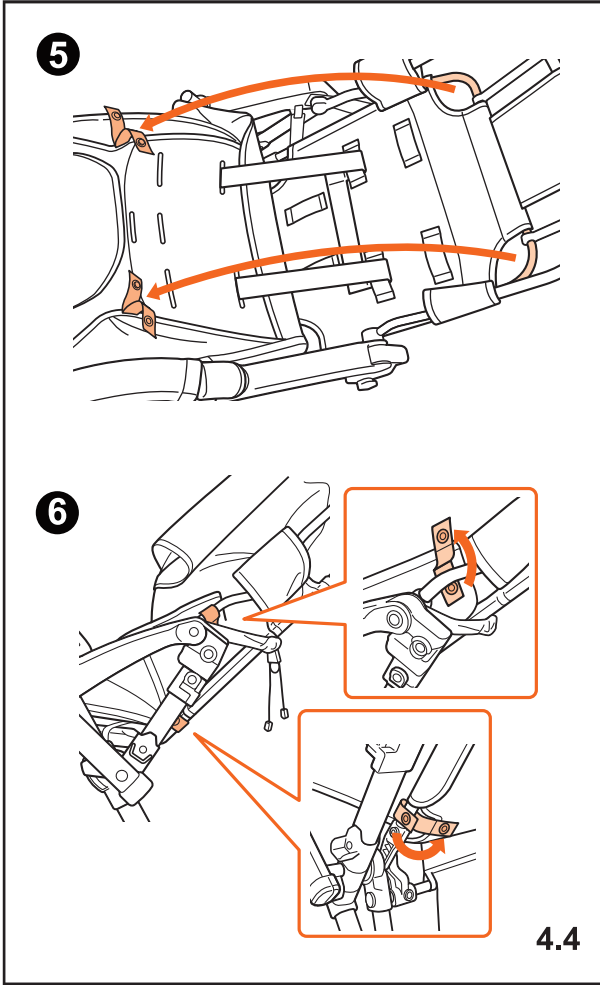



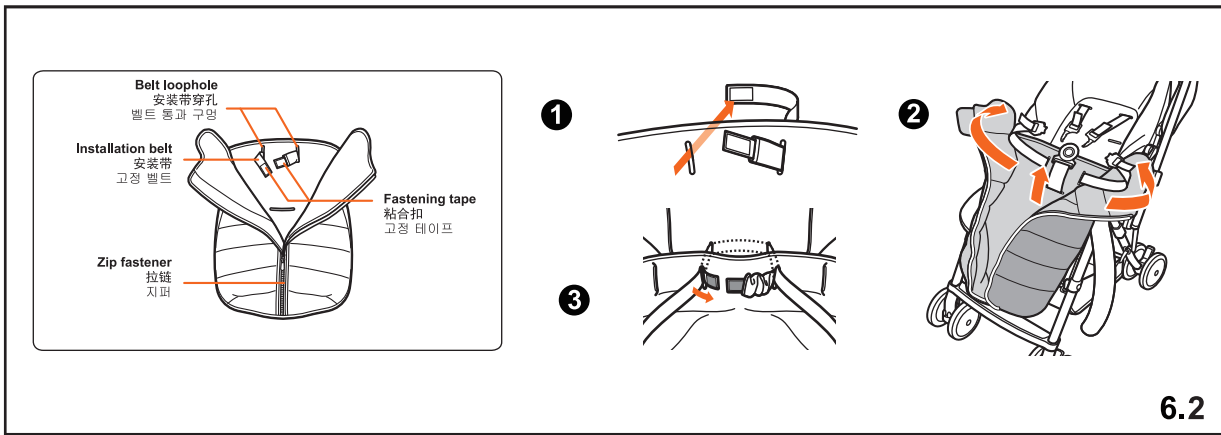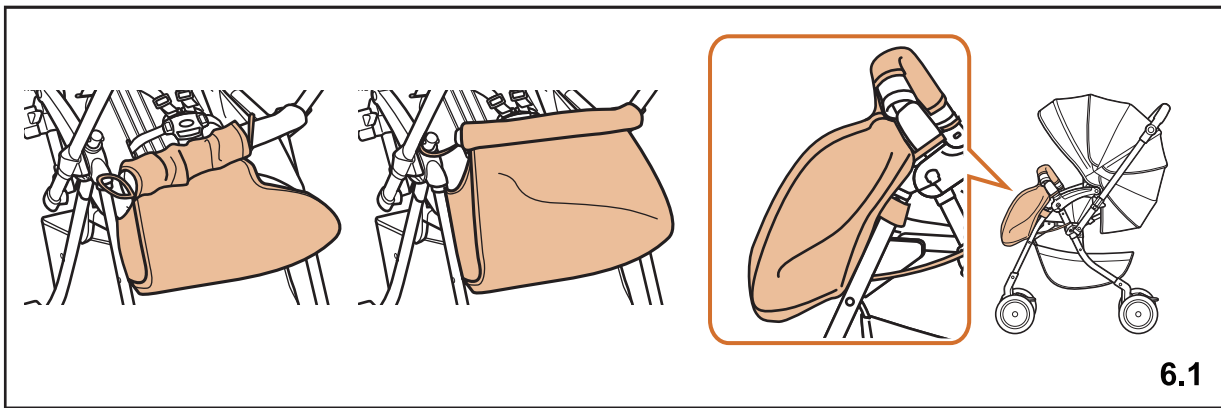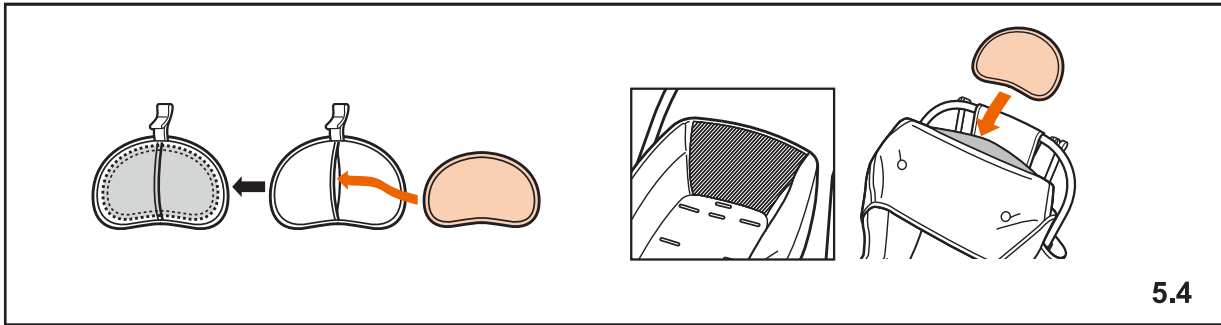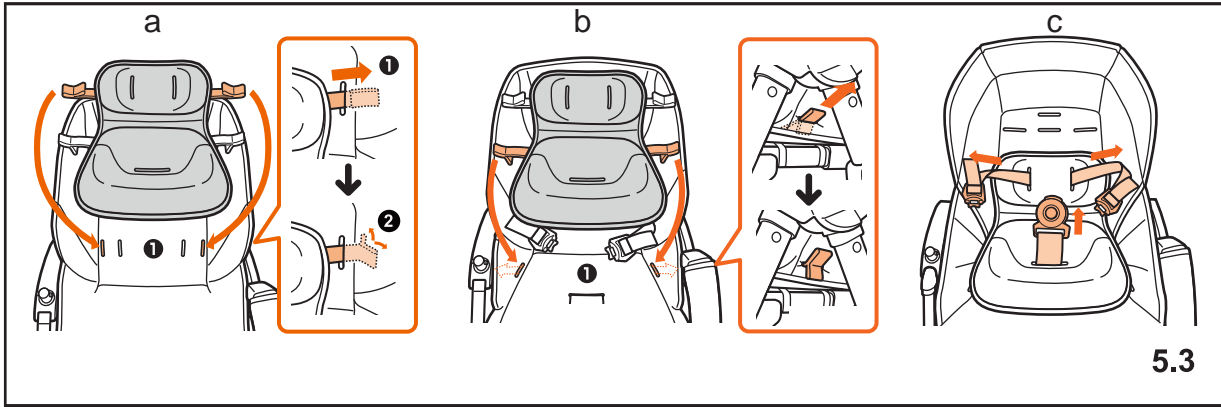

**IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

** WARNING** ( Incorrect operation may cause serious injury or death )

Please read this instruction manual carefully and keep it for future reference. The safety of the child may be seriously endangered if the instructions are not followed.

- You are personally responsible for the safety of your child.
- The stroller is suitable for children from 1month to 15 kg ( approximately 3 years of age ).
- Always apply the parking brake when you are stationary.
- Do not rely too much on the stoppers even when the stroller is parked empty.
- When a baby is in the stroller, you should always pay attention to the stroller to avoid any danger. In addition, both the left and right parking locks should be used at the same time to avoid accidental sliding or overturning.
- Keep all small parts away from children as they are choking hazard.
- To prevent the risk of suffocation, always keep the plastic bags out of the reach of children.
- This product is not suitable for running or skating.
- Overloading, incorrect folding and the use of non-approved accessories such as buggy boards may damage or break this stroller.
- Avoid serious injury from falling or sliding out. Always use seat belt.
- The child being carried by the stroller must be tied with the seat belt that contains the crotch belt, waist belt and shoulder belt. The front guard cannot prevent the child from standing up from the cushion. Make sure the seat belt is not loose to prevent the child from suddenly falling out of the stroller.
- Pay attention to child even when seat belt is in use in case of any sudden movement of child causing it to fall off.
- Do not cross the shoulder belts with each other when securing the shoulder belts to the insert plastic. Otherwise excessive pressure may be caused to child's neck.
- Do not use the seat cushion on which rift is found. Otherwise the seat cushion may not function as designed or the child may have chance swallow the material inside the cushion.
- Never leave the child in a stroller without seat cushion. The child's hands or feet maybe get jammed in between the stroller frame.
- When a child is sitting in it, the caretaker is not allowed to leave.
- Make sure the open-fold lock is engaged completely before use. Otherwise the stroller may fold suddenly in use.

EN

**IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**



**WARNING** ( Incorrect operation may cause serious injury or death )

- To prevent the stroller from accidental slippage, or to avoid fall of the stroller caused by loosening of the front guard, **DO NOT** hold the front guard or places like that when moving the stroller.
- Do not let the child operate the front guard. It may make the child to fall off from the stroller.
- Never leave your child unattended.
- Do not allow your child to stand in or on the stroller, it may be dangerous.
- Do not lean on or hang loads on the handle. Put any load on the handle will affect the stability of the trolley.
- Do not hang any object ( except original Combi parts ) on the hood or handle to prevent the stroller from overturning.
- Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas other than the seat.
- Excessive weight may cause a hazardous unstable condition  
( Maximum weight: 15kg. Basket maximum load: 10kg )
- Do not use the stroller on stairs.
- Do not let children operate the baby stroller to avoid accident.
- Be careful of those around you to avoid pinching their fingers when you are opening or folding the stroller or adjusting the seat angle.
- Keep your child and your fingers/hands away from moving/folding parts when folding or unfolding or adjusting the stroller.
- Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat must be used.
- When pushing the stroller, please walk slowly to avoid any damage to the stroller swivel wheels or any tipping over happened.
- Open the baby stroller in clear area to avoid pinching baby's finger.
- Be careful not to pinch the baby's hands or feet when reversing the handle.
- Do not reverse handle while pushing the stroller. Otherwise damage may be caused.
- Shoulder belt hole positions on the seat and the cushion must be aligned. If upper shoulder belt hole on the seat is used, upper shoulder belt hole on the cushion should be used; otherwise the child may be held tightly because the shoulder belt is not long enough.
- Do not adjust the seat angle while pushing the stroller because this is very dangerous.
- Please do **NOT** use the footmuff when the backrest is in the flat position. The ASTM footcover can only be used in this situation.

**EN**

**IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**



**WARNING** ( Incorrect operation may cause serious injury or death )

- **Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless the ASTM-footcover is used.**

**WARNING: It may be dangerous to leave your child unattended.**

**WARNING: Ensure That all the locking devices are engaged before use.**

**WARNING: Use a harness as soon as your child can sit unaided.**

**WARNING: When the backrest angle less than 150 degree, it is not suitable for baby under 6 months.**

**WARNING: Any loading attached to the handle affects the stability of the pram/pushchair.**

**WARNING: Always use the crotch strap in combination with the waist belt.**

**WARNING: Check that the pram body or seat unit attachment devices are correctly engaged before use.**

**WARNING: This product is not suitable for running or skating.**

**EN**



## **CAUTION** ( Incorrect operation may cause injury or component damage )

- Make sure all snaps are secured before use. Otherwise accident or damage to stroller may be caused.
- When adjusting the seat angle with a child in the stroller, loose the shoulder belt first, and then adjust the angle with the other hand holding the backrest. Please be careful not to change the seat angle suddenly.
- Adjust the length of seat belt properly after change of the seat angle.
- Please do not touch the folding lever except when folding the stroller.
- When opening or folding up the stroller and reversing the handle, be careful and avoid the seat cushion, seat belt, blanket and toys, etc., pinched into the stroller body.
- If one gives excessive shock to the front wheels when getting over the step, stroller may fall down and cause damages. When stepping over, such as a curb, please slow down even a slight difference level, pull downward the handle and step on the foot-step, and make sure to pass the front wheel to get over the step.
- Never lift the stroller or use it on escalators or stairs when your child is sitting or lying in the stroller.
- This stroller requires regular maintenance by the user.
- Before use check that the product and all its components have not been damaged during transportation.
- Please do not use the stroller in whatever purposes other than seating a baby. Failure to comply may result in damage of the stroller.
- Do not pull or twist or forcibly press down the front guard hardly. Otherwise the stroller may be damaged.
- Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat must be used.
- Do not use an adult sit on the stroller, or add loading on the stroller to avoid any damage to it.
- Avoid continuous outdoor usage particularly during day time in summer.
- Avoid storing the stroller in places that under high temperature, near a heat source or inside a car. Exposure to high temperature may damage or deform the stroller.
- Check regularly that all screws, bolts and nuts are engaged tightly.
- Swivel wheel lever should be secured at the same side of the pushing person.
- Lever secured in wrong position may affect maneuvering or damage the product.
- For use on trains: This product is not designed to be used on trains. When user attempts to use the product at his /her own risk, please lock stoppers in case of sudden brake or turning. Otherwise stroller may fall off.



## **CAUTION** ( Incorrect operation may cause injury or component damage )

EN

- Do not press on the folding lever while lift the stroller to avoid damage to the part.
- Make sure the basket is empty before folding up the stroller.
- Make sure the canopy is completely folded up before folding the stroller to avoid damage of the parts.
- Do not touch at the handle lock when folding or unfolding the stroller. Otherwise damage may be caused to the stroller.
- Do not lay down the stroller and do not put things on the canopy to avoid deformation.
- Do not get hold of an opened front guard to pull the baby stroller.
- Please do not put the stroller near fire.
- The stroller may slide or overturn accidentally even if the parking lock is engaged.
- Do not leave baby stroller at road side or slope even when it is not in use.
- Do not use the stroller on steep slopes, stairs, escalators, rough roads, beaches, mud, etc.
- When pushing the stroller, be careful of the road depression to prevent the front wheels from being trapped into the slot and overturning.
- In the event of damage or operation problems, stop using the stroller immediately.
- If damage is identified, do not use the product and keep it out of reach of children.
- Never leave the stroller close to stairs or steps.
- Only use on a flat, relatively smooth, stable and non-slippery surface. Only use original accessories and parts that have been approved by the manufacturer.
- Do not make any modifications to the product.
- Do not use the most reclined angle if the baby's head touches at the head rest.
- Do not use the stroller in snowy, windy days or wet road to avoid the stroller or guardian from slipping.
- Do not use the stroller in lightning days to avoid thunder stroke.
- Do not reverse handle while pushing the stroller.
- Do not attach other accessory like buggy board on the main body during a child being carried in stroller, otherwise accident or damage to stroller may cause.
- Do not use in the bus trolley.



## **CAUTION** ( Incorrect operation may cause injury or component damage )

- **Lift front wheels and pay particular attention to gaps or ditch when crossing rail road.**
- **No continuous use for a long period. Continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby seated in a reclined seat and 1 hour in an upright seat.**
- **When feel jammed, please do not forcibly fold the stroller to prevent from any damage. You should re-open the stroller to check and operate again.**
- **Turn swivel wheels to inner side and lock up before folding the stroller. Improper position may cause stroller becoming imbalanced after folded.**
- **Do not put things that are too sharp or too large into the basket since it may cause damage to the basket.**
- **Please regularly clean and check the stroller. Only use neutral detergent to clean the stroller body.**
- **Make sure no oil or lubricant is left on parts such as front gurad or armrest where baby may have chance to lick.**

EN

## LIST OF COMPONENTS

1.Handle	16.Back ventilation window	29.Crotch belt cover
2.Adjustable button	17.ASTM foot cover(Only for packages that comply with ASTM safety standard)	30.Crotch buckle
3.Front guard buttons		31.Shoulder and waist belt buckle
4.Front guard	18.Safety lock	32.Head support
5.Front guard cover	19.Folding lever	33.EggShock pad
6.Basket	20.Top window	34.Body & Hip support
7.Foot rest	21.Top window cover	35.Handle lock
8.Swivel wheel lock	22.Ventilation window	36.Open/Fold lock
9.Seat cushion	23.Shoulder belt	37.Rear leg latches
10.Headrest	24.Shoulder belt insert outlet	38.Rear stay
11.Armrest	25.Head support insert outlet	39.Carrying grip
12.Stopper	26.Waist belt insert outlet	40.Footmuff (An option part, not available in all markets.)
13.Canopy snap	27.Waist belt	
14.Seat reclining buckle	28.Crotch belt	
15.Reclining cord		

## INSTRUCTIONS

### Unfolding/Opening (Figure 1.1)

The handle grip is returned to the straight position while pressing both adjustable button.

※ Handle grip is folded in sales package.

- ① Slide the safety lock as demonstrated direction and hold it in place.
- ② Grip and pull the folding lever upwards simultaneously.
- ③ Slightly lift the stroller and open it.

### Using the swivel wheels (Figure 1.2)

- ① To use the swivel wheels - Lift the swivel wheel locks (left and right) to release. (according to the moving direction).
- ② Swivel wheels not in use - Press down the swivel wheel locks (the ones at the same direction of the user) to lock.

**WARNING:** When you switched the normal use of handle, please make sure to raise the swivel wheel locks to release the locks. If you do not release the locks, there is a possibility that the wheels are not automatically switched.

When reversing the handle, please release swivel locks (total 4 places)

When the wheels are locked in the wrong direction, the stroller may damage to the parts while open.

### Using the stoppers (Figure 1.3)

- a. To lock the wheels, press the stoppers down which are located at wheels on both left and right sides.
- b. Try to push the stroller back and forth slightly to ensure that the stoppers are properly engaged.

**NOTE:** Check the stoppers are fully engaged by gently attempting to push the stroller.

**WARNING:** Always engage the stoppers when you leave the stroller.

### Release the stoppers (Figure 1.4)

- ① Lift the stoppers to unlock.

### Open the front guard (Figure 1.5)

- ① Press and hold the button at the end of the front guard as illustrated.
- ② Detach the front guard.

### Attach the front guard (Figure 1.6)

To attach front guard, lift and plug into the projected part at the end of the armrest.



### Detaching the front guard cover (Figure 1.7)

- ❶ Press and hold on the front guard buttons and release the front guard.
- ❷ Detach the front guard cover from the front guard.

### To fold the sun canopy (Figure 2.1)

Fold the canopy from backward by both hands as illustrated.

### To unfold the sun canopy (Figure 2.2)

Hold the canopy shelf with two hands and open it forward. Until it locks with a “click” sound.

The baby carriage can be directly folded if the canopy is in place. Be sure to fold the canopy and pack to the rear side. Please read (figure 3.5) for canopy installation.

Opening the canopy without following the appropriate procedures may lead the canopy to be out of shape.

### How to use the top window (Figure 2.3)

- ❶ Open the window cover to see the baby. The window covers are set at three positions around the canopy.
- ❷ Unlock the buckles of window covers.
- ❸ Insert the buckles of different window covers.

### How to use under rain (Figure 2.4)

The canopy has the same waterproof level and fabrics as the umbrella which can prevent the parts under the canopy from the short period of rain.

1. Totally open up the canopy.
2. Close the top window (2 points) and airtthrough window and lock the buckles.

Please refer to the part “ How to use the top window ”. (Figure 2.3)

※ Top window and airtthrough window.

The rain may enter into any leakage of top window and airtthrough window.

※ In case of long-time rain or heavy rain, please use the rain cover.

### If the canopy gets wet.

Please extend the canopy and put into the well-ventilated place.

If the canopy gets wet thoroughly, please dry the canopy with towel before natural dry.

※ If the wet canopy is left unattended, there may occur the water stain or color change.

### Safety Harness (Figure 2.5)

- a. Shoulder and waist belt buckles are overlapped and secured into crotch buckle.
- b. Press the crotch buckle button to release the harness.

**NOTE: When changing the seat recline angle, always check the harness to ensure it is still optimally adjusted.**

## WARNING:

**Avoid serious injury from falling or sliding out. Always use seat belt.**

### Adjusting the waist belt (Figure 2.6)

Pull the belt in the direction as illustrated to adjust its length.

**NOTE: Always leave at least 3cm at the belt end.**

**NOTE: To release harness, go in the steps reverse.**

**The steps of adjusting shoulder and waist belts are the same.**

## Install and adjust the crotch belt (Figure 2.7)

- ❶ Attach shoulder belts to the shoulder belt hook of the left and right insert plastics.
- ❷ Pull out the crotch belt and put the insert plastics into the buckle until a “Click” sound is heard.
- ❸ Tightening-As figure ㉞ Pull out the crotch belt belt the inside a layer PP belt for pull to the end, is the shortest state.  
Extending-As figure ㉟ According to the direction of arrow pull out the crotch belt to end PP belt the end, then as figure ㊸ Direction of arrow pull to the end.  
Pull the crotch belt end pull the shoulder belts and waist belts to check if it is secured.

**NOTE:** Always use the crotch belt together with the waist belt and shoulder belt and make sure they are properly adjusted.

## Attaching the crotch belt cover (Figure 2.8)

Pull the crotch belt through crotch belt cover, pull out the buckle button.

## Adjusting the backrest reclining (Figure 3.1)

- ❶ Support the backrest with one hand before reclining the backrest.
- ❷ The headrest will be lifted automatically after the backrest is reclined. (movable headguard)

## Upright Reclining (Figure 3.2)

Pull the reclining cords as illustrated to raise the seat back.

**NOTE:** Raising the backrest may be difficult while a child is leaning on the backrest.

## Reversing handle (Figure 3.3)

Lift and release the handle locks to change the handle direction until the locks are secured in places.

## Detaching the sun canopy (Figure 3.4)

When uninstalling the canopy, press the joint claw of canopy roof and pull out from the stand of canopy.

## Folding the sun canopy (Figure 3.5)

- ❶ Switch the handle to face rear. Refer to this page “Reversing the handle”.
- ❷ Recline the backrest to the lowest angle. Refer to this page “Adjusting the backrest”.
- ❸ Fold the canopy.
- ❹ Fully insert the canopy joint into the canopy stand.
- ❺ Elect the backrest and fix the canopy buckle (1 place).

## Folding the stroller (Figure 3.6)

- ❶ Slide to release the safety lock of direction as illustrated.
- ❷ Grip the folding lever and slightly lift up the handle, then press down the handle as illustration to fold the stroller.

## Adjusting the handle position (Figure 3.7)

- ❶ Adjust the angle of handle grip by pressing both adjustable buttons.
  - ❷ Release the adjustable button after selecting the appropriate angle.
- ※ Make sure handle grip is engaged completely after changing the angle.

**WARNING:** When opening and closing the stroller, please ensure your child and other children are kept at a safe distance. Please ensure that they are not in contact with any mounting parts. Remove all items from the basket before folding the stroller.

## Basket (Figure 4.1)

- ① Roll two fastening installation belts ① and ② in front of the basket into the stand and lock with U-shape buckle in front of the installation belts.
- ② Roll two fastening installation belts ③ and ④ in middle of the basket into the installation shelf of basket under the carriage on the rear side and lock with U-shape buckle.
- ③ Lead two fastening installation belts ⑤ and ⑥ behind the basket through the installation belt holes on the left and right sides of the rear-wheel stand and fix them. Roll the nylon buckle ⑦ in the middle of the rear side of basket into to the middle position of rear-wheel stand and fix it. Pull the U-shape buckle, fastening installation belt and nylon buckle to make sure whether they are fixed.

## Removing the seat cushion (Figure 4.2-4.4)

- ① Press the crotch buckle release button and release the harnesses. Remove the crotch belt cover from crotch belt.
- ② Release the snaps (2 places) on the inner side of the seat cushion.
- ③ Release the crotch belt from the seat cushion.
- ④ Release the left and right snaps which are secured to the backrest . (2 places)
- ⑤ Remove the safety belt buckles (2 places) fixed on the back tube above the carriage bottom.
- ⑥ Release the snaps of the side tube. (4 places)
- ⑦ Remove waist belt and shoulder belt and then remove seat cushion from base seat.

**NOTE: To install seat, go in the steps reverse.**

**WARNING:** Make sure the seat cushion has been correctly attached before use.

## Adjust shoulder harnesses height (Figure 4.5)

- ① Pull out shoulder harnesses from seat cushion and base seat.
- ② Set the correct slots of shoulder harnesses through on the base seat.
- ③ Set correctly the harness shoulder heights and pull it out through relevant slots of seat cushion.

**NOTE: The lowest shoulder harness insert outlet should be used for children under 6 months.**

## How to use the carrying grip (Figure 4.6)

 
Carrying grip is used for carrying the folded stroller.

Grab the carrying grip on the seat frame, and put the handle under the arm as illustrated.

## Installing the dacco cushion (Figure 5.1)

Correct position of head support - The cushion pad of the head support should just touch at the child's neck.

Support cushion installation reference

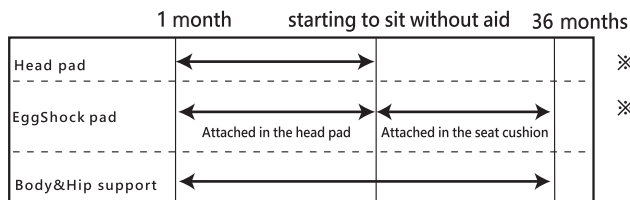

※1 Put EggShock pad into pocket on seat cushion to use.

※2 Age is for reference only, please apply according to child's body size.

### Installing the head support (Figure 5.2)

Loop the head support belt through the head support hole, the belt is tipped opposite through the hole to attach. After it is installed, check if it is well secured to the seat cushion or not by slightly pulling.

Reference for head support insertion outlets (A) (B)

(A) for child from around 1 month to 4 months (B) for child from around 4 months to 7 months.

### Installing Body & Hip support (Figure 5.3)

a. Using the supporting belts (upper position) of the Body & Hip support to pass thru the holes of the seat cushion body support location. To fix the supporting belts by opening the tail at the end.

b. Using the supporting belts (upper position) of the Body & Hip support to pass thru the holes of the seat cushion hip support location. To fix the supporting belts by opening the tail at the end.

c. The both sides of waist belts pass thru the upper holes of the Body & Hip support  
The crotch belt pass thru the lower belt hole of the Body & Hip support.

**Warning: Please STOP using the body and hip support which does not fit the child's body even if it is less than 3 years old. To detach, please kindly follow the reverse steps.**

### To use with EggShock pad (Figure 5.4)

Store inside head support head support.

The EggShock pad can be inserted into the head support of Dacco Seat to protect child from the vibrations from the ground when strolling. Insert the EggShock pad from the rear packet of the head support.

Store inside seat cushion to use. Insert the Eggshock pad from the rear packet of the seat cushion.

### Installing the ASTM foot-cover (Figure 6.1)

1. Press and hold the button at the left end of the front guard, put a band and foot cover onto the front guard as illustration.

2. Tie up another band to the projected part, plug the front guard into the projected part at the end of the armrest.

3. To attach front guard and fasten the holding strings to the rear leg tubes to complete the installation.

### Attaching and detaching footmuff (Figure 6.2)

Footmuff is for keeping warm that can be attached to the stroller to protect from the abdomen to the leg of a child.

Please stop using it when the leg is long enough to touch the end of the footmuff.

Please do NOT use the footmuff when the backrest is in the flat position. The ASTM footcover can only be used in this situation.

❶ Release the fastening tape on the belt and remove the belt toward the rear end.

❷ Place the footmuff on the seat cushion and unzip it. Pull the insert plastic (waist belt) and crotch belt buckle out through the belt loophole.

❸ Pull the attachment belt through the waist belt insertion outlets on the seat cushion and that secure the velcro at the inner side of the attachment belt storage pocket.

※ This footmuff is an option part, subject to the market availability.

## Hints for maintenance

- Never apply force on any mechanism or moving parts.
- To prevent mildew forming, do not store this product in a wet or humid environment.
- Protect the product from rain, snow and prolonged exposure to sunlight.
- Clean the plastic and metal parts with a wet cloth. For stubborn stains, use a diluted mild detergent.
- You may lubricate moving parts if the operation or movement of the stroller is not smooth. Do not apply excessive lubricant as it may stain with dust which may cause malfunction. Please do not apply any lubricating oil on handle lock (open/fold lock), safety belt buckle, front guard plug, safety lock, folding lever and swiveling lock that will cause malfunction.

## Cleaning and maintaining fabrics

- ✘ Be careful not to injure the plastics on canopy and the snaps from basket.
- ✘ Due to the characteristic of the product, the color may fade after numbers of washing.
- ✘ It is recommended to wash with neutral detergent which does not contain fluorescent brightener, bleach etc.
- ✘ Always keep clean due to the condition of storage, the mildew may be generated.
- Washing of the Body & Hip support, the shoulder belt, the waist belt .
  - Hand wash in warm water or machine-wash gently .
  - When using the washing machine, put the laundries into the washing net before washing. Otherwise a fray and damage may cause.
  - Detach the seat cushion and wash according to the washing instructions.
  - It is recommended to wash and spin separately with other clothes.
  - Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
  - Do not use drying machine or dry cleaning.
- Washing of the canopy, crotch belt and the basket
  - Do not soak into the water. Use sponge or brush wipe off the dirt with warm water.
  - After wipe off the dirt by detergent, use a cloth to wipe off the excess water and detergent.
  - Dry in shade area after wipe off water by dried cloth.

## Supplier:

**Combi Hong Kong Limited**

**Rm 1003, HK Pacific Centre, 28 Hankow Road,  
Tsimshatsui, Kowloon, Hong Kong**

# 使用前請詳細閱讀本說明書並妥善保存作日後參考之用

## 警告 (錯誤操作可能引致重大傷害或死亡)

不按照本使用說明書指引使用手推車，可能對幼兒造成重大傷害。

幼兒的安全是您的責任。

本產品適用於一個月初生兒至15kg的幼兒。(大約三歲)的幼兒

- 使用手推車前請確保所有的鎖定裝置都已處於鎖定狀態。
- 停止手推車時，請使用停車鎖。
- 不論有否承載嬰兒，停車時勿過分信賴停車裝置的性能。
- 即使已使用停車鎖，如載有嬰兒，應隨時留意手推車附近，以防任何危險發生。此外，停車鎖應左右兩方同時使用，以免意外滑動或翻倒。
- 切勿將小配件放近幼兒，以免幼兒吞下而造成窒息的危險。
- 為了防止幼兒窒息的危險，在拆開包裝後，請將膠袋之類的包裝物料丟棄。
- 本產品不適用於奔跑或滑行之時使用。
- 過分超載，錯誤折疊以及使用未經認可的配件會對手推車造成損壞。
- 為避免意外，幼兒應在任何時刻佩帶安全帶。
- 乘載幼兒時必須系上安全帶，安全帶包含中央帶，腰帶和肩帶。前護欄不能防止幼兒從座墊上站起來。請確認安全帶沒有鬆脫，以免幼兒突然跌出手推車。
- 為防止幼兒突如其來的動作令其跌出手推車，即使已經扣上安全帶，也請經常留意幼兒，小心使用。
- 肩帶扣在插扣片上時，請勿交叉肩帶，以免肩帶對幼兒頸部造成壓迫。
- 請勿使用磨損或破的座墊，以免座墊不能發揮其應有功能，或令幼兒誤吞內裏的棉花等。
- 切勿讓嬰幼兒乘坐未安裝座墊的手推車，幼兒的手腳可能被車架夾到。
- 當兒童乘坐時，看護人不要離開。
- 使用前務必確認開關鎖已鎖上，手推車已完全展開，否則手推車會有突然折起的危險。
- 切勿手執前護欄等地方搬動手推車，以免手推車意外滑脫，或令前護欄鬆脫，引致手推車掉下。
- 不要讓幼兒操作前護欄以免其意外跌倒。
- 切勿讓幼兒單獨坐在車上。
- 不可讓幼兒站立在車上，這是十分危險的。
- 切勿把身體靠於或把重物掛於把手上。在把手上放置任何附載重量都會影響手推車的穩定性。
- 切勿懸掛物件（康貝原廠的配件除外）於車篷或把手上，以免引致手推車翻倒。
- 切勿承載超過一名幼兒，或讓幼兒坐在座椅以外的地方。
- 承載超重會容易產生不穩定的危險情況，最大體重:15kg，置物籃最大承載重量：10kg。
- 禁止於樓梯間使用手推車。
- 不要讓幼兒操作手推車，以免手推車翻倒或發生其他意外。
- 開關手推車或調節座席時要注意四周旁人及小孩，以免夾傷指頭。

## 使用前請詳細閱讀本說明書並妥善保存作日後參考之用

### 警告 (錯誤操作可能引致重大傷害或死亡)

- 開關或調節手推車時，請勿讓幼兒的手接觸活動零件部分。
- 對還未能坐直的幼兒，切勿使用座椅模式，請調節成臥床模式使用（最平躺的角度）。
- 推動手推車時請勿奔跑，應慢慢步行，以免轉向輪損壞，或引致翻倒等意外。
- 打開手推車時不要讓他人接觸，以免意外夾傷。
- 轉換把手方向時，請小心確認幼兒手足沒有放在側扶手上，以免夾傷。
- 請勿一邊推動手推車，一邊轉換把手方向，以免引致危險。
- 在座席使用的肩帶穿孔和座墊的肩帶穿孔位置要一致。如使用座席的上方肩帶穿孔，座墊亦同樣要使用上方肩帶穿孔，不然肩帶有可能因長度不足系緊幼兒。
- 一邊推行一邊調整座席角度是非常危險的，請勿同時進行。
- 當靠背調于平躺時，請勿使用腳套，只可以用ASTM腳套。
- 孩子可能會滑落並導致窒息。當平躺時，請使用ASTM腳套。

警告：不應在無人照顧下把嬰兒獨放在嬰兒車內，以免發生危險。

警告：使用嬰兒車前，請確保嬰兒車之所有安全鎖掣已鎖上。

警告：當嬰兒坐在嬰兒車上時，請務必使用安全帶。

警告：當靠背角度少于150度時，不適合6個月以下幼兒使用。

警告：任何物件負重於嬰兒車把手會影響嬰兒車的穩定性。

警告：請必須隨時將五點式安全帶扣上以確保寶寶乘車時的安全。

警告：使用前，請先檢查嬰兒車與所有部件已正確安裝。

警告：此產品不宜同時與跑步或溜冰時使用。

## ⚠ 注意 (錯誤操作可能引致受傷或元件損壞)

- 安裝座墊時,請確保所有鈕扣等已經裝好,以免引致意外或造成損壞。
- 在已承載幼兒的狀態下調整座席角度時,請先將肩帶調鬆,然後以另外一隻手支持著靠背調節,請注意勿讓座席角度突然改變。
- 調整座席角度後,請重新調整安全帶至適當長度。
- 除開折手推車外,請勿觸碰開關掣。
- 當操作開關時,請注意及避免可裝拆的座墊、手推車的安全帶、被子,及玩具夾在手推車車體上。
- 當越過不同段差時,若強行附加力量於前車輪上使之與段差碰撞,可能引起手推車損壞和故障,(轉換把手方向使用手推車也是同樣如此)。當越過段差時,即使是微小段差區的地方應以減緩推行,並踏上腳踏及往後按下把手往前行,確保前車輪越過段差才可通行。
- 當幼兒乘坐時,請勿在電梯上使用或搬動手推車。
- 使用者必須對本產品作定期保養。
- 每次使用前請檢查配件是否在運輸過程中被損壞。
- 請勿將手推車作承載幼兒以外的用途,否則會引致損壞。
- 請勿用力拉動、扭動、壓下前護欄,以免引致損壞。
- 假如放低椅背使用時座位太窄,可以將靠背調高一點使用。但注意幼兒應已差不多能獨自坐直,才可這樣使用。
- 請勿讓成年人坐上手推車,或在上面放置重物,以免損壞手推車。
- 夏天使用時,戶外的天氣和路面情況會令手推車溫度提高,應避免連續長時間使用。
- 避免將手推車存放於高溫,接近熱源的地方或車廂內,因高溫可使手推車變形。
- 請定期檢查所有螺絲是否上緊。
- 轉向輪鎖杆應該鎖定於推行者的一方。
- 固定在不正確位置的方向輪鎖杆會令推行更困難,或可能引起手推車故障。
- 有關火車上的使用:本產品並非以火車上的使用為目的所設計的產品。假如閣下自行決定於火車上使用,請小心注意,並使用停車裝置,以免轉彎或剎車時令手推車翻倒。
- 請勿在提起手推車的狀態下按下開關掣,以免引致組件損壞。
- 按開關掣前請先解除安全鎖。錯誤操作可能損壞零件。
- 收起手推車前請先確認置物籃內的物品已取出。
- 收折前請先確認車篷已經完全收起,以免引致組件損壞。
- 開關手推車時,切勿操作把手鎖,以免造成手推車損壞。
- 收起手推車時,請避免橫放,或於上面置放重物,以免車篷變形。
- 請勿手執開放的護欄來拖動手推車。
- 請勿把手推車放近火源。
- 即使已經鎖上停車鎖,手推車也有可能意外滑動或翻倒。
- 即使幼兒不在車上,也不可將手推車隨意放在路旁或斜坡等危險地方。



## 注意 (錯誤操作可能引致受傷或元件損壞)

- 不可於斜坡、階梯、自動扶梯、顛簸坡道、沙灘、泥地等場所使用手推車。
- 推車時請小心路上凹陷之地方，以免前輪意外陷進溝內令手推車翻倒。
- 如手推車出現損壞或操作問題，應立即停止使用，並與客服中心聯繫。
- 如發現損壞，請勿使用本產品並將其存放在遠離幼童的地方。
- 請勿將本產品放近樓梯或階梯上。
- 只可在乾燥的平地上使用。請勿使用非原廠供應的零件替換或自行改裝手推車。
- 如發現手推車損壞，請聯絡分銷商。
- 假如幼兒頭部碰到護頭板時，請勿使用躺臥角度。
- 請勿於雪地和強風時或濕滑路面上使用，以免令手推車或監護者意外翻倒。
- 請勿於打雷時使用手推車，以免意外遭受雷擊。
- 請勿隨意改造或拆卸手推車。
- 請勿外加任何以輪板或元件於主體上承載幼兒，以免對手推車造成損壞。
- 請勿於公共汽車上使用手推車。
- 跨越火車軌和汽車道的十字道口等時，請提高前輪跨越間隙，以免前輪意外卡在溝內。
- 禁止連續長時間使用：連續長時間使用會對幼兒造成負擔。躺臥姿勢的連續使用時間上限為2小時，坐著姿勢的則為1小時。
- 感覺有異物卡住時，請勿強行折疊，以免造成損壞。應先打開手推車，確認後再操作。
- 收折前請將轉向輪翻往內側然後鎖定。如果不將轉向輪鎖定在內側位置，收折後手推車將較易翻倒。
- 請勿承載太尖或太大的東西。
- 請定期清潔以及檢查手推車。請僅使用中性的清潔劑清潔車架。
- 請注意勿讓油分附在幼兒有機會舔到的地方，如前護欄，扶手等。

## 部件名稱

- |           |  |                |
|-----------|--|----------------|
| 1. 把手     | 15. 角度調節帶  | 26. 腰帶孔        |
| 2. 調節掣    | 16. 背面透氣窗  | 27. 腰帶         |
| 3. 護欄鬆脫掣  | 17. ASTM 腳套 ( 僅符合<br>美國 ASTM 安全基準<br>的市場販賣品配備。<br>台灣無搭載此配備 ) | 28. 中央帶        |
| 4. 前護欄    | 18. 安全鎖  | 29. 中央帶套       |
| 5. 護欄套    | 19. 開關掣  | 30. 中央帶釦       |
| 6. 置物籃    | 20. 遮陽蓬天窗  | 31. 肩腰帶釦       |
| 7. 腳踏     | 21. 天窗蓋  | 32. 護頭墊        |
| 8. 轉向輪鎖   | 22. 透氣窗  | 33. EggShock 墊 |
| 9. 護頭板    | 23. 肩帶   | 34. 護背連臀墊      |
| 10. 座墊    | 24. 肩帶穿孔   | 35. 把手鎖        |
| 11. 扶手    | 25. 護頭墊穿孔  | 36. 開關鎖        |
| 12. 停車鎖   |  | 37. 後腳管活動鎖     |
| 13. 遮陽蓬按鈕 |  | 38. 後腳支桿       |
| 14. 角度調節釦 |  | 39. 輕便提帶       |
|           |  | 40. 腳套 ( 選配 )  |

## 使用方法

### 打開手推車 ( 圖1.1 )

一邊按下左右推把高度調節按鈕，一邊轉動推把桿回到直桿狀態。  
※包裝時，推把呈折疊狀態。

- ① 將把手上的安全鎖向箭頭方向滑動並握住。
- ② 同時握著並提起開關掣。
- ③ 稍稍提起並打開手推車。

### 使用轉向輪 ( 圖1.2 )

- ① 使用轉向功能時，向上推起轉向輪鎖 ( 左右 ) 以解除。
- ② 不使用轉向功能時，請按下和推行者同一方向的2處轉向輪鎖以鎖定。

**警告：** 轉換把手時，必須解除轉向輪鎖。車輪被錯誤的方向鎖住時，打開手推車可能損壞零件。當您已切換至正常使用或正常把手，請務必將腳輪鎖提起解除腳輪。若不解除鎖定，這可能使腳輪不能自動換轉。

### 使用停車鎖 ( 圖1.3 )

- ① 壓下左右車輪的停車鎖。
- ② 輕輕前後推動推車，確認停車鎖已鎖定。

**警告：** 在遠離手推車時，請時刻謹記使用停車鎖。

### 解開停車鎖 ( 圖1.4 )

將停車鎖往上撥即可解鎖。

### 打開前護欄 ( 圖1.5 )

- ① 如箭頭方向按下前護欄鬆脫掣。
- ② 抽起前護欄。

### 安裝前護欄 ( 圖1.6 )

要鎖上護欄時，請先將護欄提起，照準末端突起部位，然後插入安裝。

**警告：** 請勿手執前護欄搬動手推車。

## 拆除護欄套 (圖1.7)

- ① 按下護欄鬆開按鈕，將護欄拉開。
- ② 從護欄上取下護欄套。

## 使用車篷 (圖2.1)

以較小幅度使用時，將大型車篷往後收摺。(雙手握住中央車篷架子的根部移動)

### (圖2.2)

雙手握住車篷架子，向前打開。

在安裝了車篷的狀態下，也可以直接折疊嬰兒車。折疊時，請務必將車篷折疊後向後側收攏。

關於車篷的安裝方法，請參考(圖3.5)

※打開車篷時，請用雙手握住前車篷架子根部打開直至聽到“咔嚓”聲為止。

使用蠻力打開，可能會使車篷變形。

## 使用天窗 (圖2.3)

- ① 打開窗蓋，就可以看到寶寶。在車篷的前後3個位置設有窗蓋。
- ② 解開各個窗蓋的鈕扣。
- ③ 將各個窗蓋的鈕扣扣到車篷的鈕扣上固定。

## 下雨時的使用方法 (圖2.4)

本產品的車篷使用了與雨傘同等防水級別、耐水級別的面料，短時間降雨時，可以避免被車篷覆蓋部位直接被雨淋濕。

1. 完全打開車篷。

2. 關好天窗(2處)和透氣窗，扣上鈕扣。

請參照上述天窗使用方法。(圖2.3)

※天窗、透氣窗如留有縫隙，則雨水可能會進入車篷內。

※長時間降雨或雨勢較大時，請使用防雨罩。

## 被雨淋濕時

請撐開車篷，置於通風良好處陰乾。

滲入了大量水分時，請使用乾毛巾吸去水分後再晾乾。

※如在淋濕的狀態下放置不管，則可能會導致水漬、變色。

## 使用安全帶 (圖2.5)

- ① 將肩帶卸疊在腰帶卸(左右)上，疊好後插進中央的安全帶卸內。
- ② 按下安全帶卸中央的按鈕解除。

**警告：**為避免意外，幼兒應在任何時刻佩帶安全帶。

**小提示：**當改變靠背角度時，請謹記檢查並確認安全帶已作出最適當的調整。

## 安裝腰帶 (圖2.6)

將腰帶參照圖示的步驟來進行安裝。

**小提示：**注意腰帶末端應留下3cm以上的長度。

**小提示：**若解除請按照相反的步驟操作。

肩帶的調節方法和腰帶的調節方法相同。

## 調節中央帶 (圖2.7)

- ① 將肩帶扣在左右兩方插扣片上的肩帶鉤上。
- ② 拉出中央帶，將左右兩方的插扣片插進中央帶的安全帶扣內，直到聽到[咔嚓]一聲為止。
- ③ 收緊中央帶，如圖Ⓐ拉出中央帶到最末端，為最短狀態。

延長時，如圖Ⓑ箭頭方向拉出中央帶到末端，按照圖Ⓒ箭頭方向拉到底，為最長狀態。

**警告：**為避免意外，幼兒應在任何時刻佩帶安全帶。

**小提示：**當改變靠背角度時，請謹記檢查並確認安全帶已作出最適當的調整。

## 中央帶套的安裝方法 (圖2.8)

將中央帶穿過中央帶套，拉出安全帶扣。

## 調節靠背

### (圖3.1)

- ① 調低座席角度時，先以單手支撐著靠背，將角度調節扣往下拉調低靠背。
- ② 擋頭部自動升起。

### (圖3.2)

將角度調節帶往箭頭方向拉來調高靠背角度。

**小提示：**幼兒靠在靠背時，角度調節會變得困難。

## 手推車換向 (圖3.3)

將左右兩邊的把手鎖拉起解除後轉換把手方向，直至把手鎖重新鎖上為止。

## 拆除車篷 (圖3.4)

拆卸時按住車篷插桿的卡爪，同時從車篷插座中拔出。

## 安裝車篷 (圖3.5)

- ① 將把手置於對面位置，詳見本頁「手推車換向」。
- ② 將靠背調至最低位置，詳見本頁「調節靠背」的內容。
- ③ 折疊車篷。
- ④ 將車篷插桿完全插入車篷插座中固定。
- ⑤ 立起靠背，鎖定車篷卡扣 (1處)。

## 收摺手推車 (圖3.6)

如圖中箭頭方向拉動安全鎖作解除。一邊握住開關掣，一邊提起把手，然後按下把手，推車被折疊起來。

## 推把高度調節方法 (圖3.7)

- ① 一邊按下左右兩邊的推把高度調節按鈕，一邊調節推桿的角度。
  - ② 調節到合適角度時，鬆開推把高度調節按鈕。
- ※ 推把高度調節後，請上下推動推把桿，確認是否有鬆動。

## 警告

：在收摺手推車前，請確保與幼兒保持安全的距離，請勿讓幼兒觸及活動零件。

## 置物籃 (圖4.1)

- ① 將位於籃筐前方的2處。固定帶①、②繞在支架上，然後使用位於固定帶前端的U型扣鎖定。
  - ② 將位於籃筐中間的2處固定帶③、④繞在位於車體下方後側的置物籃安裝架上，然後使用U型扣鎖定。
  - ③ 將籃筐後方的固定帶⑤、⑥穿過後輪支桿左右的安全帶通孔並鎖定。將籃筐後方中間的尼龍搭扣⑦繞在後輪支桿的中間位置並鎖定。
- 最後，通過拉拽確認U型扣、固定帶、尼龍扣環是否已牢靠鎖定。

## 拆除坐墊 (圖4.2-4.4)

- ① 按下安全帶釦解除安全帶，從中央帶上拆下中央帶罩。
- ② 從座墊前端的固定釦帶 (兩處) 上解開固定釦，然後拆下座墊。
- ③ 從座墊上穿出中央帶。
- ④ 解除座墊釦在背板兩側的釦子 (共2處)。
- ⑤ 拆下鎖定在底座上方的靠背管材上的安全帶卡扣 (2處)。
- ⑥ 解除側面管和小座席下部管的釦子 (共4處)。
- ⑦ 將肩帶、腰帶抽出，然後將座墊從底座取出。

**小提示：**若安裝請按照相反的步驟來操作。

## 警告

：使用手推車前務必確認坐墊已正確安裝。

### 調節肩帶高度 (圖4.5)

- ① 先將肩帶從座墊及背板上解除。
- ② 將肩帶穿過背板上正確的肩帶孔。
- ③ 將肩帶穿過座墊上正確對應位置的穿孔，並確認兩邊穿孔在適當的高度。

**小提示：**當幼兒未滿六個月時，請使用最低的肩帶穿孔。

### 如何使用輕便提帶 (圖4.6)

- ① 輕便提帶是用於攜帶收車後的嬰兒車
- ② 從折疊嬰兒車的把手，握著附設在座架上的手提帶子。
- ③ 將把手夾在腋下攜帶使用。

### 懷抱型座墊的安裝方法 (圖5.1)

- ① 護頭墊的安裝位置。護頭墊部分，應該剛剛抵幼兒頸部。
- ② 懷抱型座墊的參考安裝時期。

	1個月	獨自乘坐前期(7個月)	36個月
護頭墊	←————→		
EggShock 墊	←————→ 放在護頭墊中使用		←————→ 放在座墊中使用
護背連臀墊	←————→		

※1 將 EggShock 墊放入座墊上的口袋使用。

※2 月齡只作參考，請依照幼兒體格判斷後使用。

### 護頭墊的安裝方法 (圖5.2)

透過護頭墊穿孔通過頭部支援帶，將支援帶折回繞過穿孔安裝。它被安裝後，輕輕的拉動檢查它是否固定在可移動的座椅。

有關護頭墊穿孔(a)(b)的參考

- ① 大約供1個月至4個月的幼兒使用。
- ② 大約供4個月至7個月的幼兒使用。

### 護背連臀墊的安裝方法 (圖5.3)

- a. 將護背連臀墊護背上的支援帶穿過座椅上的身體支援帶穿孔。  
將支援帶折回繞過穿孔安裝。
- b. 將護背連臀墊護背上的支援帶穿過座椅上的臀部支援帶穿孔。  
將支援帶折回繞過穿孔安裝。
- c. 請用護背連臀墊護背上的穿孔穿上腰帶；用護臀上的穿孔穿上中央帶。

**小提示：**即使幼兒是3歲以下若護背連臀墊不適合幼兒體格，請立即停止使用。  
拆除時，以相反的安裝步驟拆除。

### 使用 EggShock 墊 (圖5.4)

1. 放進護頭墊內使用時，EggShock 墊可以安裝到 Dacco 墊的頭墊內，在頭墊背部的口袋進行安裝，用於保護幼兒頭部免受推行時的震動影響。
2. 放進座墊內使用時，將座墊頭靠背面的專用口袋打開放入 EggShock 墊。

### 使用ASTM腳套 (圖6.1)

1. 手執前護欄末端如圖般按緊左邊的護欄按鈕，將前護欄提起后慢慢將鬆緊帶和腳套穿到前護欄上。
2. 然後將另一方的鬆緊帶固定在突起部份及將前護欄提起，向末端突起部份準確地按下。
3. 固定前護欄後，將兩側的固定帶如圖般穿過兩側的後腳管固定，這樣便完成安裝。

※此ASTM 腳套僅符合美國 ASTM 安全基準的市場販賣品配備。台灣販售版本不含ASTM腳套。

## 腳套的安裝及拆除方法 (圖6.2)

腳套是防寒附件，可以安裝到手推車坐墊上保護幼兒的腹部至足部。

當幼兒雙足長大會在腳套內踢腳套時，請停止使用。

當靠背調于平躺時，請勿使用此腳套，只可以用ASTM腳套。

- ① 解開安裝帶上的粘合貼，把安裝帶從穿孔中往後方拉出。
  - ② 將腳套放在坐墊上，拉開拉鍊，將腰帶扣和中央帶扣從腳套的相應穿孔穿出。
  - ③ 將安裝帶穿過坐墊上的腰帶穿孔，再穿過腳套上的安裝帶穿孔，然後固定在安裝帶收納袋內側的粘合貼上。
- ※ 此腳套是各市場自選品，並非所有市場販賣品均匹配，台灣販售版本不含暖足套。

## 保養方法

- 切勿強行拉動活動零件或裝置。
- 請勿把產品存放在潮濕的地方以免產品發霉。
- 避免把產品長時間暴露於雨水或雪霜之中。
- 請以濕布清潔金屬及塑膠部分。如遇頑固污垢，可使用稀釋的清潔劑。
- 若感到手推車操作或運行不順暢時，可以添加適量的潤滑劑。注意不要添加過多的潤滑劑，否則反而會容易沾上塵埃，引起操作異常。
- 注意某些部位不可以加潤滑劑，如把手操作部、座席安全帶扣、前扶手的安裝部、開閉鎖周圍、轉向輪回轉部，否則可能引起動作不良。

## 清洗縫製品洗滌指引

※ 請注意不要損壞遮陽篷的塑膠部分或籃子的U字鉤子等。

※ 根據產品的特性，會有輕微的褪色。

※ 洗滌的時候建議使用中性的洗滌劑。使用含螢光劑、漂白劑的清洗可能會引起皮膚乾燥、濕疹等，所以請不要使用這類洗滌劑。

※ 請小心洗滌及保持清潔，同時需確保縫製品保管於通風環境，避免發霉狀況。

### ● 座墊、肩帶、腰帶等縫製類的洗滌方法

- 請以溫水手洗或弱速機洗。
- 使用洗衣機的時候，請將縫製品放入柔洗袋內，避免縫製品損壞。
- 手洗後，請輕輕的擰幹，大力擰幹的話可能會使縫製品留下褶皺。
- 部分縫製品可能會出現掉色，請跟其他物品分開清洗，另外請避免泡洗。
- 輕輕擰幹後，整理好形狀，放於陰涼處晾乾。
- 請勿使用烘乾機、熨斗及乾洗以免縫製品損壞。

### ● 遮陽篷、置物籃、保養方法

- 請不要把遮陽篷、置物籃、中央帶類縫製品泡在液體中。請用擰乾的濕布，或是用海綿沾已稀釋的中性清潔劑清潔。
- 使用中性的清潔劑把污垢擦拭掉後，為了不讓清潔劑殘留在產品上，請用濕布或海綿反覆擦拭。
- 然後用乾布將產品上的水分擦乾後，至於陰涼處陰乾。

產品名稱及型號	: 手推嬰幼兒車 Umbretta 4CAS
製造年份	: 請參考車體把手貼紙
進口商	: 台灣康貝股份有限公司
地址	: 台北市11493內湖路一段360巷6號6樓
電話	: (02)7720-8585
統一編號	: 12946262
製造廠商	: Combi Holdings Limited
地址	: Room 1003, HK Pacific Centre, 28 Hankow Road, Tsimshatsui, Kowloon, Hong Kong.
原始製造國	: 中國
適用年齡	: 一至三十六個月
最大體重	: 15kg 以下
置物籃最大承載重量	: 10kg 以下
主要成份或材質	: 鋁合金、聚酯纖維、聚丙烯
使用方法	: 請依說明書組合使用
注意事項	: 乘坐時務必系好安全帶
緊急處理方法	: 盡速送醫急救

# **Combi Corporation**

116376050