

Combi

Combi Child Car Seat THE S ISOFIX EGGSOCK

User Manual

For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

- Store this user manual in the storage pocket of the base cover.

This product is an ISOFIX child car seat for specific vehicles, and is certified according to the UN R129/03 standard.

- This product can be installed to vehicle seats approved for installation of ISOFIX child car seats.

However, this does not mean that this child car seat can be installed to any vehicle seat equipped with ISOFIX anchors (bars). When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle.

- Applicable child height and weight: Heights up to 105 cm or weights up to 19.0 kg.



CAUTION

To avoid causing stress to the child, avoid continuous long-time usage and give the child a break from the child car seat about once every hour.



DANGER

Do not use forward facing before the child's age exceeds 15 months or before the child's height exceeds 76cm.

Before Use

Using Each Part

Installing to and
Uninstalling from
the Vehicle

Maintenance and
Other

Contents

Before Use

Before Use

Before Use	2
Name of parts	3
Use conditions	7
Applicable vehicle seats	9
Inapplicable vehicle seats	10
For safe use of the child car seat	11

Using Each Part

Using the reclining function	17
Rotating the seat	18
Installing and removing the seat	19
Adjusting the baby shoulder belt position	21
Seating the child	23
Unseating the child	26

Installing to and Uninstalling from the Vehicle

Preparation of installation	27
Installing to the Vehicle	29
Checklist after installation	32
Uninstalling from the vehicle	33

Maintenance and Other

Using the inner cushion	35
Using the canopy	37
Attaching and removing the covers	40
Maintenance method	43
Storage and disposal	44

Before Use

Thank you for purchasing this Combi child car seat. For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

<Use of the second-hand product>





·DO NOT use the product with unknown use history, especially the product with unknown accident history.

·If there are cracks, large scratches, or loose fasteners on the product, do not use it. Strong impacts may be caused due to a collision or drop of the product.

The child car seat is designed to reduce injury to the child in case of traffic accident, etc. However, there is no guarantee that the child car seat can completely protect the child from injury. A child using the child car seat must be accompanied by an adult.

● Labels

The descriptions in this manual use the labels DANGER, WARNING and CAUTION to indicate important items for safe and proper use of the child car seat. These are very important items that indicate the potential consequences if not followed properly, and are categorized according to the level of severity. Always make sure to follow these items.

Label	Label contents
 DANGER	Improper handling will result in imminent risk of death or serious injury.
 WARNING	Improper handling may result in death or serious injury.
 CAUTION	Improper handling may result in injury or damage to property.
 HINT	Useful hints for using the child car seat.

Name of parts


Check that all parts are present before use.

- Store the receipt (proof of purchase) together with this manual.

※ This manual uses simplified illustrations to help users easily understand operation and handling, and there may be slight differences from the actual product.

Package contents

Main body

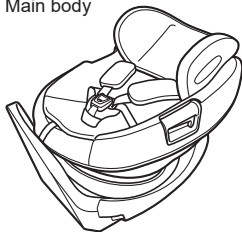

Inner cushion



 
ISOFIX insertion guide




Canopy




Base cover



User manual
(this manual)

 


The terms “main body,” “seat,” “head guard,” “base,” and “supporting leg” refer to the parts shown below.

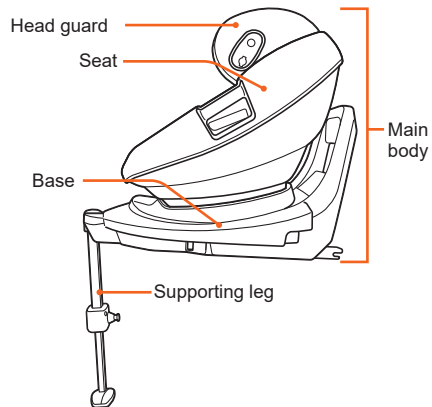

Name of parts

Front

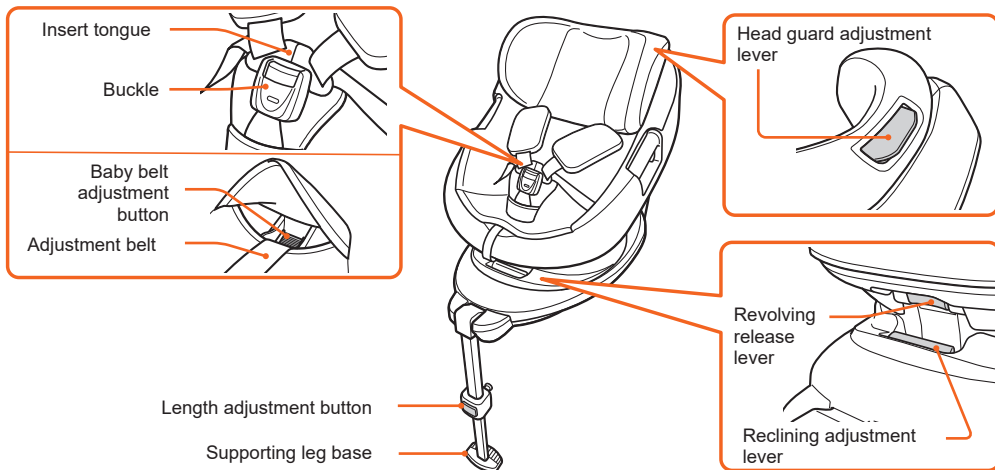

Side

Back

Product name/
Lot No. sticker

Seat release lever

User manual
storage pocket

Base cover

Lock release
button












Connector
release lever


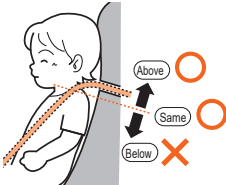
Connector adjustment lever

Connector

Use conditions

This section describes how to determine the installation direction and use the inner cushion according to the child's height.

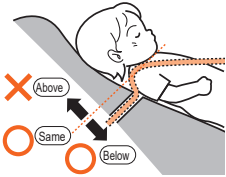Rearward Facing (installation facing rearward relative to driving direction)			
Applicable child height	Use conditions for inner cushion		
Height 40cm → Height 87cm 	<table border="1"> <tr> <td> Height from 40cm to less than 65cm Always use. <div>  WARNING Be sure to attach the inner cushion correctly and make it fit the child's body completely before use. </div>  </td><td> Height from 65cm to 87cm <div>  Do not use. </div> </td></tr> </table>	Height from 40cm to less than 65cm Always use. <div>  WARNING Be sure to attach the inner cushion correctly and make it fit the child's body completely before use. </div> 	Height from 65cm to 87cm <div>  Do not use. </div>
Height from 40cm to less than 65cm Always use. <div>  WARNING Be sure to attach the inner cushion correctly and make it fit the child's body completely before use. </div> 	Height from 65cm to 87cm <div>  Do not use. </div>		
Baby shoulder belt position Adjust the baby shoulder belt so that it is at or below the shoulder height. 			

Forward facing (installation facing forward relative to driving direction)	
Applicable child height	Use conditions for inner cushion
<p>Age 15 months old and height 76cm or more → Height 105cm or less or weight 19.0 kg or less</p>  <div data-bbox="490 681 824 812"> <p>⚠ DANGER</p> <p>Do not use forward facing before the child's age exceeds 15 months or before the child's height exceeds 76cm.</p> </div>	<p>Do not use.</p>
Baby shoulder belt position	
<p>Adjust the baby shoulder belt so that it is at or slightly above the child's shoulder height.</p> 	

Applicable vehicle seats

This child car seat can be installed to vehicle seats approved for installation of ISOFIX child car seats. However, this does not mean that the child car seat can be installed to any vehicle equipped with ISOFIX anchors (bars).

When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to make sure the ISOFIX size classes noted below are supported.


ISOFIX size classes of this product

Child car seat facing	Anchors
Rearward facing	R1, R2, R3
Forward facing	F3

※While using forward facing, it may not be suitable to all vehicles for installation unless the backrest is the most upright.

ISOFIX anchoring system

ISOFIX anchors are metal fixtures (bars) provided between the vehicle backrest and seat in order to install an ISOFIX child car seat. The name and position may differ according to the vehicle, so always check the user manual of the vehicle.

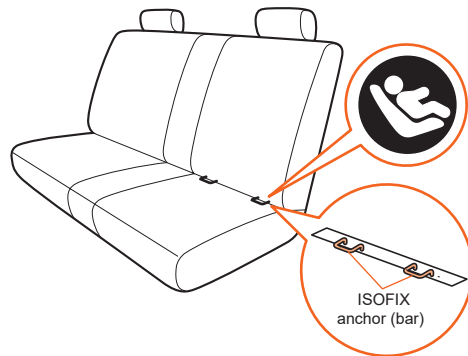

Inapplicable vehicle seats


Do not install the child car seat to a vehicle seat that meets any of the following conditions.

Do not use the child car seat if it cannot be secured firmly to the vehicle seat, even if none of the conditions noted below apply.


- Vehicle seat not equipped with ISOFIX anchors (bars).



- Vehicle seat facing rearwards or sideways relative to the driving direction.

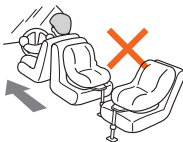

- Vehicle seat where the supporting leg base rests on a vehicle seat slide rail or an underfloor storage space, etc.

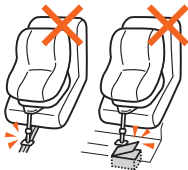

- Vehicle seat equipped with a front airbag.
... Installation is possible to a vehicle seat with only a side airbag.



- Vehicle seat with an extremely uneven surface that prevents stable installation.



- Vehicle seat with a seat surface too high or too low from the floor or with a floor shape that prevents the supporting leg from being installed properly.



For safe use of the child car seat

⚠ DANGER

Improper handling will result in imminent risk of death or serious injury.

- Do not seat a child who does not satisfy the use conditions, or install the child car seat to an inapplicable vehicle seat.



- Do not install the child car seat with the supporting leg retracted. Always extend the supporting leg and adjust to the proper length.



- This product cannot be secured using the vehicle seatbelt.

- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.



- Do not install the child car seat to a vehicle seat equipped with a front airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.



⚠ DANGER


- Do not allow the child to stand, crouch or kneel on the child car seat.



- The vehicle headrest may interfere with the seat of the child car seat and prevent reclining and rotating operation or prevent the seat from locking in place. Remove the vehicle headrest if possible. If the vehicle headrest cannot be removed, install the child car seat to a different vehicle seat.

⚠ Evacuation in case of emergency

In case of accident or other emergency, an accompanying adult should press the buckle button to release the baby belt and evacuate the child from the vehicle immediately.

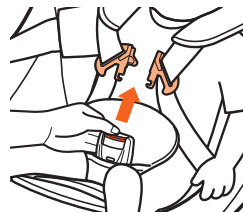

For safe use of the child car seat

⚠ WARNING

Improper handling may result in death or serious injury.

- Always keep the baby belt fitting snugly. A loose belt may become wrapped around the child's neck and result in suffocation.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible.
- Do not leave the child in the vehicle unattended. On sunny days the cabin temperature may rise and pose the risk of dehydration. Other accident may also occur. An adult should always accompany the child.



- Contact Combi's Customer Service Center for repair if the buckle becomes jammed with dirt, food crumbs or other objects and cannot be fastened securely or is too stiff to release easily.
- Do not use the child car seat if the baby belt is damaged in any way. Contact Combi's Customer Service Center for repair.
- Always fasten the adjustment belt to the velcro of the seat cover when using the child car seat. A loose belt may become wrapped around the child's neck and result in suffocation.



**⚠ WARNING**

- Do not modify or improperly repair the child car seat.



- Always secure the child car seat with the connectors even when the child is not seated. Sudden braking or collision may cause an unsecured child car seat to move inside the vehicle and interfere with driving.



- Do not install the child car seat to a vehicle seat where it may obstruct the exit of other passengers from the vehicle in an emergency.



For safe use of the child car seat

⚠ CAUTION

Improper handling may result in injury or damage to property.

- Make sure the child car seat does not get jammed between the vehicle doors or other movable parts.
- Exposing the child car seat to direct sunlight may cause the main body, insert tongue and other parts to become hot and burn the child. Touch each part and check that it is not too hot before seating the child.
- Be especially careful of unsecured items inside the vehicle. Sudden braking or collision may cause unsecured items to strike the child.
- Depending on the shape and surface material (leather, etc.) of the vehicle seat, scratches or marks may remain after installation.



- Using the child seat as a normal chair may cause injuries due to overturn. Do not use the product in ways not mentioned herein.
- Do not use the child car seat with the seat cover and other sewn parts or the urethane and other cushioning removed. Also do not replace these parts with parts not specifically authorized by Combi for this product. (This may negatively affect safety performance in the event of a collision.)
- Users should be especially careful when fastening or adjusting the child car seat to prevent fingernails or artificial nails from becoming jammed in gaps or moving parts.
- Do not operate or adjust the child car seat while driving. Also make sure that other children riding in the vehicle do not touch or play with the child car seat.
- Do not install, remove or carry the safety seat with a child sitting on it.



⚠ Daily inspection


To ensure proper function of the child car seat, check the following items before use.

Check that the baby belt fits snugly against the child's body.

Check that the insert tongue is inserted firmly into the buckle and the insert color indicator has changed to green.

Try to rock the base in all directions to make sure that the child car seat is securely fastened to the vehicle seat.

Adjust the length of the supporting leg so that the supporting leg base rests on the vehicle floor.

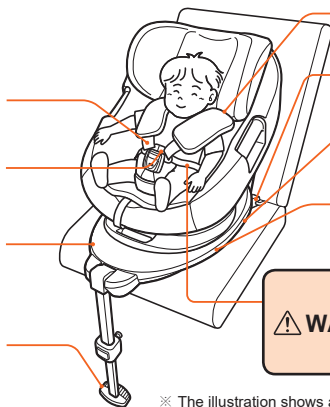

Check that the baby belt is adjusted to the correct position.

Check that the connectors are fastened securely to the ISOFIX anchors of the vehicle.

Check that the connector adjustment lever color indicators show the locked condition ("green" is shown).

Check that the connector release button color indicators show the locked condition ("green" is shown).



WARNING


- Check that the baby belt is not twisted or loose.
- Always pull down the baby waist belt to firmly hold the pelvis position.

※ The illustration shows an example of forward facing installation.

Using the reclining function

The reclining angle can be adjusted in 5 levels according to the condition of the child.


- 1** ① While pulling forward the reclining adjustment lever,
② Adjust the seat reclining angle. (5 levels in both forward and rearward facing mode)

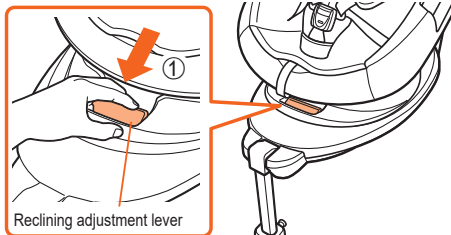

CAUTION

- Keep the child's hands, fingers and other body parts away when reclining the seat. Also take care for the hands of other passengers. Hands, fingers and other body parts may become caught, possibly resulting in injury.
- Take care not to let dirt, food crumbs or other foreign matter enter the gaps between the parts. This may result in malfunction.

- 2** Release the reclining adjustment lever and try to rock the seat forward and back to make sure that it is locked in place.

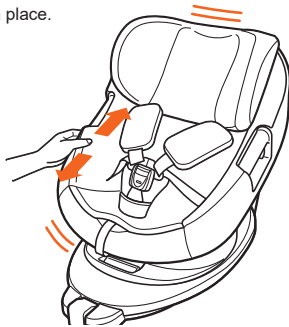


WARNING

After performing reclining operation, make sure that the reclining adjustment lever returns to its original position with a "click" sound and the seat is locked in place. (This may negatively affect safety performance in the event of a collision.)

Rotating the seat

The seat can be rotated for easier seating and unseating of the child.


- 1 ① While pushing up the revolving release lever, rotate the seat.
② Once the seat starts to rotate, you can release the revolving release lever. Rotate the seat until it locks in place with a "click" sound in the forward or rearward facing position.

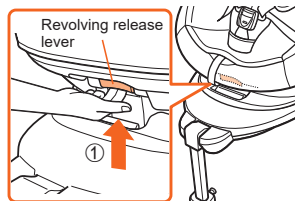

In rearward mode, to avoid difficult operation of the revolving release lever, please adjust the seat reclining angle to the most upright state.




- Do not drive with the seat of the child car seat rotated sideways. The child car seat will not function properly, which is dangerous to the child.
- Do not rotate the seat while driving.

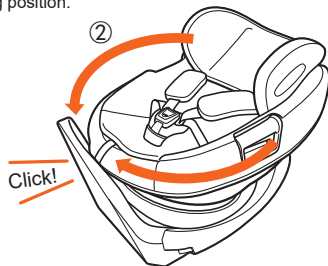

- Keep the child's hands, fingers and other body parts away when rotating the seat. Also take care for the hands of other passengers. Hands, fingers and other body parts may become caught, possibly resulting in injury.
- Take care not to let dirt, food crumbs or other foreign matter enter the gaps between the parts. This may result in malfunction.

- 2 Rock the seat to the left and right to make sure that it is locked in place.

※Due to the structure, the seat may feel slightly shaky and rattle even when it is locked. This is normal and does not affect normal use.

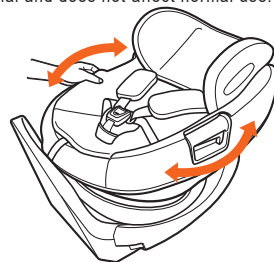


After performing rotating operation, make sure that the revolving release lever returns to its original position with a "Click" sound and the seat is locked in place. (This may negatively affect safety performance in the event of a collision.)

Installing and removing the seat


The seat can be removed for easy installation to the vehicle.

Removing the seat

- 1** ① While pushing up the revolving release lever,
② Rotate the seat so that it face 90° relative to the base. (Refer to "Rotating the seat".)

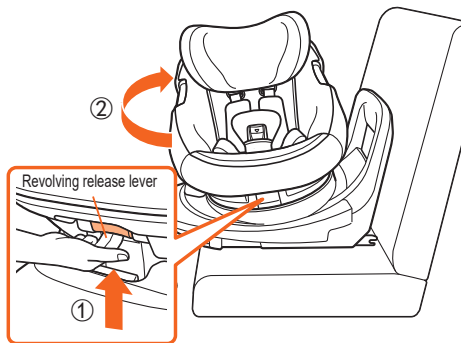


- 2** ① Grip the seat release lever located on the left and right handles,
② Lift up the seat.
※ Both levers must be operated at the same time in order to lift up the seat.

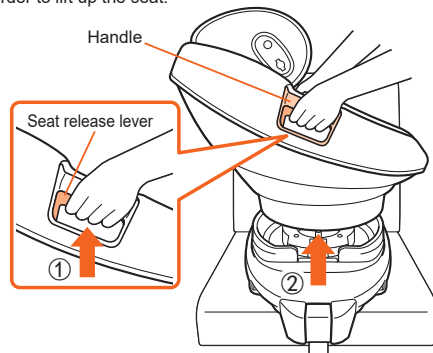


Installing the seat

- 1 ① Hold the seat so that it face 90° relative to the base.
- 2 ② Align the bottom of the seat with the circular shape of the base and place the seat on the base.

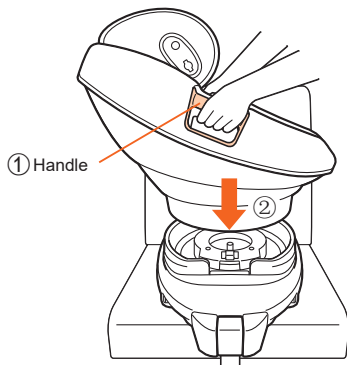

- 2 Rotate the seat until it locks in place with a "click" sound in the forward or rearward facing position.

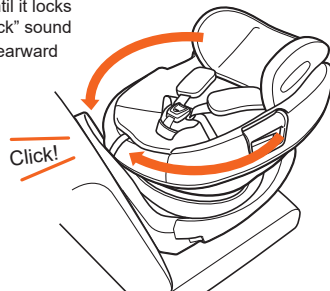

CAUTION

- Keep the child's hands, fingers and other body parts away when installing and uninstalling the seat. Also take care for the hands of other passengers. Hands, fingers and other body parts may become caught, possibly resulting in injury.
- Take care not to let dirt, food crumbs or other foreign matter enter the gaps between the parts. This may result in malfunction.


Adjusting the baby shoulder belt position

Change the baby shoulder belt position according to the child's growth, the baby shoulder belt position can be adjusted in 8 levels.

Baby shoulder belt position reference


● Rearward Facing mode

Adjust the baby shoulder belt so that it is at or slightly below the child's shoulder.

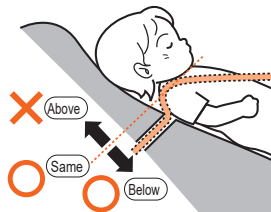


● Forward facing mode


Adjust the baby shoulder belt so that it is at or slightly above the child's shoulder.

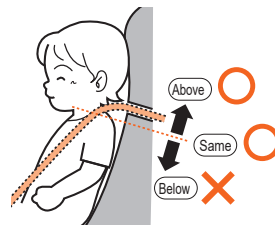

- 1** ① While pressing the back side of the baby belt adjustment button,
- ② Pull both the left and right baby belts forward to loosen the baby belts.
- ※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.

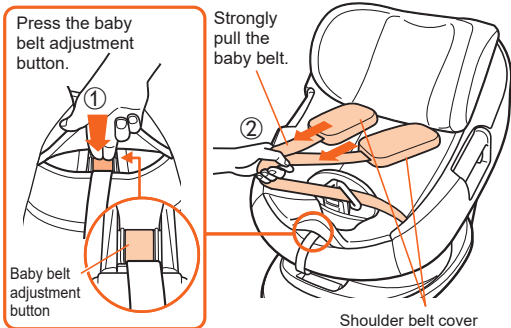

- 2** ① While pulling up the head guard adjustment lever, adjust the height of the head guard.
- ② Release the head guard adjustment lever at the proper position.
- ③ Try to move the head guard up and down to make sure that it is secured.

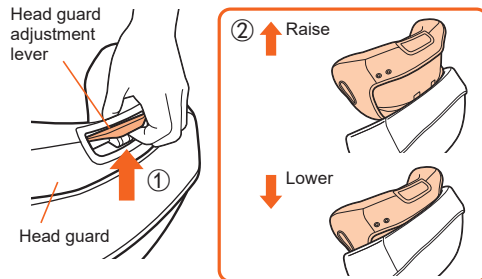


WARNING


- Adjusting the baby shoulder belt position will tighten or loosen the baby belt.
- Do not adjust the baby shoulder belt position once the child is restrained by the baby belt.

Seating the child


- 1 While pushing up the revolving release lever, rotate the seat so that the front faces the vehicle door side to make it easier to seat the child.

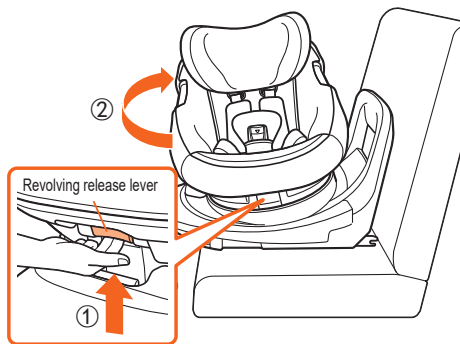

- 2 ① While pressing the back side of the baby belt adjustment button.
- ② Pull both the left and right baby belts forward to loosen the baby belts.
- ※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.

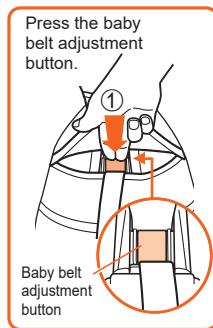

- 3** ① Press the buckle button and remove the insert tongue from the buckle.
- ② Seat the child deeply into the child car seat and pass the child's arms through the left and right baby belts.
- ③ Make sure that the left and right baby belts are not twisted.

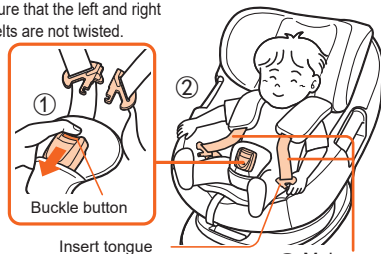


- ② When using the inner cushion, seat the child deeply into the child car seat so that there is no gap with the inner cushion.




- ③ Make sure the left and right baby belts are not twisted.

⚠ WARNING

- The child should take off his/her thick coat before sitting on the safety seat. Otherwise, the child may not be held tightly.
- Do not dress the child in clothes in which the child's legs cannot be separated.
- Do not seat the child wrapped in a towel, etc.
- Do not seat the child incorrectly as illustrated on the right. The child car seat will not function properly, which is dangerous to the child.

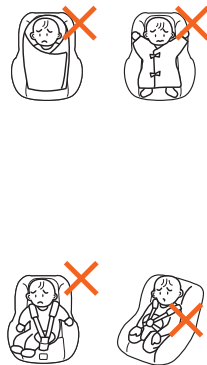

- 4** ① Match the left and right insert tongues and insert them into the buckle until they lock with a "Click" sound.
② Make sure that the buckle color indicator changes to "green".

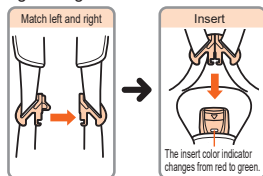

⚠ DANGER


- Make sure that the insert tongue of the child car seat is inserted firmly into the buckle, and the color indicator is green.
- Do not use the child car seat if the indicator does not change to green when the insert tongue is inserted into the buckle.

HINT



- The buckle button is designed to be too stiff for a child to release.
- The left and right insert tongues must be matched properly in order to insert them into the buckle.

- 5** ① Pull down the baby waist belt to firmly hold the pelvis position.
② The baby shoulder belt should always be located in the center of the child's shoulder.
③ Pull the adjustment belt toward you.
④ Adjust the length of the baby belt so that there is an adult palm's space between the child's body and the baby belt.

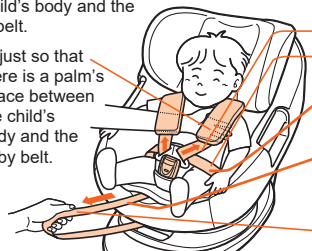

② Baby shoulder belt

① Baby waist belt

Always pull down the baby waist belt to firmly hold the pelvis position.

The adjustment belt should be fastened to the velcro located behind the operation lever cover.

③ Adjustment belt

※ Do not pull the lower side of the adjustment belt.


⚠ WARNING

Always adjust the baby belt to the proper length. If the baby belt is not fit to the child's body, the child may tumble out of the child car seat in the event of a collision or a loose baby belt may wrap around the child's neck and result in suffocation.

- 6** Rotate the seat to the rearward or forward facing position.

Unseating the child

- 1 ① While pressing the back side of the baby belt adjustment button.
- ② Pull both the left and right baby belts forward to loosen the baby belts.
- ※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.
- ③ Press the buckle button and remove the insert tongue from the buckle.
- ④ Unseat the child.

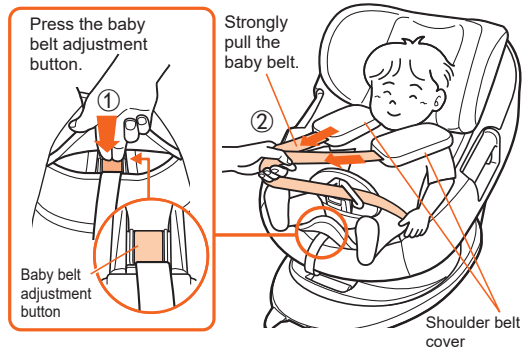


Preparation of installation


⚠ DANGER

- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.
- This product cannot be secured using the vehicle seat belt.
- Do not install the child car seat to a vehicle seat equipped with a front airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.
- Do not install the child car seat with the supporting leg retracted.



- 1 ① Park the vehicle in a flat location where all doors can be opened.

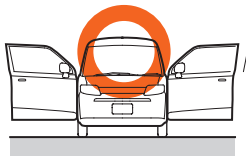


- ② Slide the front seat forward and tilt the backrest to the front to create space for easier installation to the vehicle.

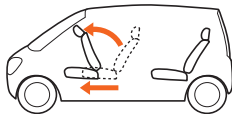

- 2 ① Remove the vehicle headrest if possible.
✖ Store the removed vehicle headrest in the trunk or cargo compartment.
② Recline the vehicle seat backrest slightly if possible.

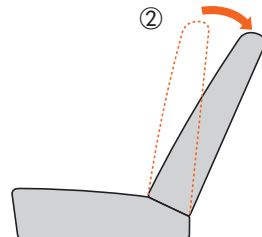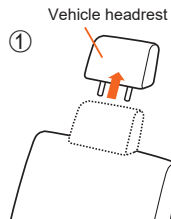

3 Fit the ISOFIX insertion guides onto the ISOFIX anchors.

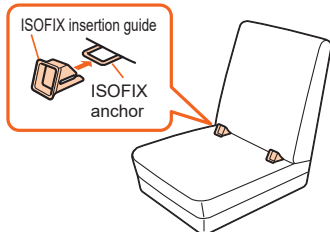

HINT




Use the supplied ISOFIX insertion guides for easier child car seat installation when the ISOFIX anchors are hidden by the vehicle seat and difficult to see. However, note that attaching the ISOFIX insertion guides may increase the gap between the back of the base and the seat backrest for some vehicle seats. In these cases, install the child car seat without using the ISOFIX insertion guides.



HINT




- It is not necessary to remove the seat when installing the child car seat to the vehicle, but installation is easier with the seat removed.
- The method of installing the seat to the car without removing the seat is the same as that of installing the base only. (Please refer to "Installing to the vehicle".)
- The seat can be used in two ways facing forward or rearward, but the installation method is the same in either case.

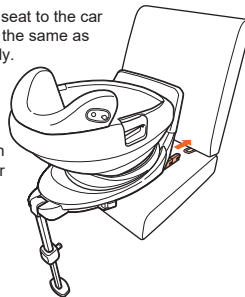

Installing to the vehicle


This product can be used in two ways facing forward or rearward, but the installation method is the same in either case.

- 1
 - ① Remove the seat. (Refer to "Installing and removing the seat.")
 - ② Extend the supporting leg until it stops with a "Click" sound
 - ③ While pushing up the connector adjustment lever on the side of the base,
 - ④ Pull out the connector as far as possible.
- ※ Perform this procedure for both the left and right connectors.

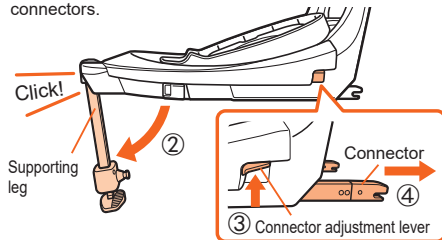


WARNING Be sure to use the base cover.


- 2
 - ① Attach the base cover so that the user manual storage pocket is facing inside.
 - ② Fit the connectors onto the left and right ISOFIX anchors and push until they lock with a "Click" sound.
 - ③ Check that the color indicators show the locked condition ("green" is shown).

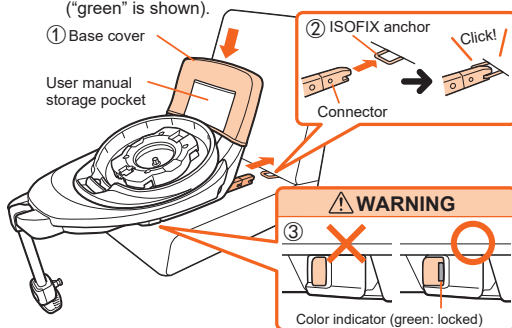

- 3**
- ① While pushing up both the left and right connector adjustment levers.
 - ② Push the base firmly until the back of the base contacts the vehicle seat backrest, then release the base.
 - ③ Check that the color indicators show the locked condition ("green" is shown).

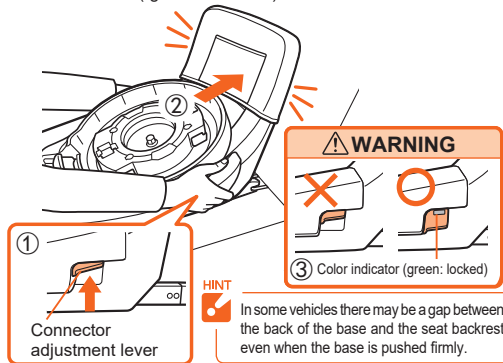


- 4**
- ① While pressing the length adjustment button of the supporting leg.
 - ② Extend the supporting leg until the supporting leg base presses firmly against the vehicle floor.
 - ③ Release the length adjustment button and further extend the supporting leg until it locks with a "Click" sound.
 - ④ Check that the color indicator shows the locked condition ("green" is shown).

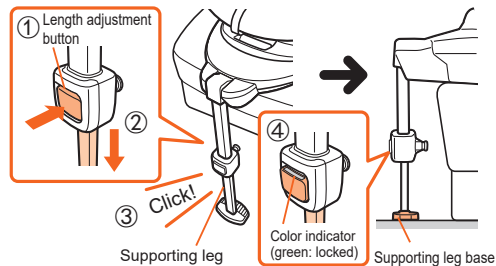


Installing to the Vehicle

- 5** If the vehicle seat backrest can be reclined, adjust the reclining angle to make the gap with the back of the base as small as possible.

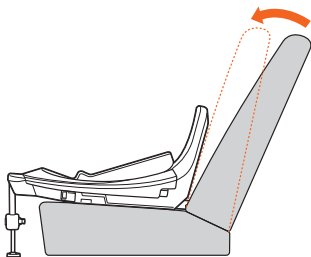

- 6** Install the seat.
(Refer to "Installing and removing the seat.")

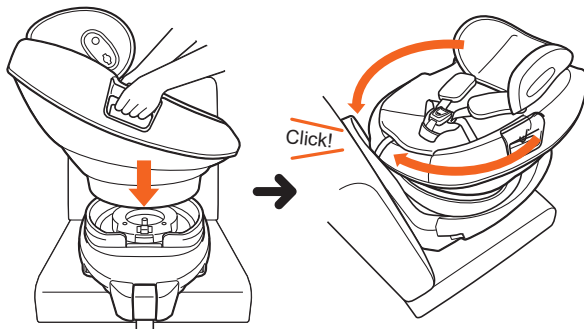


Checklist after installation

After installation, check the following to make sure that the child car seat is installed properly.


- ① Check that the color indicators show the locked condition ("green" is shown).
- ② Check that the length of the supporting leg is adjusted so that the supporting leg base presses firmly against the vehicle floor.
- ③ Hold the base and try to rock the child car seat in all directions to make sure it is installed securely.

If you have any questions, please contact Combi's Customer Service Center.

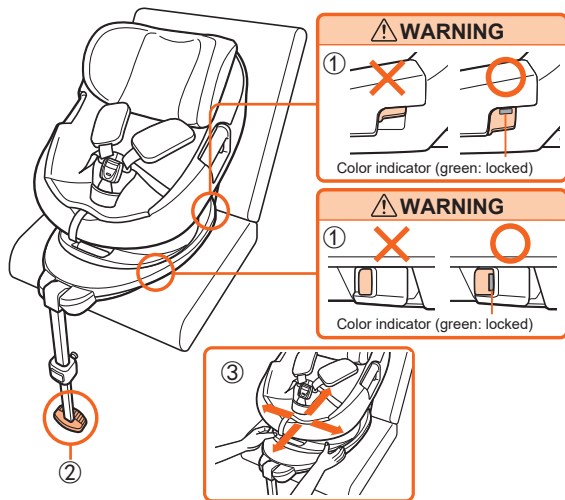


Uninstalling from the vehicle


- 1
 - ① Remove the seat.
(Refer to "Installing and removing the seat".)
 - ② While pressing the length adjustment button of the supporting leg.
 - ③ Shorten the supporting leg.

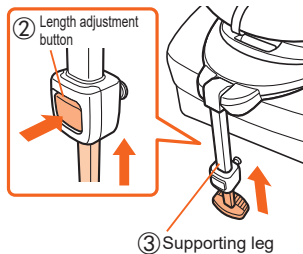


- 2
 - ① While pushing up both the left and right connector adjustment levers.
 - ② Pull the base forward.

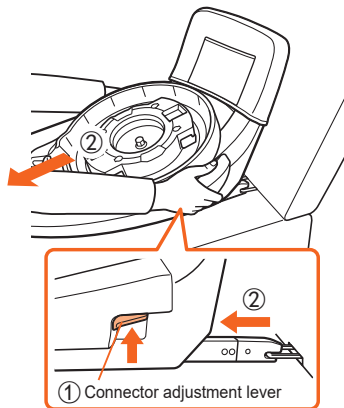

- 3**
- ① While pressing both the left and right connector release buttons,
 - ② Pull the connector release lever straight forward until the connectors release with a "Click" sound.
 - ③ Check that the color indicators show the unlocked condition ("green" is not seen).

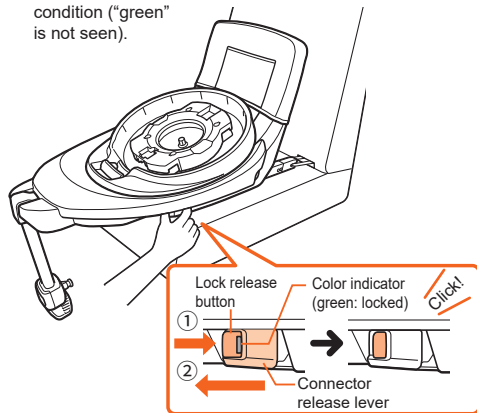

- 4**
- ① While pushing up the connector adjustment levers on the sides of the base,
 - ② Retract the connectors.
 - ③ Fold the supporting leg slowly until it stops with a "Click" sound.

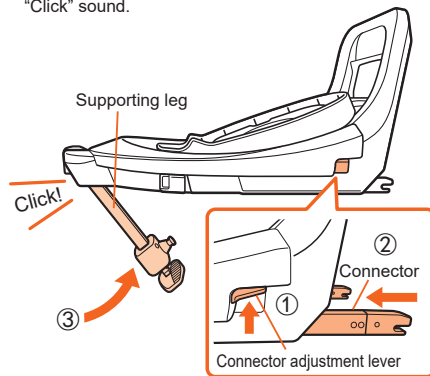


Using the inner cushion

The method of use varies according to the child's height.

Rearward Facing (installation facing rearward relative to driving direction)

Child's height from 40cm to less than 65cm

Always use.

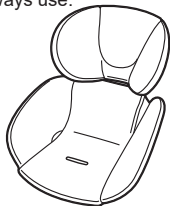

Child's height between 65cm and 87cm

Do not use.



Forward facing (installation facing forward relative to driving direction)

Do not use.



DANGER


Misuse of the inner cushion may affect proper function and endanger the child. Be sure to read the instructions carefully and use the inner cushion properly.

DANGER


Do not leave the removed inner cushion inside the vehicle. The inner cushion may move inside the vehicle and interfere with driving.

Attaching and removing the inner cushion

- ① Lift up the head guard.
Refer to "Adjusting the baby shoulder belt position."
- ② To attach or remove the inner cushion (head part), fasten or unfasten the snaps in two locations on the back of the head guard.


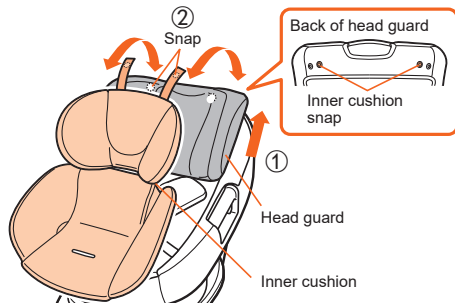



- ③ Press the buckle button and remove the insert tongue from the buckle.
- ④ Pass the buckle through the slot to attach or remove the inner cushion.

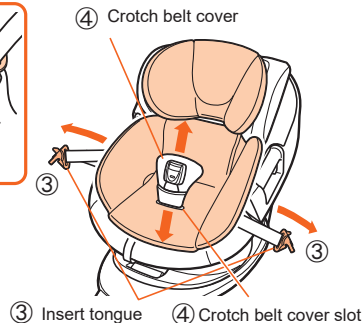

Using the canopy

The method of use varies according to the seat facing.

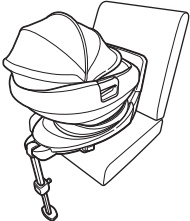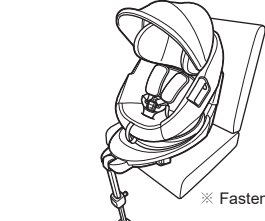Rearward Facing	Forward facing
 <p>The canopy can be fully unfolded.</p> <p>※ The child car seat can also be used with the canopy removed.</p>	 <p>※ Fasten the snap.</p>  <p>※ The child car seat can also be used with the canopy removed.</p>

⚠ WARNING



- If the canopy is misused, it may contact the child in the event of collision or other accident, which is extremely dangerous to the child. Be sure to read the instructions carefully and use the canopy properly.
- In forward facing mode, fold up or remove the canopy.

⚠ CAUTION

- Do not carry the child car seat by the canopy. This may damage the product.
- Do not attach toys, a sunshade or other objects to the canopy. Sudden braking or collision may cause these items to strike the child.

Attaching the canopy


- ① Lift up the head guard. (Refer to “Adjusting the baby shoulder belt position.”)
- ② Fold up the canopy.
- ③ Align the left and right joints A with the shape of the attachment holes A on both sides of the head guard, and insert the joints into the attachment holes.
- ④ While rotating the canopy toward the back around joints A,
- ⑤ Insert the left and right joints B into the attachment holes B on both sides of the head guard until they lock with a “Click” sound.

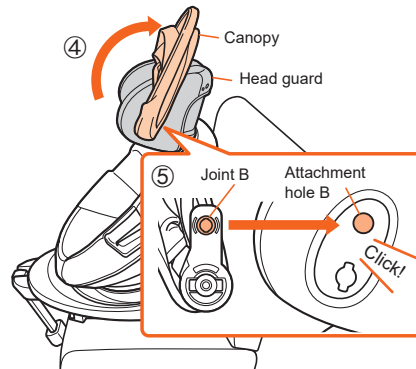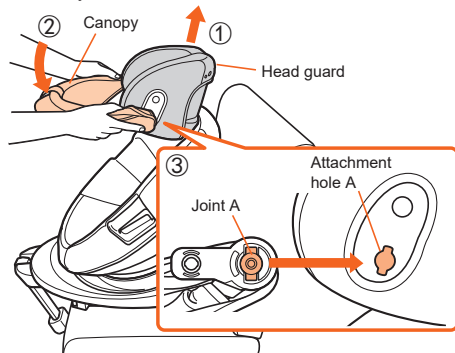

Using the canopy

Attaching the canopy

- ⑥ Fasten the two snaps on the back of the canopy to the canopy attachment snaps on the head guard cover.

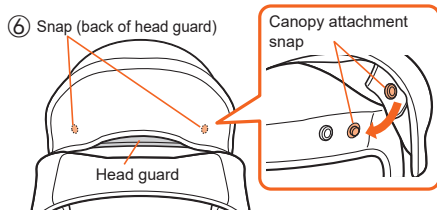


WARNING

Check that the two left and right snaps on the back of the canopy are fastened to the headrest cover.

In forward facing mode

- ① Pass the belt snap on the back of the canopy through the belt loop for forward facing use on top of the canopy, and.
② Fasten the snap.

Belt loop for forward facing

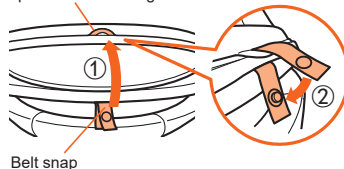


Attaching and removing the covers

Continue ➔

Remove the canopy before removing the covers.

Attaching and removing the head guard cover



- ① Lift up the head guard.
(Refer to "Adjusting the baby shoulder belt position".)
 - ② Fasten or release the two hooks on the upper back of the head guard cover.
 - ③ Attach or remove the head guard cover.
- ※ Be careful not to damage the cushioning attached to the head guard.

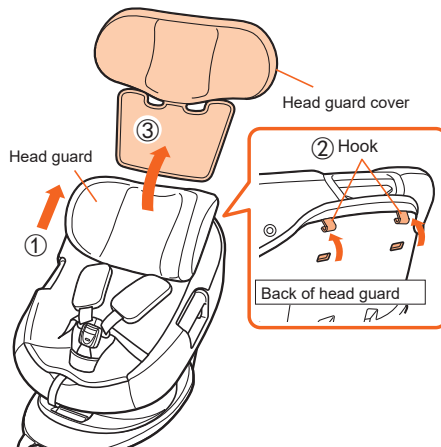

Attaching and removing the covers


Attaching and removing the seat cover

- ① Fasten or release the two left and right hooks on the inner side of the seat surface.
- ② Fasten or release the two hooks on the front side of the seat cover.
- ③ Fasten or release the two hooks on the back side of the seat cover.
- ④ Fasten or unfasten the four left and right knobs on the sides of the seat surface.
- ⑤ Fasten or unfasten the velcro on the tip of the adjustment belt to or from the velcro on the back of the seat cover.
- ⑥ Attach or remove the seat cover.

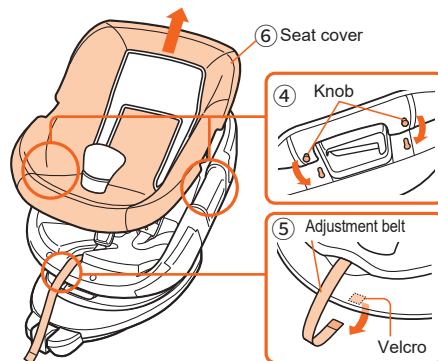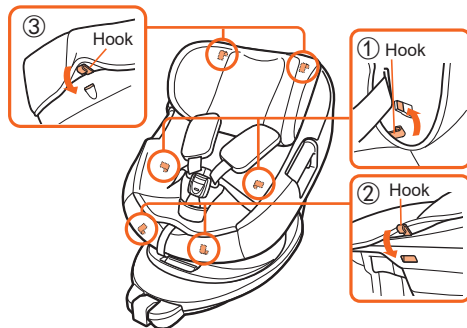

Attaching and removing the shoulder belt covers

Fasten or unfasten the two snaps.

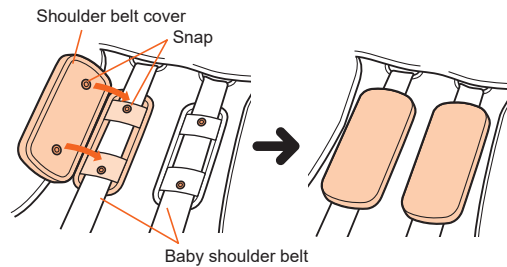

Maintenance method

Washing the seat cover and other sewn parts

Be sure to follow the washing instructions and cautions below.

- Follow the instructions noted on the washing label sewn onto the sheet cover.
- When using a washing machine, place the items in a laundry net. Failure to do so may result in fraying or other damage.
- Use the gentle cycle of the washing machine with cold or lukewarm water, or wash by hand.
- Do not use bleach.
- Use a neutral detergent. Do not use detergent containing fluorescent brightener or bleach. This may cause chapped skin or a rash.
- When using a horizontal washing machine (a washing machine with the drum facing horizontally or inclined), make sure the water level is sufficient.
- Color fading may occur due to the nature of the product.
- It is recommended to wash separately from other clothing and lightly colored items.
- Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
- Do not use an iron.
- Do not use a dryer or dry cleaning.



WARNING

Do not use undiluted neutral detergent, gasoline, benzene or other organic solvents when cleaning. These may damage the main body and baby belt, which is dangerous to the child.

Maintenance of the canopy

- Wipe clean using a sponge moistened with a detergent solution or lukewarm water. Do not immerse the canopy in detergent solution or water.
- After removing the dirt with detergent, wipe several times with a wet (water) cloth or sponge so that no detergent remains.
- Wipe away any moisture with a dry cloth and dry the canopy in the shade.
- Slight color fading may occur due to the nature of the product.

Maintenance of the main body and baby belt

Normally wipe clean with a well-wrung wet (water) cloth. When extremely dirty, remove the dirt using a solution of neutral detergent diluted with water, then wipe with a wet (water) cloth and dry in the shade.

Urethane materials

- The dyestuff used in the seat cover and other sewn parts may transfer to the urethane materials on the back of these parts. However, this is not a problem for quality or safety.

Inner cushion

- Remove the urethane material from inside the inner cushion before washing.

Storage and disposal

Storage

Main body

When the child car seat will not be used for a long period of time, uninstall it and store in a well-ventilated place out of direct sunlight and away from children.

User Manual

Be sure to read and understand this user manual before use. Always keep this user manual in the storage pocket of the base cover.

Disposal

- When disposing of the child car seat, follow the standards of your municipality or region.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.

Standard service life

The "standard service life" of this product is "eight years after new purchase".

Once this standard service life has passed, material aging may prevent the child car seat from functioning properly, which is dangerous to the child.

To avoid unforeseen circumstances, refrain from use past the standard service life, do not use the product if the service life is over 8 years.

- Always make sure to store the receipt (proof of purchase) issued by the dealer as a record of the new purchase date.
- Even within the standard service life, the product may malfunction due to use, environment and storage conditions, and quality is not guaranteed during this period. Repairs past the warranty period of "one year from the date of purchase" noted on the warranty card will entail a charge.
- For reasons of overall product safety, repair of products past the standard service life cannot be accepted.
- Refrain from reusing products with an unknown usage history.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page, typical of notebook or legal stationery. There are no margins, text, or other markings on the paper.

Combi

THE S
ISOFIX
EGGSHOCK

Combi Corporation

158966170