

Combi

Combi Child Car Seat SAVETREK

User Manual



For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

- Store this user manual in the user manual storage pocket on the back of the main body.

This product is certified according to the UN R44/04 standard.

- Universal: Weight groups 1, 2, 3
- Applicable child weight: Infants and children weighing 9 kg or more to 36 kg or less
- Group 1 (9 kg or more to 18 kg or less)
This product can be installed to vehicles with seats approved for installation of ISOFIX child car seats.
- Group 2 and Group 3 (15 kg or more to 36 kg or less)
This product is suitable only for vehicles equipped with 3-point seatbelts certified according to UN R16 or equivalent standards.

CAUTION

To avoid causing stress to the child, avoid continuous long-time usage and give the child a break from the child car seat about once every hour.

Contents

Before use

Before Use

Before use	2
Name of parts	3
Use conditions	5
Applicable vehicle seats	6
Types of vehicle seatbelts and cautions for use (when using the vehicle seatbelt)	7
Inapplicable vehicle seats	8
For safe use of the child car seat	10

Using in Group 1 mode

Using the reclining function	16
Adjusting the baby shoulder belt position and headrest position	17
Seating the child	19
Unseating the child	21
Preparation of installation	22
Installing to the vehicle	24
Checklist after installation	28
Uninstalling from the vehicle	29

Using in Group 2 and Group 3 mode

Converting to Group 2 and Group 3 mode	30
Adjusting the headrest position	35
Preparation of installation	36
Installing to the vehicle	37
Seating the child	43
Checklist after installation	45
Returning to Group 1 mode	46

Maintenance and Other

Attaching and removing the covers	50
Maintenance method	51
Storage and disposal	52

Before use

Thank you for purchasing this Combi child car seat. For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

〈Use of the second-hand product〉

- DO NOT use the product with unknown use history, especially the product with unknown accident history.
- If there are cracks, large scratches, or loose fasteners on the product, do not use it. Strong impacts may be caused due to a collision or drop of the product.

The child car seat is designed to reduce injury to the child in case of traffic accident, etc. However, there is no guarantee that the child car seat can completely protect the child from injury. A child using the child car seat must be accompanied by an adult.

● Labels

The descriptions in this manual use the labels DANGER, WARNING and CAUTION to indicate important items for safe and proper use of the child car seat. These are very important items that indicate the potential consequences if not followed properly, and are categorized according to the level of severity. Always make sure to follow these items.

Label	Label contents
 DANGER	Improper handling will result in imminent risk of death or serious injury.
 WARNING	Improper handling may result in death or serious injury.
 CAUTION	Improper handling may result in injury or damage to property.
 HINT	Useful hints for using the child car seat.

Name of parts

Check that all parts are present before use.


- Store the receipt (proof of purchase) together with this manual.

Before use

Package contents

- Main body
- Inner cushion
- ISOFIX insertion guide
- User manual (this manual)


Front

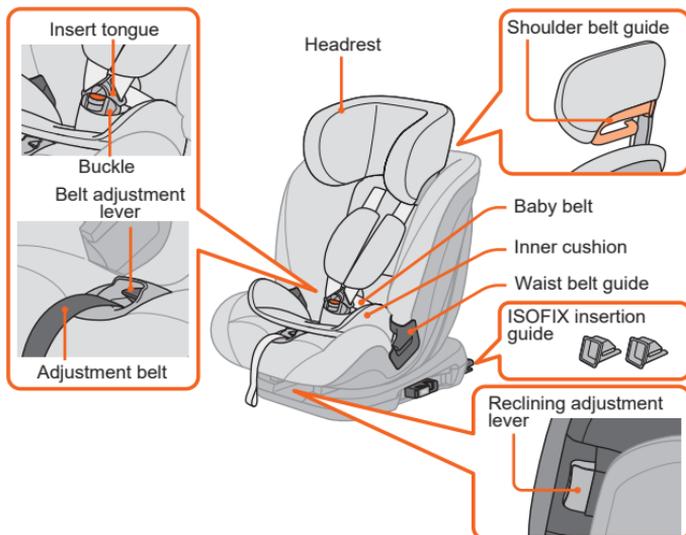

※ This manual uses simplified illustrations to help users easily understand operation and handling, and there may be slight differences from the actual product.

Before use

Back

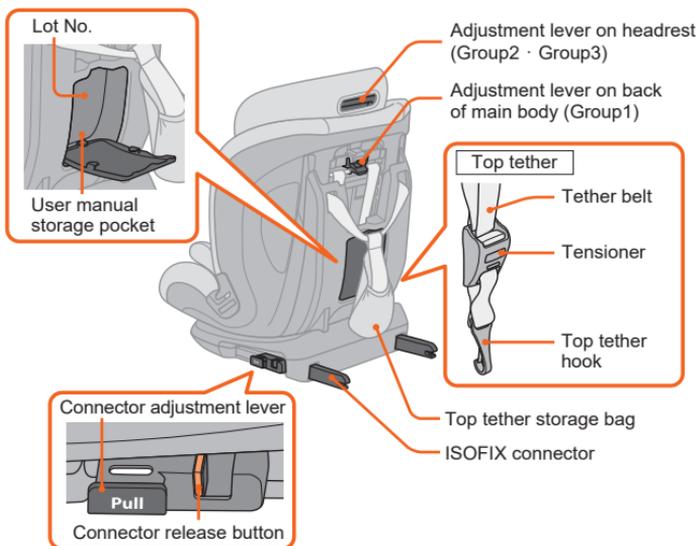

Use conditions

Use the following modes according to the child's weight.

Before use

Mode	Group 1	Group 2 · Group 3	
Use state			
Conditions	9 kg or more to 18 kg or less	15 kg or more to 36 kg or less	
Guidelines	70 cm to 105 cm Age 1 year old to 4 years old	95 cm to 145 cm Age 3 years old to 11 years old	
Child restraint method	Restrain the child using the baby belt of the child car seat.	Remove the baby belt and restrain the child directly with the vehicle seatbelt.	
Securing method	Secure the child car seat to the vehicle seat using the ISOFIX connectors and the top tether.	Secure the child car seat to the vehicle seat using the ISOFIX connectors and the vehicle seatbelt.	Secure the child car seat to the vehicle seat using the vehicle seatbelt.

⚠ DANGER

- The height and age guidelines are for reference only. Even if the height and age conditions noted above are met, the weight condition should be used to determine the appropriate usage mode.

Applicable vehicle seats

When using in Group 1 mode (weight: 9 kg or more to 18 kg or less)

This child car seat is an ISOFIX child car seat. It is intended for use in a vehicle equipped with ISOFIX anchors (bars), and has been certified according to the UN R44/04 standard.

Before use


This child car seat can be installed to vehicle seats approved for installation of ISOFIX child car seats.

However, this does not mean that the child car seat can be installed to any vehicle equipped with ISOFIX anchors (bars). When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to make sure the ISOFIX size classes noted below are supported.

Child weight	Weight group	Category	Size class	Anchors
9 kg or more to 18 kg or less	1	Universal	B	ISO/F2

ISOFIX anchoring system

ISOFIX anchors are metal fixtures (bars) provided between the vehicle backrest and seat in order to install an ISOFIX child car seat. The name and position may differ according to the vehicle, so always check the user manual of the vehicle.

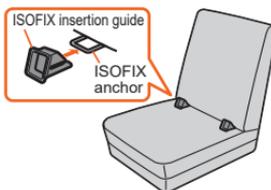

Top tether anchoring system

The top tether anchor is a metal fixture (bar) provided on the vehicle to secure the top tether hook. The name and position may differ according to the vehicle, so always check the user manual of the vehicle.

※ Example of top tether anchor position

<Back of vehicle seat>



<Luggage space>



<Floor>



<Rear parcel shelf>



<Ceiling>



Types of vehicle seatbelts and cautions for use (when using the vehicle seatbelt)

Before use

When using in Group 2 and Group 3 mode
(weight: 15 kg or more to 36 kg or less)

The method of installing the child car seat differs according to the type of seatbelt. Installation may not be possible to some vehicles.


This product is suitable for use only with vehicles equipped with 3-point seatbelts certified according to UN R16 or equivalent standards.

⚠ DANGER

- Always install the child car seat to a vehicle seat with a 3-point seatbelt.
- Never install the child car seat to a vehicle seat with a 2-point seatbelt. This may prevent the child car seat from functioning properly, which is extremely dangerous to the child.


2-point seatbelt

A seatbelt without a shoulder belt that supports the body using two points on both sides of a waist belt as illustrated.

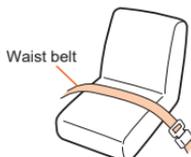

3-point seatbelt

A seatbelt that supports the body using the three points of both sides of a waist belt and a shoulder belt as illustrated.

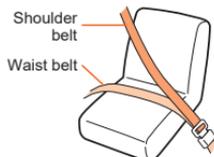

Seatbelt types and characteristics (how to distinguish)		Installation cautions
ELR	Can be extended and wound back slowly, but locks when pulled suddenly.	Slowly pull out the seatbelt and use it to secure the child car seat.
AELR	After the seatbelt is pulled out completely, the child car seat lock function activates while winding back and the seatbelt cannot be pulled out again. (The seatbelt unlocks after it is completely wound back.)	It is dangerous to completely pull out the seatbelt. Wind back the seatbelt to release the child car seat lock function, and then install the child car seat.
Other	Seatbelts other than the above.	Installation is not possible.

7

※ If there are questions about type of seatbelt, please contact the vehicle manufacturer.

Inapplicable vehicle seats

Continue 

Before use

Do not use the child car seat if it cannot be secured firmly to the vehicle seat, even if none of the conditions noted below apply.

- Vehicle seat equipped with an airbag ... Installation is possible to a vehicle seat with only a side airbag.
- Vehicle seat facing backwards or sideways relative to the driving direction.



- Deep bucket seat. ... A vehicle seat with a deeply sunken center seat surface.



- Vehicle seat with an extremely uneven surface that prevents stable installation.



- Vehicle seat with an extra large headrest.

... Due to the shape, the vehicle headrest will interfere with child car seat reclining operations and adjustment of the child car seat headrest.



- ※ Only when using in Group 2 and Group 3 mode

- Vehicle seat without a seatbelt.



- ※ The child car seat can be installed to a vehicle seat with a removable headrest if the above operations can be performed after the vehicle headrest is removed.

- ※ Only when using in Group 1 mode

- Vehicle seat not equipped with ISOFIX anchors (bars).



Inapplicable vehicle seats

Before use

※ Only when using in Group 2 and Group 3 mode

- Vehicle seat with a 2-point seatbelt.



※ Only when using in Group 2 and Group 3 mode

- Vehicle seat with an extremely short seatbelt.



※ Only when using in Group 2 and Group 3 mode

- Vehicle seat with a passive seatbelt.

※ What is a passive seatbelt?

... A seatbelt that automatically fastens itself when the passenger sits in the vehicle seat and closes the door. (also called an automatic seatbelt)



※ Only when using in Group 2 and Group 3 mode

- Vehicle seat with the seatbelt extending from the center of the seat part.

... A vehicle seat with a seatbelt extending from a position in front of the waist belt guides of the child car seat.



For safe use of the child car seat Continue

DANGER

Improper handling will result in imminent risk of death or serious injury.

Before use

- Do not seat a child who does not satisfy the use conditions, or install the child car seat to an inapplicable vehicle seat.



- Do not install the child car seat to a vehicle seat equipped with an airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.

... Installation is possible to a vehicle seat with only a side airbag.



- Do not allow the child to stand, crouch or kneel on the child car seat.

※ When using in Group 1 mode Make sure the child is seated properly, the crotch belt cover and baby belt are fastened correctly, and the left and right insert tongues are inserted into the buckle until they lock with a “click” sound and do not come loose.



- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.



- When using in Group 2 and Group 3 mode Make sure that the vehicle seatbelt is adjusted to the correct position when seating the child.



- When using in Group 1 mode The child car seat cannot be secured using the vehicle seatbelt.

For safe use of the child car seat

Evacuation in case of emergency

Before use

In case of accident or other emergency, an accompanying adult should press the buckle button to release the baby belt (when using in Group 2 and Group 3 mode, release the vehicle seatbelt) and evacuate the child from the vehicle immediately.



⚠ WARNING**Improper handling may result in death or serious injury.**

Before use

- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible.
- Do not leave the child in the vehicle unattended. On sunny days the cabin temperature may rise and pose the risk of dehydration. Other accidents may also occur. An adult should always accompany the child.



- Do not modify or improperly repair the child car seat.



- Do not install the child car seat to the passenger seat of a 2-door or 3-door vehicle when passengers will ride in the rear seat. This may obstruct exit from the vehicle in an emergency.



- Always secure the child car seat with the connectors and the top tether hook (when using in Group 1 mode) or the vehicle seatbelt (when using in Group 2 and Group 3 mode) even when the child is not seated. Sudden braking or collision may cause an unsecured child car seat to move inside the vehicle and interfere with driving.



For safe use of the child car seat

Before use

- When using in Group 1 mode
Always keep the baby belt fitting snugly. A loose belt may become wrapped around the child's neck and result in suffocation.



- When using in Group 1 mode
The child may accidentally press the buckle button. Check periodically to make sure the insert tongue has not come loose from the buckle. If the insert tongue has come loose, the child car seat will not function properly and the belts may become wrapped around the child's neck.




- When using in Group 1 mode
Contact Combi's Customer Service Center for repair if the buckle becomes jammed with dirt, food crumbs or other objects and cannot be fastened securely or is too stiff to release easily.



- When using in Group 1 mode
Do not use the child car seat if the baby belt is damaged in any way. Contact Combi's Customer Service Center for repair.



- When using in Group 2 and Group 3 mode
Do not install to a vehicle seat with a damaged seatbelt.

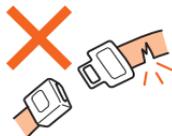

- When using in Group 2 and Group 3 mode
When using the child car seat with a seatbelt that has a child car seat lock function, do not operate the lock function. The seatbelt may squeeze the child and compress the child's chest.



⚠ CAUTION**Improper handling may result in injury or damage to property.**

Before use

- Be careful that the child car seat does not get jammed between the vehicle doors or vehicle seat movable parts.



- Do not use the child car seat with the seat cover and other sewn parts or the urethane and other cushioning removed. Also do not replace these parts with parts not specifically authorized by Combi for this product. (This may negatively affect safety performance in the event of a collision.)



- Exposing the child car seat to direct sunlight may cause the main body, insert tongue and other parts to become hot and burn the child. Touch each part and check that it is not too hot before seating the child.



- Users with long fingernails or artificial nails should be careful when fastening or adjusting the child car seat to prevent them from becoming jammed in gaps or moving parts.



- Be careful of unsecured items inside the vehicle. Sudden braking or collision may cause unsecured items to strike the child.



- Depending on the shape and surface material (leather, etc.) of the vehicle seat, scratches or marks may remain after installation.

For safe use of the child car seat

Before use

- Do not use the child car seat as a normal chair, as it may tip over or fall, possibly resulting in injury. Do not use the child car seat for purposes or in ways other than described in this user manual.
- Do not operate or adjust the child car seat while driving. Also make sure that other children riding in the vehicle do not touch or play with the child car seat.




- Do not install with a cushion or other object between the vehicle seat and the child car seat. This will prevent the child car seat from being secured properly.
- Do not expose the child car seat to wind and rain.
- Do not carry the child car seat by the baby belt.



Using the reclining function

When using [Group 1] mode, the reclining angle can be adjusted in 4 levels according to the condition of the child.

- ① While pulling forward the reclining adjustment lever,
② Adjust the seat reclining angle.

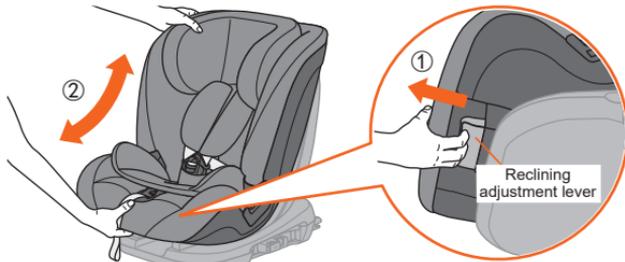

CAUTION

- Keep the child's hands, fingers and other body parts away when reclining the seat. Also take care for the hands of other passengers. Hands, fingers and other body parts may become caught, possibly resulting in injury.
- Take care not to let dirt, food crumbs or other foreign matter enter the gaps between the parts. This may result in malfunction.

- 2 Release the reclining adjustment lever and try to rock the seat forward and back to make sure that it is locked in place.



WARNING

After performing reclining operation, make sure that the reclining adjustment lever returns to its original position with a "click" sound and the seat is locked in place. (This may negatively affect safety performance in the event of a collision.)

Using in Group 1 mode

Adjusting the baby shoulder belt position and headrest position

Change the baby shoulder belt position according to the child's growth. The baby shoulder belt position can be adjusted in 4 levels.


Baby shoulder belt position reference

Adjust so that the baby shoulder belt is at or slightly above the child's shoulder.




Using in Group 1 mode

- 1 ① While pulling up the belt adjustment lever,
② Pull both the left and right baby belts forward to loosen the baby belts.
※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.

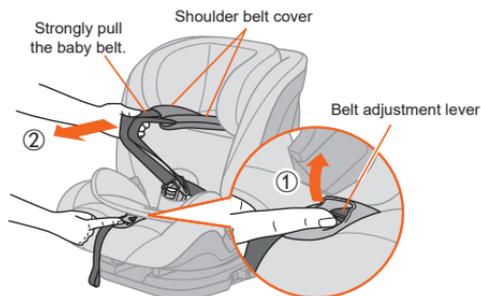


- 2**
- ① While pulling up the adjustment lever on the back of the main body (Group 1), adjust the height of the headrest.
 - ② Release the adjustment lever on the back of the main body at the proper position.
 - ③ Try to move the headrest up and down to make sure that it is secured.

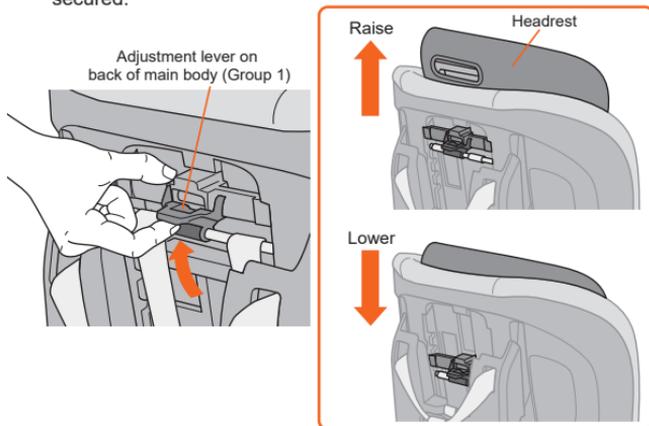

Using in Group 1 mode



 WARNING Adjusting the baby shoulder belt position will tighten or loosen the baby belt. Do not adjust the baby shoulder belt position once the child is restrained by the baby belt.




CAUTION Keep the child's hands, fingers and other body parts away when adjusting the baby shoulder belt position. Also take care for the hands of other passengers. Hands, fingers and other body parts may become caught, possibly resulting in injury.



HINT The adjustment lever on the headrest is used when using the child car seat in Group 2 and Group 3 mode. The adjustment lever on the headrest cannot be used in Group 1 mode.

Seating the child


- ① While pulling up the belt adjustment lever,
② Pull both the left and right baby belts forward to loosen the baby belts.
※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.

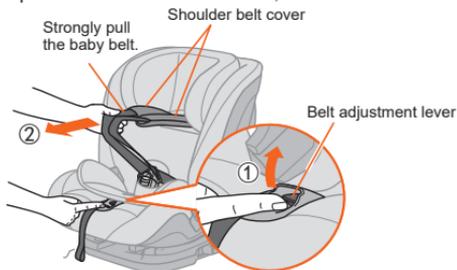


WARNING

- The child should take off his/her thick coat before sitting on the safety seat. Otherwise, the child may not be held tightly.
- Do not seat the child incorrectly as illustrated on the right. The child car seat will not function properly, which is dangerous to the child.

- ②
- ① Press the buckle button and remove the insert tongue from the buckle.
② Seat the child deeply into the child car seat and pass the child's arms through the left and right baby belts.
③ Make sure that the left and right baby belts are not twisted.

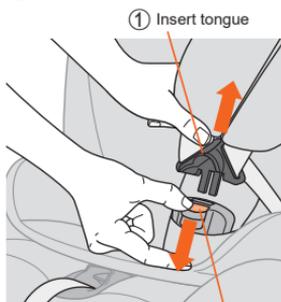

① Buckle button

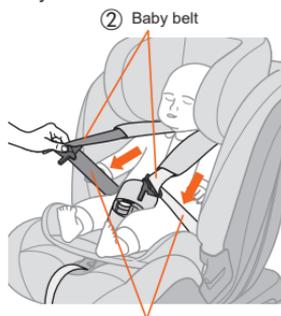

Make sure the left and right baby belts are not twisted.


- 3** ① Match the left and right insert tongues and insert them into the buckle until they lock with a “click” sound.



DANGER

If the left and right insert tongues are not inserted firmly into the buckle, the child may tumble out of the child car seat in the event of a collision or a loose belt may wrap around the child's neck and result in suffocation.

Match left and right

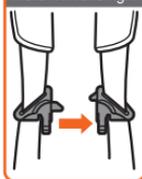

Insert




HINT



- The buckle button is designed to be too stiff for a child to release.
- The left and right insert tongues must be matched properly in order to insert them into the buckle.

- 4** ① Pull down the baby waist belt to firmly hold the child's pelvis.
② The baby shoulder belt should always be located in the center of the child's shoulder.
③ Pull the adjustment belt toward you,
④ Adjust the length of the baby belt so that there is an adult palm's space between the child's body and the baby belt.

- ④ Adjust so that there is a palm's space between the child's body and the baby belt.

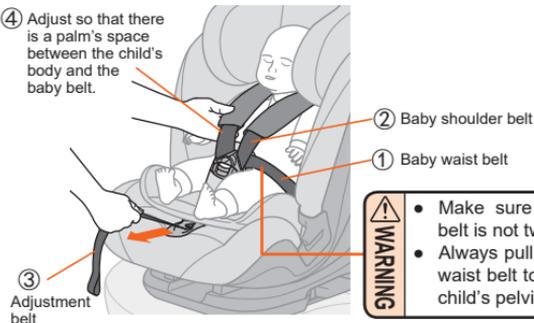

WARNING

- Make sure that the baby belt is not twisted or loose.
- Always pull down the baby waist belt to firmly hold the child's pelvis.




WARNING

Always adjust the baby belt to the proper length. If the baby belt is not fit to the child's body, the child may tumble out of the child car seat in the event of a collision or a loose baby belt may wrap around the child's neck and result in suffocation.

Unseating the child

- 1 ① While pulling up the belt adjustment lever,
- ② Pull both the left and right baby belts forward to loosen the baby belts.
※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.
- ③ Press the buckle button and remove the insert tongue from the buckle.
- ④ Unseat the child.

Using in Group 1 mode

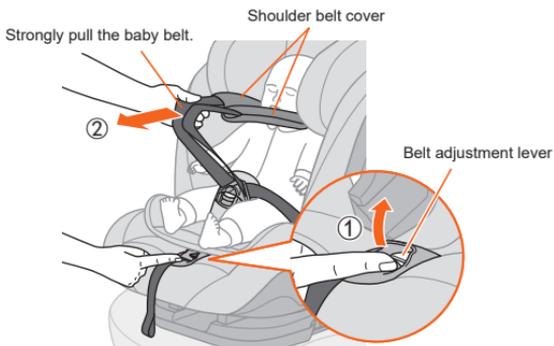

Preparation of installation

Continue 


 **DANGER**

 - Do not install the child car seat by a method other than described in this user manual and indicated on the main body.
- When using in Group 1 mode, the child car seat cannot be secured using the vehicle seatbelt.
- Do not install the child car seat to a vehicle seat equipped with a front airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.


- 1** ① Park the vehicle in a flat location where all doors can be opened.



- ② Slide the front seat forward and tilt the backrest to the front to create space for easier installation to the vehicle.




- 2** ① Remove the vehicle headrest if possible.
※ Store the removed vehicle headrest in the trunk or cargo compartment.
③ Recline the vehicle seat backrest slightly if possible.

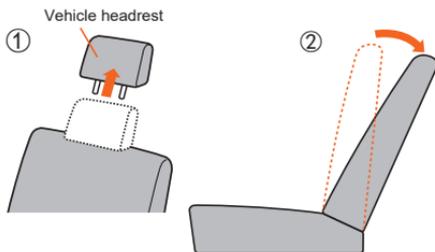

HINT


 If the vehicle headrest cannot be removed, raise it to the uppermost position.

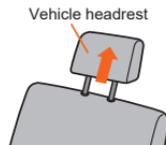

Using in Group 1 mode

Preparation of installation


- 3** Fit the ISOFIX insertion guides onto the ISOFIX anchors.

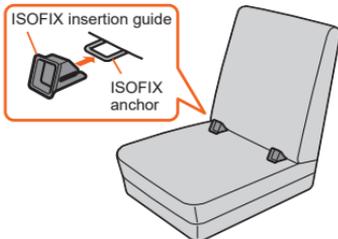

Using in Group 1 mode




Use the supplied ISOFIX insertion guides for easier child car seat installation when the ISOFIX anchors are hidden by the vehicle seat and difficult to see. However, note that attaching the ISOFIX insertion guides may increase the gap between the back of the main body and the seat backrest for some vehicle seats. In these cases, install the child car seat without using the ISOFIX insertion guides.

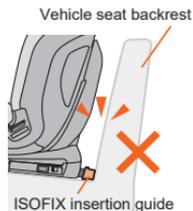


Installing to the vehicle

Continue 

- 1
 - ① Take out the top tether hook and tensioner from the top tether storage bag.
 - ② Place the main body on the vehicle seat and extend the top tether hook and tensioner toward the back of the vehicle seat.

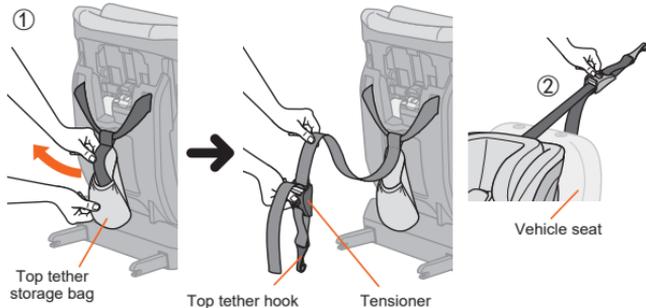


- 2
 - ① While pulling the connector adjustment lever on the side of the main body,
 - ② Pull out the ISOFIX connectors as far as possible.
 - ③ Release the connector adjustment lever and check that the color indicator A is "green".
- ※ Perform this procedure for both the left and right connectors.

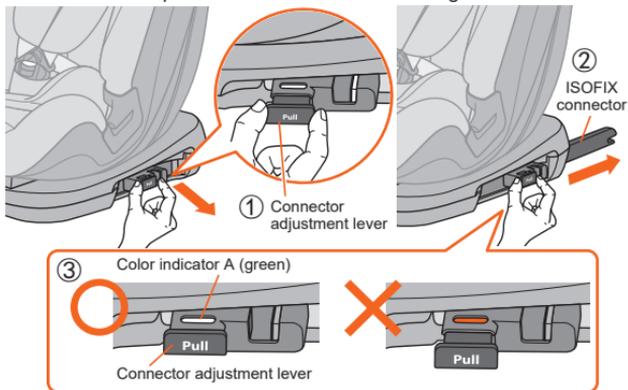


Using in Group 1 mode

Installing to the vehicle

- 3** ① Fit the ISOFIX connectors onto the left and right ISOFIX anchors and push until they lock with a “click” sound.
② Check that the color indicator B shows the locked condition (“green” is visible).

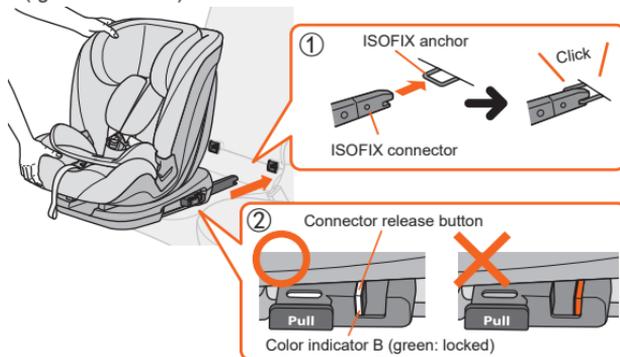

- 4** ① While pulling the left and right connector adjustment levers,
② Push the main body firmly using your knee, etc. or push the main body one side at a time until the back of the main body contacts the vehicle seat backrest, then release the main body.
③ Check that the color indicator A and B are “green”.

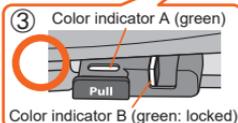

HINT

- When pushing the main body, check the connector positions and adjust so that there is not a large difference in the left and right push-in amounts.
- In some vehicles there may be a gap between the back of the main body and the vehicle seat backrest even when the main body is pushed firmly.

Continue 

- 5** If the vehicle seat backrest can be reclined, adjust the reclining angle to make the gap with the back of the main body as small as possible.



- 6** While pressing the tensioner release button, pull to loosen the tether belt.



Using in Group 1 mode

Installing to the vehicle

- 7** Secure the top tether hook to the top tether anchor.
※The illustration shows the case with the top tether anchor on the back of the vehicle seat.



HINT



The top tether anchor position differs according to the vehicle. Read the user manual of the vehicle for details of installing the top tether hook.

* Example of top tether anchor positions other than on the back of the vehicle seat

<Luggage space>



<Rear parcel shelf>



<Floor>



<Ceiling>




- 8** Pull the tether belt firmly to tighten it until the tensioner color indicator is "green".



HINT



- The tether belt pulling direction differs according to the top tether anchor position. Pull in the direction parallel to the tether belt.
- If you can move behind the vehicle seat, grasp the tether belt at a position close to the tensioner and pull firmly.

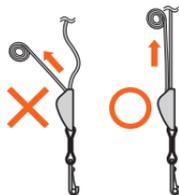


Checklist after installation

After installation, check the following to make sure that the child car seat is installed properly.

- ① Check that the ISOFIX connector color indicators A and B are "green".
- ② Check that the tensioner color indicators is "green".
- ③ Hold the main body and try to rock it in all directions to make sure it is installed correctly.
- ④ Check that the left and right of the main body are parallel with the vehicle seat. (Check that an ISOFIX connector is not pushed in excessively on only one side.)


If you have any questions, please contact Combi's Customer Service Center.

Using in Group 1 mode

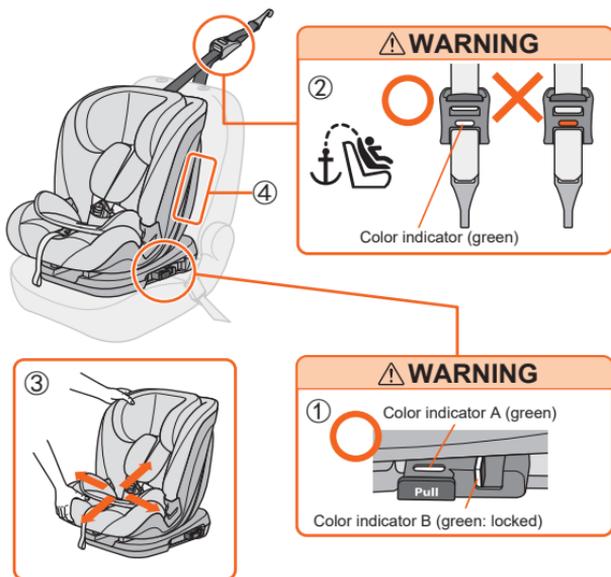


Uninstalling from the vehicle


- 1 ① While pressing the tensioner release button, pull to loosen the tether belt.
② Release the hook from the top tether anchor.

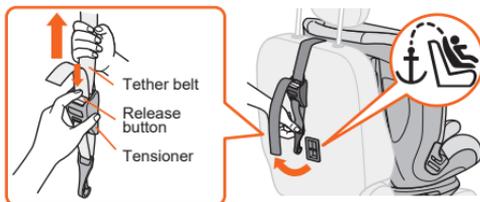

- 2 ① Press the left and right connector release buttons and release the ISOFIX connectors from the ISOFIX anchors.
② Check that the connector release button color indicators show the unlocked condition ("red" is visible).

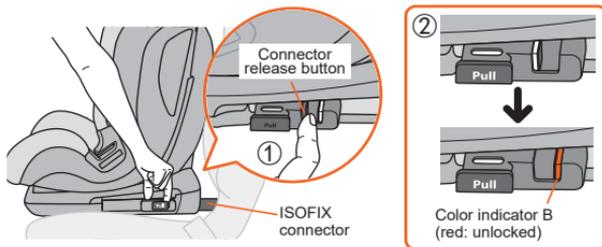


- 3 ① While pulling the connector adjustment lever on the side of the main body,
② Retract the ISOFIX connectors.

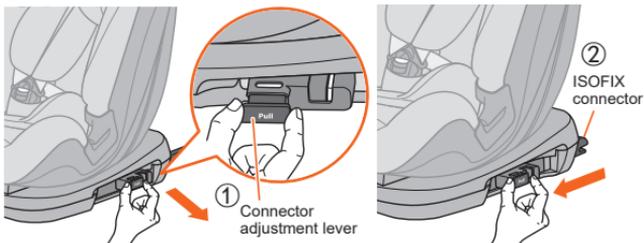

Converting to Group 2 and Group 3 mode


Remove the baby belt and buckle that were used in [Group 1] mode.

- 1 Operate the reclining adjustment lever and adjust the reclining angle so that the child car seat is as upright as possible. (Refer to "Using in Group 1 mode : Using the reclining function".)

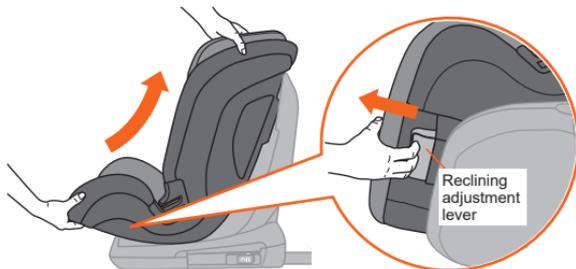


- 2 While pulling up the belt adjustment lever, pull out the baby belt as far as possible. (Refer to "Using in Group 1 mode : Seating the child".)

- 3
 - ① Pull out the belt adjustment metal from the back of the main body.
 - ② Unhook the left and right baby belts from the belt adjustment metal.

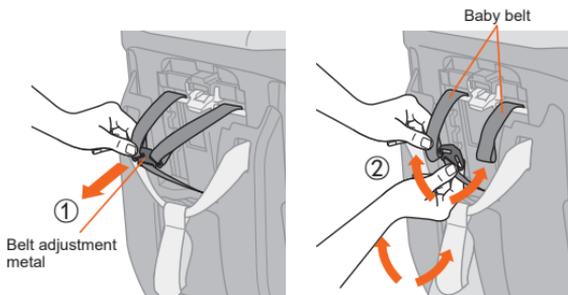


Converting to Group 2 and Group 3 mode

- 4** ① Open the user manual storage pocket and arrange the belt adjustment metal as illustrated.
② Store the belt adjustment metal clasped by the user manual storage pocket.

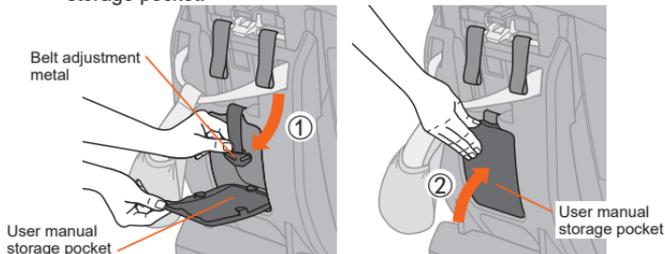


- 5** Pull out the left and right baby belts from the shoulder belt slots on the front of the main body.


※ The baby belt cannot be removed by pulling on the shoulder belt covers. Pull on the baby belt.

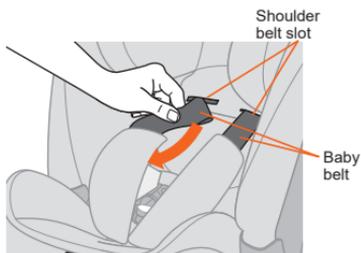


- 6** Operate the adjustment lever on the back of the main body (Group 1) and pull up the headrest to the highest position. (Refer to "Using in Group 1 mode : Adjusting the baby shoulder belt position and headrest position".)

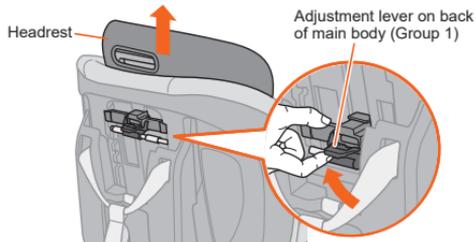


- 7**
- ① While pulling up the adjustment lever on the back of the main body (Group 1),
 - ② Remove the left and right shoulder belt cover attachment loops from the adjustment shaft.
 - ③ Pull out the left and right shoulder belt cover attachment loops from the shoulder belt slots on the front of the main body.

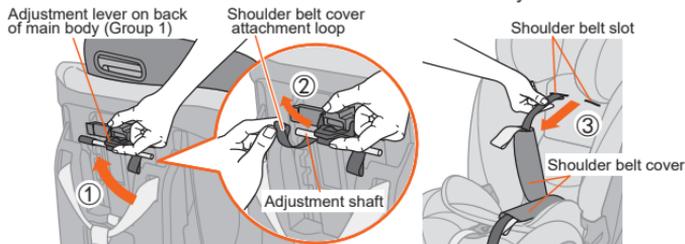

- 8**
- ① Press the buckle button and remove the insert tongue from the buckle. (Refer to "Using in Group 1 mode : Seating the child".)
 - ② Pull out the buckle from the inner cushion.

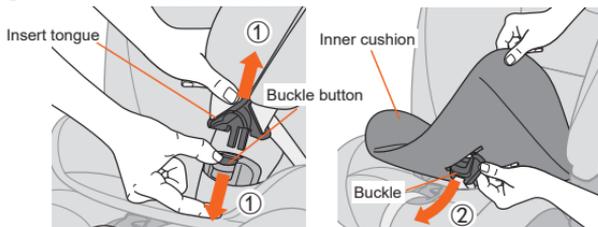


- 9**
- ① Remove the rubber from two places on the lower part of the seat cover seat surface.
 - ② While pulling out the seat cover from the gap around the seat surface,
 - ③ Remove the rubber from the outside of the left and right waist belt guides.

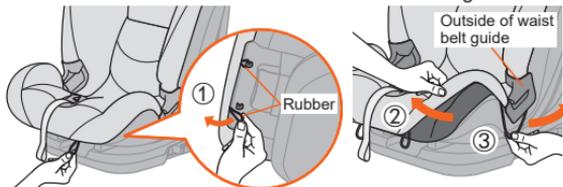


Converting to Group 2 and Group 3 mode

- 10** ① Pull out the seat cover from around the belt adjustment lever cover.
② Pull out the seat cover from inside the left and right waist belt guides.
③ Pull out the crotch belt from the seat cover and remove the seat cover from the seat surface.

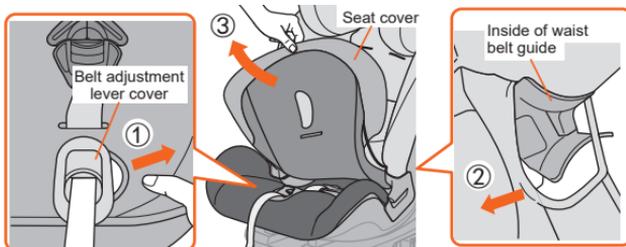


- 11** Remove the seat urethane from the seat surface.


※ Be careful not to tear the seat urethane with the buckle or other items when removing it.

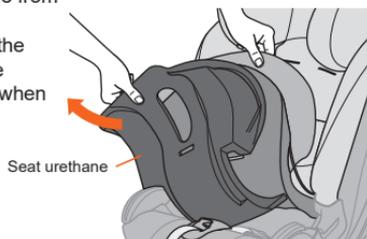


- 12** ① Unhook the crotch belt attachment metal from the seat surface,
② Remove the crotch belt from the slit in the center of the attachment metal.
③ Pull out the crotch belt from the crotch belt slot.

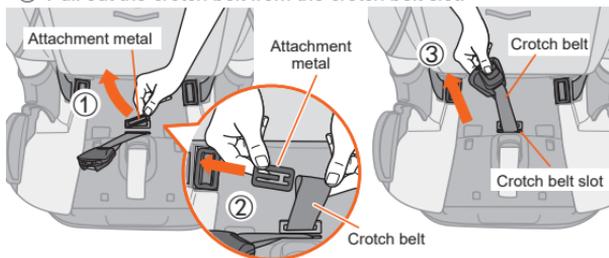

- 13** ① Remove the baby belt attachment metal from the seat surface,
 ② Remove the baby belt from the slit in the center of the attachment metal.
 ③ Pull out the baby belt from the waist belt slots.
 ※ Perform this procedure for both the left and right baby belts.

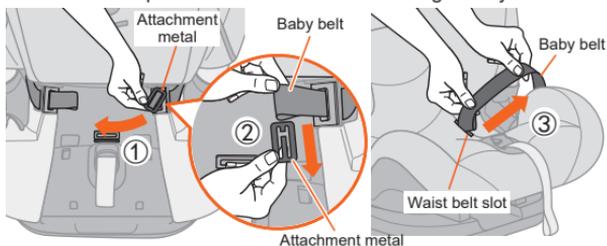


- 14** Attach the seat urethane and seat cover in the original conditions by reversing the removal procedure. (Refer to steps 9 to 11.)

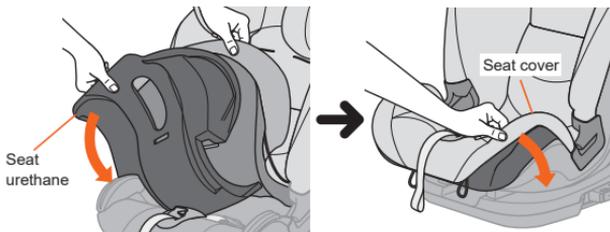

All of the removed parts are needed when returning to Group 1 mode. Store the removed parts carefully to avoid losing them.

CAUTION

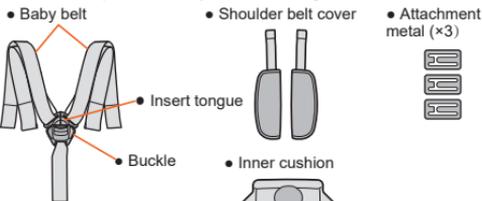


※ Store with the insert tongues inserted into the buckle.

Using in Group 2 and Group 3 mode

Adjusting the headrest position




- 1** Pull up the adjustment lever on the back of the main body (Group 1) to the highest position. (Refer to “Using in Group 1 mode : Adjusting the baby shoulder belt position and headrest position.”.)

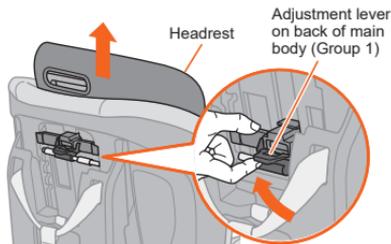

When using in Group 2 and Group 3 mode, adjust the adjustment lever on the back of the main body (Group 1) to the highest position. If you operate the adjustment lever on the headrest (Group 2 · Group 3) with the adjustment lever on the back of the main body not in the highest position, your fingers may be pinched.

Using in Group 2 and Group 3 mode

 - 2**
- ① While pulling the adjustment lever on the headrest (Group 2 · Group 3), adjust the height of the headrest.
 - ② Release the adjustment lever on the headrest (Group 2 · Group 3) at the proper position,
 - ③ Try to move the headrest up and down to make sure that it is secured.
- ※ Refer to “Seating the child” for the proper position.

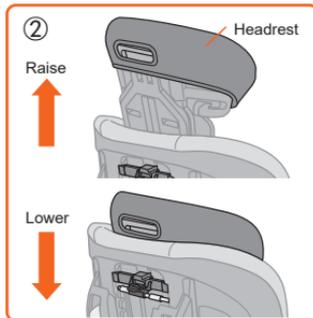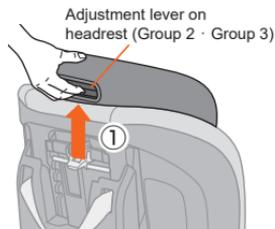

Keep the child's hands, fingers and other body parts away when adjusting the headrest position. Also take care for the hands of other passengers. Hands, fingers and other body parts may become caught, possibly resulting in injury.

Preparation of installation



- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.
- Do not install the child car seat to a vehicle seat equipped with a front airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.



Do not install to a vehicle seat with a damaged seatbelt.

- 1** Prepare for installation by the same procedure as for Group 1 mode. (Refer to "Using in Group 1 mode : Preparation of installation".)

Using in Group 2 and Group 3 mode

Installing to the vehicle



Do not use the top tether in Group 2 and Group 3 mode. The child car seat will not function properly, which is dangerous to the child.


When using in [Group 2 · Group 3] mode, the child car seat can be installed by the two methods of <Installing with the ISOFIX connectors and the vehicle seatbelt> and <Installing with only the vehicle seatbelt>.

Installing with the ISOFIX connectors and the vehicle seatbelt


- 1 Operate the reclining adjustment lever and adjust the reclining angle so that the child car seat is as upright as possible. (Refer to "Using in Group 1 mode: Using the reclining function".)




When using in Group 2 and Group 3 mode, adjust the reclining angle so that the child car seat is as upright as possible. The child car seat will not function properly, which is dangerous to the child.

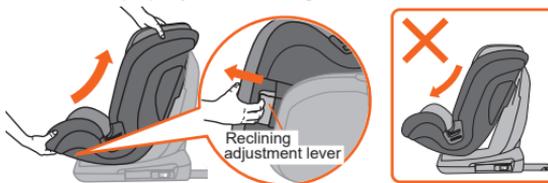

- 2 Fold up the tether belt and store all of the tensioner, top tether hook and tether belt in the top tether storage bag.

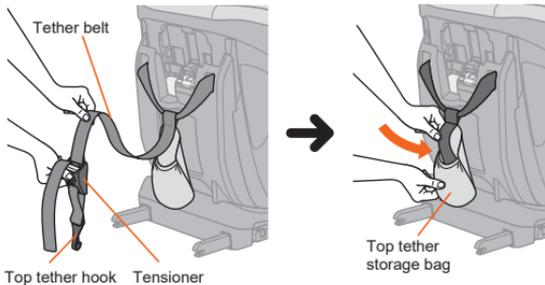


- 3** Pull up the adjustment lever on the back of the main body (Group 1) to the highest position.
(Refer to “Using in Group 1 mode: Adjusting the baby shoulder belt position and headrest position”.)

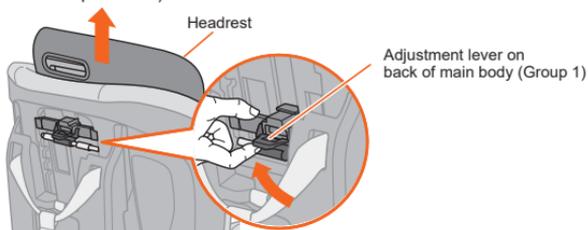

When using in Group 2 and Group 3 mode, adjust the adjustment lever on the back of the main body to the highest position.


- 4** Place the main body on the vehicle seat so that the top tether storage bag does not extend from between the vehicle seat and the back of the main body.

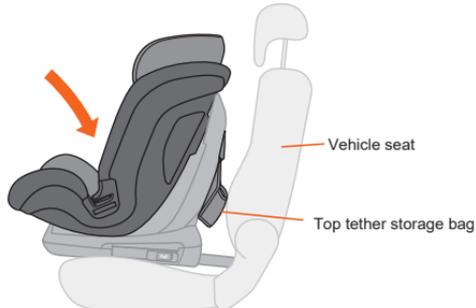


Install the child car seat so that the top tether storage bag containing the top tether hook and tensioner is clasped between the back of the main body and the vehicle seat and does not move.

Installing to the vehicle


- 5** ① While pulling the connector adjustment lever on the side of the main body,
② Pull out the ISOFIX connectors as far as possible.
③ Release the connector adjustment lever and check that the color indicator A is "green".
※ Perform this procedure for both the left and right connectors.

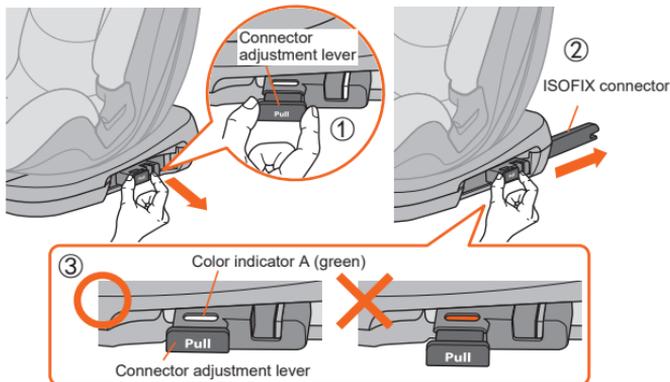

- 6** ① Fit the ISOFIX connectors onto the left and right ISOFIX anchors and push until they lock with a "click" sound.
② Check that the color indicator B shows the locked condition ("green" is visible).

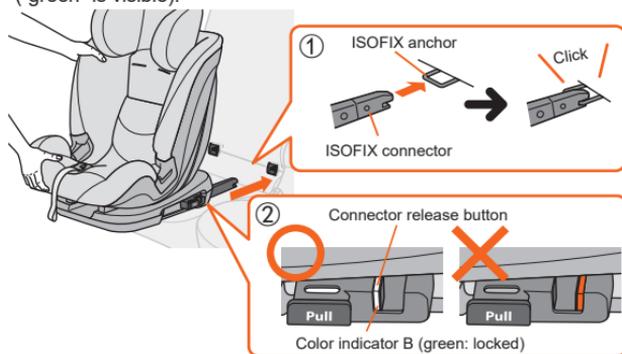

- 7**
- ① While pulling the left and right connector adjustment levers,
 - ② Push the main body firmly using your knee, etc. or push the main body one side at a time until the back of the main body contacts the vehicle seat backrest, then release the main body.
 - ③ Check that the color indicators A and B are “green”.

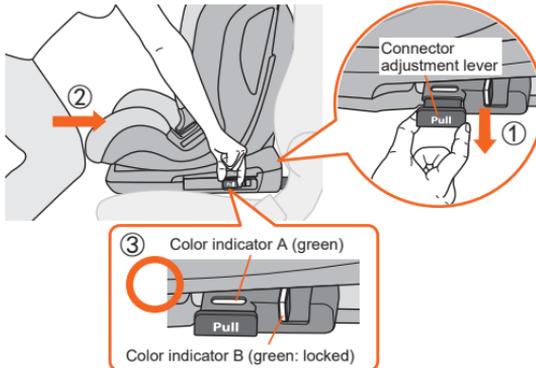**HINT**

- When pushing the main body, check the connector positions and adjust so that there is not a large difference in the left and right push-in amounts.
- In some vehicles there may be a gap between the back of the main body and the vehicle seat backrest even when the main body is pushed firmly.

- 8** If the vehicle seat backrest can be reclined, adjust the reclining angle to make the gap with the back of the main body as small as possible.




Installing to the vehicle

- 9**
- ① Pull out the vehicle seatbelt.
 - ② Pass the vehicle seatbelt through the shoulder belt guide.
 - ③ Pass the vehicle seatbelt through the left and right waist belt guides.
 - ④ Pass the vehicle seatbelt through the waist belt guide on the seatbelt buckle side.
 - ⑤ Insert the seatbelt insert tongue into the seatbelt buckle until it locks with a "click" sound.




Secure the child car seat even when the child is not seated. Sudden braking or collision may cause an unsecured child car seat to strike passengers.

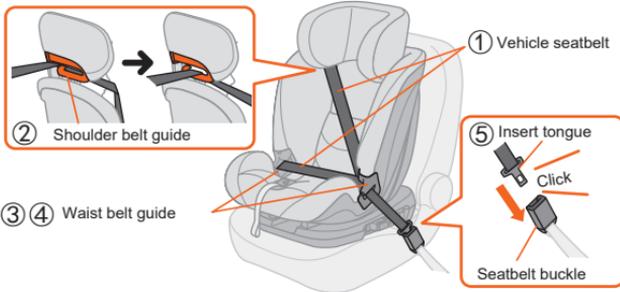

If use of the ISOFIX connectors interferes with attachment of the vehicle seatbelt and seatbelt buckle, do not use the ISOFIX connectors and instead install the child car seat using only the vehicle seatbelt.



The child car seat may become unstable if the seatbelt buckle or insert tongue contacts the main body and causes looseness in the vehicle seatbelt. Do not use the child car seat in an unstable condition. If you have any questions, please contact Combi's Customer Service Center.

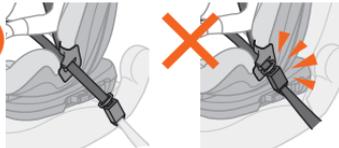

Installing with only the vehicle seatbelt


Install the child car seat by following the procedure described in “Installing with the ISOFIX connectors and the vehicle seatbelt” without steps 5 to 7.

- ※ For how to retract the ISOFIX connectors, refer to the procedure described in “Uninstalling from the vehicle” for Group 1 mode.
- ※ If use of the ISOFIX insertion guides interferes with installation, remove the ISOFIX insertion guides from the ISOFIX anchors.

Using in Group 2 and Group 3 mode

Seating the child


- 1 Remove the seatbelt insert tongue from the seatbelt buckle, seat the child deeply into the child car seat, and adjust the height of the headrest according to the child.
(Refer to “Using in Group 2 and Group 3 mode : Adjusting the headrest position”.)

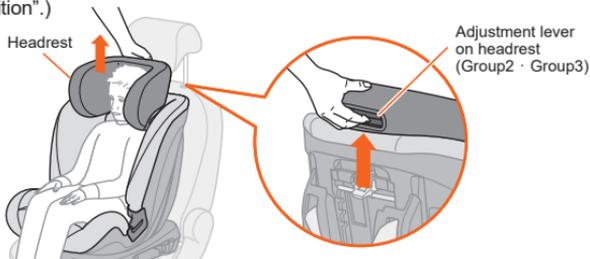

Using in Group 2 and Group 3 mode

Headrest (shoulder belt guide) height reference


Adjust so that the shoulder belt guide is positioned slightly above the child's shoulder height.

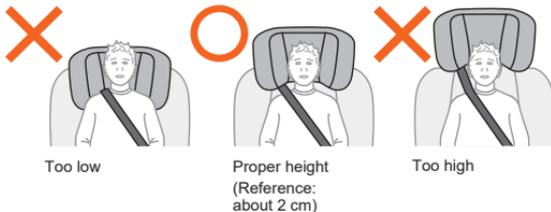

⚠
WARNING

- The shoulder belt guide should be adjusted so that the seatbelt (shoulder belt) holds the child's shoulder at the correct position. Adjust the height of the headrest as the child grows and the shoulder belt guide becomes too low.
- When using in Group 2 and Group 3 mode, adjust the adjustment lever on the back of the main body to the highest position. If the shoulder belt guide is too much higher than the child's shoulder height in the condition with the adjustment lever on the back of the main body in the highest position, do not use in Group 2 and Group 3 mode.

- 2** Pull out the vehicle seatbelt and insert the seatbelt insert tongue into the seatbelt buckle until it locks with a “click” sound.

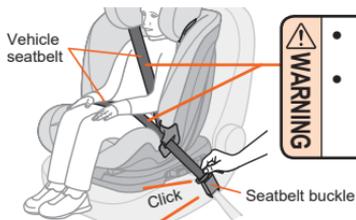

- Make sure that the vehicle seatbelt is not twisted or loose.
- Always adjust the vehicle seatbelt (waist belt) so that it holds the child's pelvis.

- 3** If the vehicle seatbelt is loose, pull up the seatbelt (shoulder belt) to adjust the tension.



WARNING

- The child car seat is unstable in the condition with the vehicle seatbelt not fastened. If the child attempts to get into or out of the child car seat without the assistance of an adult, the child may slip or fall from the vehicle seat. An adult must always seat and unseat the child.
- If the child is seated improperly in the child car seat such as illustrated below, the child car seat will not function properly, which is dangerous to the child.

- The child's arms must be above the vehicle seatbelt.



- Bending backwards or forwards



- Sitting with the body turned or leaning to the left or right



- Crouching, kneeling, or with the knees drawn up




Checklist after installation

Check the following once the child is seated in the child car seat and the vehicle seatbelt is fastened.

- ① Check that there is not a large gap between the vehicle seat and the main body.
- ② Check that the reclining angle is adjusted so that the child car seat is as upright as possible.
- ③ Check that the adjustment lever on the back of the main body is in the highest position.
- ④ Check that the vehicle seatbelt passes through the shoulder belt guide and is not compressing the child's neck or otherwise deviating from the child's shoulder.
- ⑤ Check that the vehicle seatbelt fits snugly against the child's body and is not twisted or loose.
- ⑥ Check that the vehicle seatbelt firmly holds the child's pelvis.
- ⑦ Check that the seatbelt insert tongue is inserted securely into the seatbelt buckle and does not come loose.
- ⑧ Check that the vehicle seatbelt passes through the left and right waist belt guides.
- ⑨ Check that the vehicle seatbelt passes through the waist belt guide on the seatbelt buckle side.
- ⑩ Check that the top tether hook is not used and is not extending from between the vehicle seat and the main body.
- ⑪ Check ISOFIX connectors color indicators A and B are "green".
※ Only when using the ISOFIX connectors.
- ⑫ Check that the left and right of the main body are parallel with the vehicle seat.
(Check that an ISOFIX connector is not pushed in excessively on only one side.)
※ Only when using the ISOFIX connectors.

Using in Group 2 and Group 3 mode

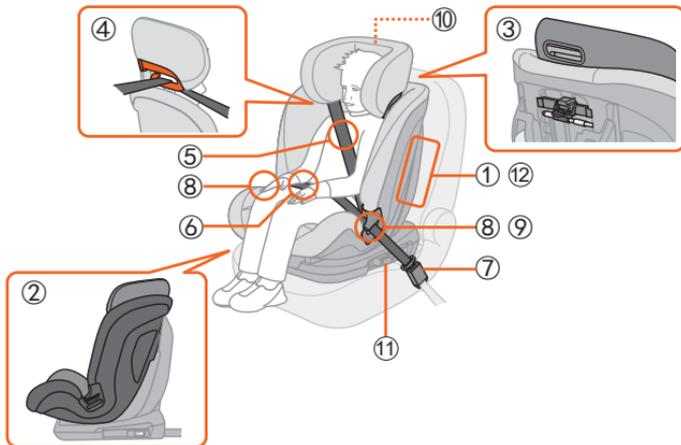


Returning to Group 1 mode

Continue 

* Prepare the parts removed in “Converting to Group 2 and Group 3 mode”.

- 1** Remove the seat cover and seat urethane from the seat surface.
(Refer to “Converting to Group 2 and Group 3 mode”.)
 - 2**
 - ① Pass the baby belt through the waist belt slots in the seat surface as illustrated, making sure that the insert tongue is oriented correctly.
 - ② Attach the attachment metal to the baby belt.
 - ③ Fit the attachment metal into the recesses of the seat surface.
- ※ Perform this procedure for both the left and right baby belts.

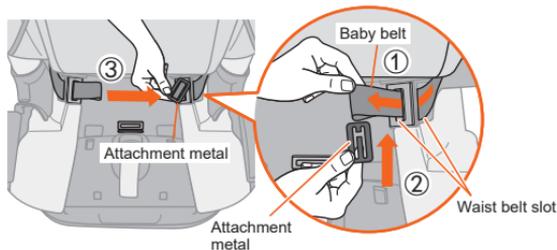


WARNING

- Make sure that the attachment metal is attached correctly to the baby belt.
- Fit the attachment metal firmly into the recesses of the seat surface and pull on the baby belt, etc. to check that it does not come loose.

HINT

If the baby belt is difficult to pass through the slots, insert your hand via the gap in the side of the main body and hold the baby belt from the back of the waist belt slots for easier baby belt passage.

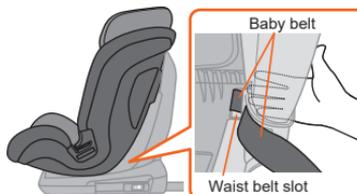


CAUTION

However, do not perform reclining operation with your hand inserted into the gap. This may pinch your fingers, possibly resulting in injury.

Returning to Group 1 mode

- 3 ① Pass the crotch belt through the crotch belt slot in the seat surface as illustrated, making sure that the buckle is oriented correctly.
- ② Attach the attachment metal to the crotch belt.
- ③ Fit the attachment metal into the recesses of the seat surface.

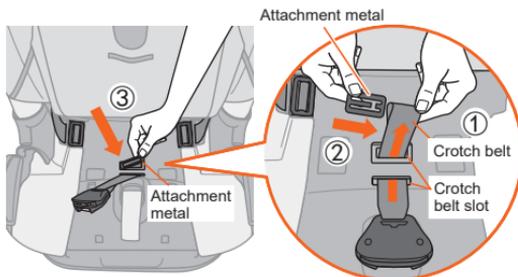


WARNING

- Make sure that the attachment metal is attached correctly to the crotch belt.
- Fit the attachment metal firmly into the recesses of the seat surface and pull on the crotch belt, etc. to check that it does not come loose.

HINT

If the crotch belt is difficult to pass through the slot, insert your hand via the hole next to the crotch belt slot and hold the crotch belt from the back for easier crotch belt passage.

※ Perform this procedure with the reclining angle adjusted to the upright position.

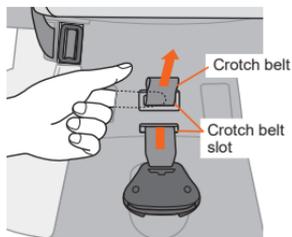


CAUTION

However, do not perform reclining operation with your hand inserted into the hole of the seat surface. This may pinch your fingers, possibly resulting in injury.

- 4** ① Pass the crotch belt through the seat urethane and attach the seat urethane to the seat surface.
② Pass the crotch belt and the baby belt through the seat cover and attach the seat cover to the seat surface.
(Refer to “Converting to Group 2 and Group 3 mode”.)
- 5** ① Pull down the adjustment lever on the headrest (Group 2 · Group 3) to the lowermost position.
(Refer to “Using in Group 2 and Group 3 mode : Adjusting the headrest position”.)
② Adjust the reclining angle to the most upright position.
(Refer to “Using in Group 1 mode : Using the reclining function”.)
- 6** ① While pulling up the adjustment lever on the back of the main body (Group 1) to the highest position,
② Pass the left and right shoulder belt cover attachment loops from the front of the main body through the shoulder belt slots,
③ Attach the left and right shoulder belt cover attachment loops to the adjustment shaft.

Adjustment lever on back of main body (Group 1)

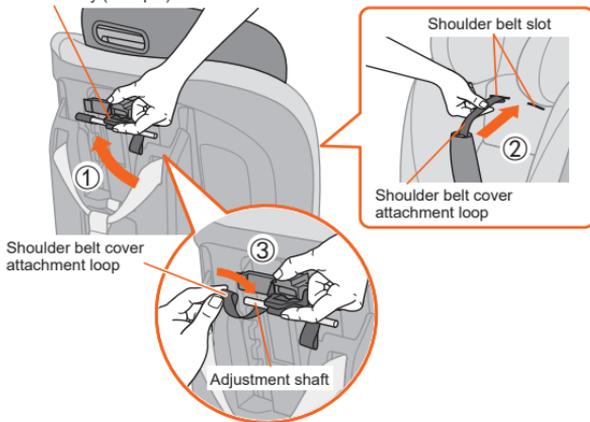

Returning to Group 1 mode

- 7** ① Pass the left and right baby belts through the shoulder belt covers.
② While pulling up the adjustment lever on the back of the main body (Group 1),
③ Pass the left and right baby belts through the shoulder belt slots, making sure they are not twisted.

Shoulder belt cover



Pass the baby belts so they are not twisted.



② Adjustment lever on back of main body (Group 1)



- 8** ① Open the user manual storage pocket and take out the belt adjustment metal.
② Attach the left and right baby belts to the belt adjustment metal, making sure they are not twisted.

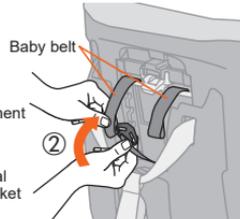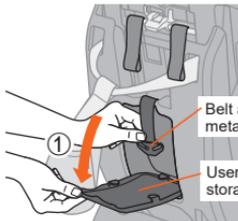


Make sure that the baby belt is attached properly.



- 9** Pass the buckle through the inner cushion and attach the inner cushion.

Inner cushion

Buckle

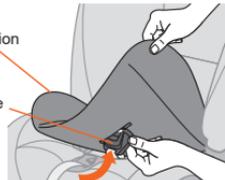

Attaching and removing the covers


Attaching and removing the head cover

- ① Remove the baby belt and the shoulder belt covers from the shoulder belt slots. (Refer to "Converting to Group 2 and Group 3 mode".)
 - ② Pull up the headrest. (Refer to "Using in Group 2 and Group 3 mode : Adjusting the headrest position".)
 - ③ Remove the head cover.
- ※ **Attach the head cover by reversing the removal procedure.**



Attaching and removing the seat cover

- ※ Remove the seat cover starting from the lower side.
- ① Unhook the baby belt from the belt adjustment metal and pull out the baby belt from the shoulder belt slots. (Refer to "Converting to Group 2 and Group 3 mode" and "Returning to Group 1 mode".)
 - ② Remove the seat cover from the seat surface. (Refer to "Converting to Group 2 and Group 3 mode" and "Returning to Group 1 mode".)
 - ③ Pull out the upper side of the seat cover from the gaps on the left and right of the main body.
 - ④ Release the two hooks on the back side of the seat cover and remove the seat cover.

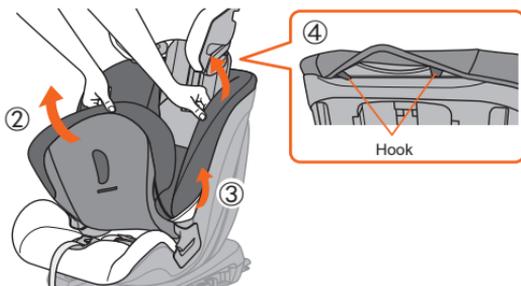

- ※ **Attach the seat cover by reversing the removal procedure.**

Maintenance method

Washing the seat cover and other sewn parts

Be sure to follow the washing instructions and cautions below.

- Follow the instructions noted on the washing label sewn onto the sheet cover.
- Wash by hand with cold or lukewarm water.
- Do not use bleach.
- Use a neutral detergent. Do not use detergent containing fluorescent brightener or bleach. This may cause chapped skin or a rash.
- Do not use an iron.
- Do not dry clean.
- After washing by hand, wring out lightly. If wrung out strongly, wrinkles may remain.
- After wringing out lightly, arrange the shape and dry in the shade.
- Do not use a spin or tumble dryer after washing.
- Color fading may occur due to the nature of the product.

Maintenance of the main body and baby belt

Normally wipe clean with a well-wrung wet (water) cloth. When extremely dirty, remove the dirt using a solution of neutral detergent diluted with water, then wipe with a wet (water) cloth and dry in the shade.

Urethane materials

The dyestuff used in the seat cover and other sewn parts may transfer to the urethane materials on the back of these parts. However, this is not a problem for quality or safety.



WARNING

Do not use undiluted neutral detergent, gasoline, benzene or other organic solvents when cleaning. These may damage the main body and baby belt, which is dangerous to the child.

Storage and disposal

Storage

Main body

When the child car seat will not be used for a long period of time, uninstall it and store in a well-ventilated place out of direct sunlight and away from children.

User manual

Be sure to read and understand this user manual before use. Always keep this user manual in the user manual storage pocket on the back of the main body.

Disposal

- When disposing of the child car seat, follow the standards of your municipality or region.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.

Standard service life

The “standard service life” of this product is “ten years after new purchase”. Once this standard service life has passed, material aging may prevent the child car seat from functioning properly, which is dangerous to the child. To avoid unforeseen circumstances, refrain from use past the standard service life.

- Always make sure to store the receipt (proof of purchase) issued by the dealer as a record of the new purchase date.
- Even within the standard service life, the product may malfunction due to use, environment and storage conditions, and quality is not guaranteed during this period. Repairs past the warranty period of “one year from the date of purchase” noted on the warranty card will entail a charge.
- For reasons of overall product safety, repair of products past the standard service life cannot be accepted.
- Refrain from reusing products with an unknown usage history.

Combi

SAVETREK

Combi Corporation

178836030 20.04