
Combi

Combi Child Car Seat Joytrip Advance Plus

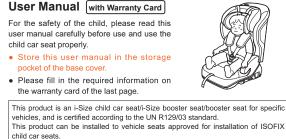

However, this does not mean that this child car seat can be installed to any vehicle seat equipped with ISOFIX anchors (bars).

When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to see if it is compatible with ISOFIX size class. [Child seat mode]

 Applicable child year, height and weight: 15 months or older with a height of 76 cm to 105 cm and a weight of up to 20 kg

[Junior seat mode]

- Applicable child height: Height of 100 cm to 150 cm
- •This mode is only suitable for vehicles equipped with 3-point seatbelts approved under UN R16 standard or other equivalent standards.

A DANGER	Do not use the child car seat if the child does not meet the following conditions: [Child seat mode] Applicable child year, height and weight: 15 months or older with a height of 76 cm to 105 cm and a weight of up to 20 kg [Junior seat mode] Applicable child height: Height of 100 cm to 150 cm
	To avoid causing stress to the child, avoid continuous long-time usage and

CAUTION To avoid causing stress to the child, avoid continuous long-time usage and give the child a break from the child car seat about once every hour.

Before Use

> Using Child Seat Mode

Using Junior Seat Mode

> Maintenance and Other

Table of Colntents

Before Use

Before Use	2
Name of Parts	3
Use Conditions	5
Applicable Vehicle Seats	6
Types of Vehicle Seatbelts and Precautions for Use (When Using Seatbelts)	
Inapplicable Vehicle Seats	8
For Safe Use of the Child Car Seat	10
Assembling	18

Using Child Seat Mode

Preparation of Installation	21
Installing to the Vehicle	23
Checklist after Installation	29
Uninstalling from the Vehicle	31
Adjusting the Baby Shoulder Belt and Head Guard Positions	32
Seating the Child	34
Unseating the child	37

Using Junior Seat Mode

Changing to Junior Seat Mode	42
Preparation of Installation	44
Installing to the Vehicle	45
Seating the Child	47
Checklist after Installation	50
Returning to Child Seat Mode	51

Maintenance and Other

Using the Inner Cushion	52
Attaching and Removing the Belt sleeve	53
Attaching and Removing the Covers	52
Changing to Storage Mode	57
Storing the Child Car Seat in Storage Mode	59
Carrying the Child Car Seat in Storage Mode	60
Maintenance Method	61
Storage and Disposal	62

Before Use

Thank you for purchasing this Combi child car seat.

For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

<About using second-hand child car seats>

- Never use a child car seat with an unclear usage history, especially one with an unclear accident history.
- Never use a child car seat if it has cracks, large scratches or loose fasteners. A strong
 impact may have been applied to the child car seat due to a collision or dropping it.

The child car seat is designed to reduce injury to child in case of traffic accident, etc. However, there is no guarantee that the child car seat can com-

- pletely protect the child from injury. A child using the child car seat must be
- accompanied by an adult.

Labels


The descriptions in this manual use the labels DANGER, WARNING and CAUTION to indicate important items for safe and proper use of the child car seat. These are very important items that indicate potential consequences if not followed properly, and are categorized according to the level of severity. Always make sure to follow these items.

Label	Label contents		
	mproper handling will result in imminent risk of death c serious injury.		
	Improper handling may result in death or serious injury.		
	AUTION Improper handling may result in injury or damage to pro erty.		
HINT	Useful hints for using the child car seat.		

Name of Parts

Check that all parts are present before use.

- •Fill in the following items on the warranty card of the last page before use.
 - Product name and lot No. (noted on the sticker attached to the back side of the hear guard)
 - (2) Customer's name, address and telephone number.
 - ③ Dealer's name
- •Store the receipt (proof of purchase) together with this manual.

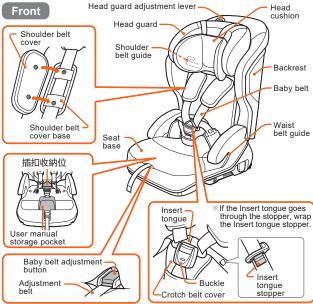

※ This manual uses simplified illustrations to help users easily understand operation and handling, and there may be slight differences from the actual product.



Use conditions

The child car seat is used in the following modes according to the weight of the child.

Mode	Child seat mode	Ju	inior seat mod	le
Use status	Using the head cushion (head part)			
Conditions	15 months or older with a height of 76 cm to 105 cm or a weight of up to 20 kg.	Height of 100 cm to 150 cm		
How to restrain the child	Restrain the child with a baby belt.	Store the baby belt and restrain the child directly with the vehicle seatbelt.		
How to fasten the child car seat in the vehicle	Fasten the child car seat in the vehicle seat with the ISOFIX connector and top tether.	Fasten the child car seat in the vehicle seat with the ISOFIX connector, top tether and a vehicle seatbelt that restrains the child.	Fasten the child car seat in the vehicle seat with the ISOFIX connector and a vehicle seatbelt that restrains the child.	Fasten the child car seat in the vehicle seat with a vehicle seatbelt that restrains the child.



Do not use the child car seat if the child does not meet the following conditions: [Child seat mode]

Applicable child year, height and weight: 15 months or older with a height of 76 cm to 105 cm and a weight of up to 20 kg.

[Junior seat mode]

Applicable child height: Height of 100 cm to 150 cm

This child car seat can be installed to vehicle seats approved for installation of ISOFIX child car seats.

However, this does not mean that the child car seat can be installed in any vehicle equipped with ISOFIX anchors (bars).

When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to make sure the ISOFIX size classes noted below are supported. Vehicle compliance can be checked at the following website.

ISOFIX size classes of this product

Height of the child	Anchors	Height of the child	Anchors
76 cm to 105 cm	F2X	100 cm to 150 cm	B2

When using the child seat mode (Height of 76 cm to 105 cm)

 
ISOFIX anchoring system

ISOFIX anchors are metal fixtures (bars) provided between the vehicle backrest and seat in order to install an ISOFIX child car seat. The name and position may differ according to the vehicle, so always check the user manual of the vehicle.



Top tether anchoring system

Top tether anchors are metal fixtures (bars) equipped with the vehicle in order to secure the top tether hook. The name and position may differ according to the vehicle, so



<Luggage space>



<Floor>



<Rear parcel shelf>



<Ceiling>



When using the junior seat mode (Height of 100 cm to 150 cm)

Depending on the type of seatbelt, the child car seat may not be able to be installed or may be installed differently.

This mode is only suitable for vehicles equipped with a 3-point seatbelt approved under UN R16 standard or other equivalent standards.

- Be sure to install the child car seat on a vehicle seat with a 3-point seatbelt.
- Never install the child car seat on a vehicle seat with a 2-point seatbelt. Installing the child car seat on such a vehicle seat may prevent the child car seat from functioning properly, which is dangerous to the child.

2-point seatbelt

As shown in the figure, a seatbelt that does not have a shoulder belt and supports the body at two points on the right and left of the waist belt.

 


NGE



3-point seatbelt


As shown in the figure, a seatbelt that supports the body at three points: the right and left sides of the waist belt and the shoulder belt.



Types and characteristics of seatbelts (How to distinguish them)		Precautions for installation
	Pull the seatbelt slowly to move it in and out freely, and pull it vigorously to lock it.	Slowly pull out the seatbelt and attach the child car seat.
	If you pull out all the seatbelt and then let it rewind, the child car seat securing function will work and you will not be able to stretch the seatbelt anymore. (It will be released when the entire seatbelt is rewound.)	It is dangerous to completely pull out the seatbelt. Return the seatbelt once to cancel the child car seat securing before attaching the child car seat.
Other	Seatbelts that do not apply to the above.	The other seatbelts cannot be used.

% If you are unsure of the type of seat belt, please contact your automobile manufacturer.

 Inapplicable Vehicle Seats



- We do not recommend mounting car seats on the front passenger seat regardless of if there are airbags or not; thus we have not conducted a vehicle model compatibility survey on the front passenger seat.
- Vehicle seat equipped with a front airbag.
 - ...Installation is possible to a vehicle seat with only a side airbag.



- Extreme bucket seat
 - ...Vehicle seat that goes deep in the center of the seat base.



• Vehicle seat facing backwards or sideways relative to driving direction.

Continue



 Vehicle seat with a seat an extremely uneven surface that prevents stable installation.



- · Vehicle seat with extremely protruding vehicle headrest
 - ...Due to the shape of the vehicle headrest, it is not possible to recline the back of the seat or adjust the headrest of the child car seat .
 - If the headrest of the vehicle seat can be removed, which enables reclining or adjusting the headrest, the child car seat can be attached to such a seat.
- % Only when used in child seat mode
- Vehicle seat that is not equipped with ISOFIX anchors (bars) and top tether anchor.





- % Only when used in the junior seat mode.
- Vehicle seat that is not equipped with a vehicle seatbelt.



- % Only when used in the junior seat mode.
- Vehicle seat with a 2-point seatbelt.



- % Only when used in the junior seat mode.
- Vehicle seat with an extremely short vehicle seatbelt.



- % Only when used in the junior seat mode.
- Vehicle seat with a passive seatbelt.
- * Passive seatbelt
 - ...A device that automatically attaches the vehicle seatbelt when you sit in a vehicle seat and close the door. (Automatic seat belt)



- % Only when used in the junior seat mode.
- Vehicle seat with a vehicle seatbelt coming from the middle of the seat
 - ...Vehicle seat where the seatbelt comes from a position before the waist belt guide of the child car seat.



Continue (-

Improper handling will result in imminent risk of death or serious injury.

• Do not seat a child who does not satisfy the use conditions, or install the child car seat to an inapplicable vehicle seat.



 Do not install the child car seat to a vehicle seat equipped with a front airbag.

In case of collision, the deploying airbag will strongly impact the child seat, which is dangerous to the child.

...Installation is possible to a vehicle seat with only a side airbag.



- Do not allow the child to stand, crouch or kneel on the child car seat.
- In the child seat mode, make sure that the crotch belt cover and baby belt properly fit the child when the child is seated, the right and left tongues are inserted into the buckle and the insert color indicator has changed to green.



• In the child seat mode, this product cannot be fastened with a vehicle seatbelt.

For Safe Use of the Child Car Seat

• Do not install the child car seat by a method other than described in this user manual and indicated on the main body.



 When you sit your child in the junior seat mode, make sure that the vehicle seatbelt insert tongue is properly inserted into the vehicle buckle and will not come out.



Evacuation in case of emergency

In case of accident or other emergency, an accompanying adult should press the buckle button to release the baby belt (the vehicle seatbelt in the junior seat mode) and evacuate the child from the vehicle immediately.



Before Use



Improper handling may result in death or serious injury.

 The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible.



• Do not modify or improperly repair the child car seat.



 If a two- or three-door vehicle has a person in the back seat, do not attach the child car seat to the front passenger seat. It will prevent the child from escaping in

an emergency.



 Do not leave the child alone in the vehicle. On days with strong sunlight, the temperature inside the vehicle may become high and the child may become dehydrated. It may also cause unexpected accidents. A child using the child car seat must be accompanied by an adult.



 Keep the child chair fastened with the connector and top tether hook (in the child seat mode) or the vehicle seatbelt (in the junior seat mode) even when the child is not sitting. Otherwise, the child car seat may roll inside the vehicle, interfering with driving in case of sudden braking.



In the child mode,

always keep the baby belt fitting snug-

ly. A loose belt may become wrapped around the child's neck and suffocate the child.



. In the child mode,

if the buckle becomes jammed with dirt, food crumbs or other objects and cannot be fastened securely or is too stiff to release easily, contact Combi's Customer Service Center for repair.



. In the child seat mode,

the child may press the buckle button. Make sure that the insert tongue is not out of the buckle. If it comes out, the baby belt will not work properly and may become wrapped around the child's neck.



In the child seat mode,

if the baby belt is damaged, contact Combi's Customer Service Center for repair.



When using seat mode for young children.

Be careful not to clip the child's hands and feet and clothes when inserting the insert tongue.

• When using seat mode for young children.

Product seat cushion contains magnetic, do not use this product if children have a pacemaker, or artificial lung, or wear an ECG, or any other internal medical device.

. When using seat mode for young children.

There may be a foreign object attached to the insert tongue magnet. Please confirm that there is no foreign object on the insert tongue before use.

. When using seat mode for young children.

Do not get close to article which are easily damaged by magnet. (Such as magnetic cards, watches, electronic equipment, etc.)"

In the Junior seat mode,

do not install the child car seat in a seat with the vehicle seatbelt damaged in any way.



• In the Junior seat mode,

when using a vehicle seatbelt with a child seat fastening function, do not enable fastening. The belt will be too tight around the child and their chest will be compressed.



Improper handling may result in injury or damage to property.

 Make sure the child car seat does not get jammed between the vehicle doors or other movable parts.

X

• Exposing the child car seat to direct sunlight may case the main body, insert tongue and other parts to become hot and burn the child. Touch each part and check that it is not too hot before seating the child.



• Depending on the shape and surface material (leather, etc.) of the vehicle seat, scratches or marks may remain on the vehicle seat after installation. • Do not use the child car seat with the seat cover and other sewn parts or the urethane and other cushioning removed. Also do not replace these parts with parts not specifically authorized by Combi for this product. (This may nega tively affect safety performance in the event of collision.)



 Users should be especially careful when fastening or adjusting the child car seat to prevent fingernails or artificial nails from becoming jammed in gaps or moving parts.



• Do not install, remove or carry the child car seat with a child on it.

For Safe Use of the Child Car Seat

 If you have any unfastened objects in the vehicle, be careful as they may hit the child in the event of any sudden braking or a collision.



 If you use the child car seat as a normal chair, the child sitting may fall off and be injured. Only use the child car seat as described in this user manual.



 Do not install a child car seat on a vehicle seat with cushions on it. The child seat will not be firmly fastened.



- Do not operate or adjust the child car seat while driving. Also, make sure that other children on board do not touch the child car seat.
- Do not expose the child car seat to wind or rain.
- Do not carry the child car seat with the baby belt.

Daily inspection

To ensure proper function of the child car seat, check the following items before use:



Check that the baby belt is adjusted to the correct position.

Check that the connector adjustment lever color indicators show the locked condition ('red' is not visible).

Check that the connectors are fastened securely to the ISOFIX anchors of the vehicle.

Check that the connector release button color indicators show the locked condition ('green' is visible).


. Check that the baby belt is not twisted or loose. Always pull down the baby waist belt to firmly

* The illustration shows an example of the child seat mode.

Before Use

Assembling

This product is shipped from the factory with the Backrest and Seat base separated.

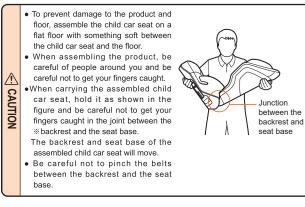


Installing the backrest

Place the backrest and seat base on a flat floor with something soft between the floor and the backrest and seat base.






- $2^{\,()}$ Align the backrest hook with the seat base joint. $2^{\,()}$ With the backrest hooks aligned with the seat base joints, slowly raise the backrest until it touches the seat base
 - * When raising, go over the two protrusions. (Refer to Backrest usage range.)

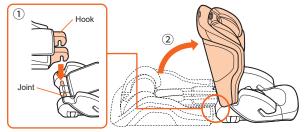

Backrest usage range

 - 1 When you raise the backrest from the horizontal position, you will go over the first protrusion.
- 2 When you raise it further, you can go over the second protrusion and make the backrest self-supporting. Use the backrest in the range between the points where you go over the first and second protrusions.




Assembling

To ensure proper functioning of the child car seat, check the following items before use: Failure to do so may cause the child car seat to function improperly, which is dangerous to the child. Make sure that the baby belt, adjustment belt, tether belt and other belts are not caught in the joint between the backrest and seat base. The baby belt is caught in the joint. The baby belt is caught in the joint.

% The removal is the reverse procedure from installing the backrest.

Attaching the seat cover installing rubber ring

Turn up the bottom of the head guard cover and attach the two seat cover installing rubber rings on the right and left side to attach the hooks for the seat cover installing rubber rings.

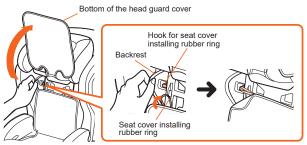

Preparation of Installation

 
- CANGER
- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.
- This product cannot be fastened using the vehicle seatbelt in the child seat mode.
- Do not install the child car seat to a vehicle seat equipped with a front air bag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.
- ①Park the vehicle in a flat location where all doors can be opened.



② Slide the front seat forward and tilt the backrest to the front to create space for easier installation to the vehicle.



- ① Remove the vehicle headrest if possible.
 - % Store the removed vehicle headrest in the trunk or cargo compartment. 2 Recline the vehicle seat backrest slightly if possible.



HINT

If the vehicle's application list includes the words "the Top tether should be installed on the vehicle's headrest", please adjust the vehicle's headrest to the lowest possible height and install it on the vehicle's headrest through the Top tether.

Preparation of Installation



 
HINT

Use the supplied ISOFIX insertion guides for easier child car seat installation when ISOFIX anchors are hidden by the vehicle seat and difficult to see. However, note that attaching the ISOFIX connectors may increase the gap between the back of the base and seat backrest for some vehicle seats. In these cases, install the child car seat without using the ISOFIX connectors.




Using Child Seat Mode

Place the child car seat on the vehicle seat, and pull the top tether hook and tensioner over the vehicle seat.




Pull out the ISOFIX connector.

- 2 1 While pulling the side connector adjustment lever,
 - (2) pull out the ISOFIX connector as far as possible.
 - (3) Release the connector adjustment lever and check that the indicator A shows the locked condition ('red' is not visible).
 - * Perform the above operation on the right and left sides.

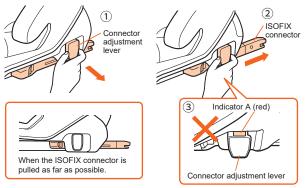

Attach the ISOFIX anchors to the connectors.

- ① Fit the ISOFIX connectors onto the right and left ISOFIX anchors of the vehicle seat and push the ISOFIX connectors until they lock with a 'click' sound.
- ② Check that the right and left color indicators B show the locked condition ('green' is visible).

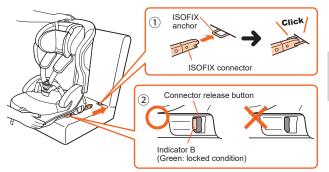


A Push the child car seat base until the back of the child car seat touches the vehicle seat backrest.

① While pulling the connector adjustment lever, push the child car seat base firmly on each side until the back of the child car seat touches the vehicle seat backrest. Adjust the position so that the back of the child car seat touches the vehicle backrest evenly on the right and left.

Continue

 ② Remove your hand from the lever and check that the color indicator A shows the locked condition (red is not visible).



HINT

- When pushing the child car seat, adjust the position while checking the length of the ISOFIX connector so that the difference between the right and left remains small.
 - In some vehicles there may be a gap between the vehicle seat backrest even when the back of the child car seat is pushed firmly.

Adjust the installing position so that there is no gap between the child car seat and the

 


If the vehicle seat backrest cannot be reclined, adjust the reclining angle of the child car seat to make the gap between the back of the base and vehicle seat as small as possible.

Backrest usage range

WARNING

- ① When you raise the backrest from the horizontal position, you will go over the first protrusion.
- ② When you raise it further, you can go over the second protrusion and make the backrest self-supporting. Use the backrest in the range between the points where you go over the first and the second protrusions.



If the backrest of the vehicle seat can be reclined, adjust the reclining angle of the vehicle seat so that the backrest of the child car seat is set to the angle shown in the Backrest usage range. If the backrest tilts further than the Backrest usage range, the child car seat will not function properly in case of a collision, which is dangerous to the child.
If the child car seat is used with an extremely large gap between the child car seat and the vehicle seat, the child car seat will not function properly in an

accident, which is dangerous to the child.

6 While pressing the tensioner release button, pull the tether belt to loosen.



Secure the top tether hook to the top tether anchor.
The illustration shows where the top tether anchor is positioned on the back of the vehicle seat.



<Luggage space> <Rear parcel shelf>

<Floor>

<Ceiling>










Pull the tether belt until the tensioner color indicator shows green; then strongly tighten the belt.

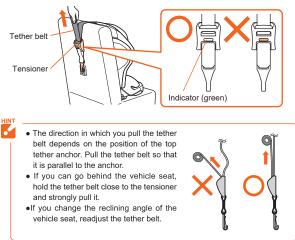




After installation, check the following to make sure that the child car seat is installed properly.

- Check that there is no large gap between the backrest of the vehicle seat and the child car seat.
- 2 Check that the ISOFIX connector indicator B shows 'green'.
- 3 Check that the connector adjustment lever indicator A does not show 'red'.
- ④ Hold the child car seat and try to rock it in all directions to make sure it is installed securely.
- (5) Check that the right and left sides of the child car seat are parallel to the vehicle seat. (The ISOFIX connector should be tightened evenly on both sides.)
- 6 Check that the tensioner indicator shows 'green'.

If you have any questions, please contact Combi's Customer Service Center.

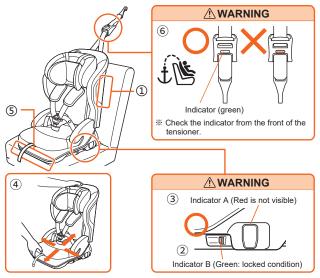


Checklist after Installation

HINT


- If the armrests of the vehicle seat may hide the indicator and making it difficult to check visually : Insert the ISOFIX connectors into the ISOFIX anchors and confirm that the right and left connectors lock with a 'click' sound. After that, make sure that the ①, ④,⑤and ⑥ in Checklist after Installation are properly performed.
- If the shape of the seat base may make it impossible to operate the connector adjustment lever: Adjust the length of the ISOFIX connector so that it touches the backrest of the vehicle and insert the ISOFIX connectors into the ISOFIX anchors to lock them. Then, confirm that the right and left ISOFIX connectors lock with a 'click' sound. After that, make sure that the ①, ④, ⑤ and ⑥ in Checklist after Installation are properly performed.

Uninstalling from the Vehicle

 While holding down the Release button on the tensioner, pull on the tether belt to loosen it.
 Disconnect the top tether hook from the top tether.



 - 1 Press the right and left connector release buttons with your middle and ring fingers to remove the ISOFIX connector from the ISOFIX anchors.
 - ② Check that the indicator B shows the unlocked condition ('green' is not visible)



HINT

When the ISOFIX connector is hard to release:

When the ISOFIX connector is installed properly, the repulsion force of the vehicle seat may make it difficult to release the ISOFIX connector. If it is difficult to release, use the following method to reduce the repulsion force from the vehicle seat, one side at a time, to release it.

- While pushing the seat base into the vehicle backrest, operate the connector adjustment lever to extend the ISOFIX connector.
- 2 Push the connector release button.




Adjusting the Baby Shoulder Belt and Head Guard Positions


Change the baby shoulder belt and head guard positions according to the child's growth.

The baby shoulder belt and head guard positions can be adjusted in 11 levels.

- ① While pressing the back side of the baby belt adjustment button,
 - (2) Strongly pull both the right and left baby belts forward to loosen the baby belts.
 - ※ Do not pull on the shoulder belt covers, as this will not loosen the baby belts.

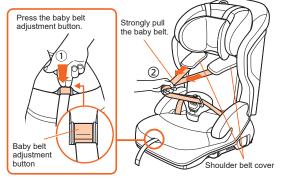

- $2^{(1)}$ While pulling the head guard adjustment lever, adjust the height of the head guard. $2^{(2)}$ Release the head guard adjustment lever in the proper position.
 - - 3 Move the head guard vertically to check that it is fastened.

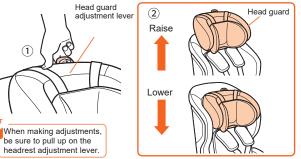

Baby shoulder belt position reference

Adjust the head guard height so that the baby shoulder belt is at or slightly above the child's shoulder.





Adjusting the baby shoulder belt position will tighten or loosen the baby belt. Do not adjust the baby shoulder belt position once the child is restrained by the baby belt.




When adjusting the baby shoulder belt position, keep the child's hands and fingers away.

Also, pay attention to other passenger's hands.


Otherwise, their hands or fingers may get caught and they may be injured.

Seating the Child

- (1) While pressing the back side of the baby belt adjustment button.
 - (2) Pull both the right and left baby belts forward to loosen the baby belts.
 - % Do not pull on the shoulder belt covers, as this will not loosen the baby belts.

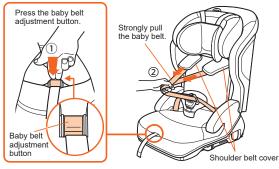

- ① Press the buckle button and remove the insert tongue from the buckle.
- 2^{\odot} Seat the child deeply into the child car seat and pass the child's arms through the right and left baby belts.
 - ③ Make sure that the right and left baby belts are not twisted.

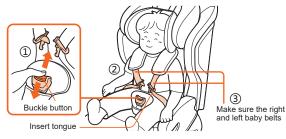

- If the child is wearing a thick coat, heat up the car and take the coat off them in order to restrain them firmly on the child car seat.
- Do not seat the child as shown in the figures below.
 It prevents the child car seat from functioning properly, which is dangerous to the child.







- 1 Match the right and left insert tongues and insert them into the buckle until they lock with a 'click' sound.
 - ② Make sure that the buckle color indicator changes to 'green'.





- Make sure that the insert tongue of the child car seat is inserted firmly into the buckle, and the color indicator is green.
- Do not use the child car seat if the indicator does not change to green when the insert tongue is inserted into the buckle.

HINT

DANGER

WARNING

- The buckle button is designed to be too stiff for a child to release.
- The right and left insert tongues must be matched properly in order to insert them into the buckle.

Seating the Child

3)

Adjustment belt

- 1 Pull down the baby waist belt to firmly hold the pelvis position.
 - (2) The baby shoulder belt should always be located in the center of the child's shoulder.
 - ※ For height adjustment of the baby shoulder belt, refer to Adjusting the Baby Shoulder Belt and Head Guard Positions on page 31.
 - 3 Pull the adjustment belt toward you.
 - ④ Adjust the length of the baby belt so that there is an adult palm's space between the child's body and the baby belt.
 - Adjust so that there is a palm's space between the child's body and the baby belt.
 (2) Baby shoulder belt

(1)

Baby waist belt

- Check that the baby belt is not twisted or loose.
- Always pull down the baby waist belt to firmly hold the pelvis position.


Always adjust the baby belt to the proper length. If the baby belt is not fit to the child's body, the child may tumble out of the child car seat in the event of collision or a loose baby belt may wrap around the child's neck and result in suffocation.

MARN

Unseating the Child

- ① While pressing the back side of the baby belt adjustment button,
 - ② Pull both the right and left baby belts forward to loosen the baby belts.

 - ③ Press the buckle button and remove the insert tongue from the buckle.
 - ④ Unseat the child.

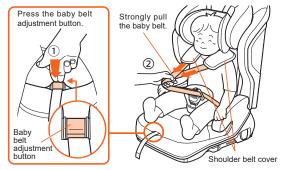

Using Junior Seat Mode

In the junior seat mode, you can install the child car seat in the following three ways.

Child height of 100 cm to 150 cm							
How to restrain the child	Store the baby belt and restrain the child directly with the vehicle seatbelt.						
How to fasten the child car seat in the vehicle	A		В		С		
	Install the child car seat in the vehicle seat with the ISOFIX connector, top tether and vehicle seatbelt.		Install the child car seat in the vehicle seat with the ISOFIX connector and vehicle seatbelt.		Use the vehicle seatbelt that restrains the child to fasten the child car seat in the vehicle seat.		
	Vehicle seatbelt	Use	Vehicle seatbelt	Use	Vehicle seatbelt	Use	
	Top tether	Use	Top tether	Non-use	Top tether	Non-use	
	ISOFIX connector	Use	ISOFIX connector	Use	ISOFIX connector	Non-use	
How to change	Follow steps 1 to 10 below.						
			Store the top tether and tether belt.(Refer to How to change the mode in case of fastening to the vehicle using method B or C on page 41.)				
					"Store the ISOF (Refer to How t mode in case o the vehicle usin page 42.)"	o change the f fastening to	

How to change the mode in all fastening methods

Remove the head cushion.

(Refer to Attaching and removing the head cushion on page 51.)


Remove the shoulder belt cover from the shoulder belt cover base. 2 (Refer to Attaching and Removing the Covers on page 55.)

Remove the belt sleeve.

(See "Removal and Installation of Belt Sleeves" on page 56)


Pull the baby belt forward.

- While pressing the back of the baby belt adjustment button under the seat cover.
- (2) Hold both the right and left baby belts and pull them forward strongly until they cannot be pulled out anymore.

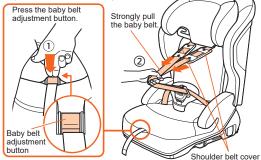

5 While pulling the head guard adjustment lever, pull the head guard up to the highest level.

 Pull the baby belt forward so that the baby belt adjustment belt is about 5 cm long.




HINT

Depending on the length of the baby belt, the head guard may not lift up to the top level. In that case, pull out the baby belt again and lift up the height of the head guard to the top level.

Using Junior Seat Mode

Remove the right and left head guard installing rubber rings.

 
② Turn up the lower part of the head guard cover and remove the right and left seat cover installing rubber rings.



① Store the shoulder belt cover base in the slit on the backrest.

2 Turn up the seat base cover and urethane cushioning and store the insert tongue in the insert tongue storage pocket.

③ Return the urethane cushioning to the original position so that the baby belt does not twist.

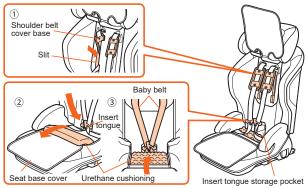

① Attach the right and left seat base cover installing rubber rings. 2 Attach the right and left head guard cover installing rubber rings.




1 Remove the two hooks on the seat cover front side.

9 (1) Remove the two house on the central standard to pull the buckle (2) Turn up the seat cover and urethane cushioning to pull the buckle out and install the buckle in the user manual storage pocket.


③ Pull the crotch belt cover to the back of the seat base cover.

④ Attach the two hooks on the seat cover front side.

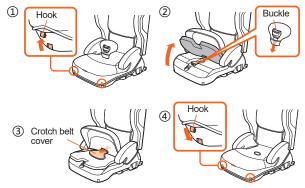

Changing to Junior Seat Mode

How to change the mode in case of fastening to the vehicle using method B or C

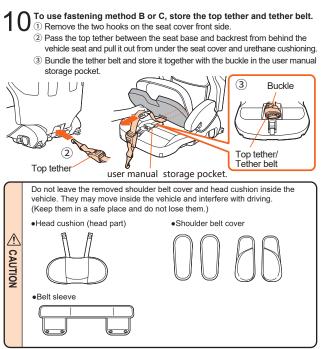


Using Junior Seat Mode

How to change the mode in case of fastening to the vehicle using method C


When used with Fastening Method C, the ISOFIX connector should be stowed.

- 1) While pulling the side connector adjustment lever,
- 2 Push the ISOFIX connector until it stops.
- ③ Release the connector adjustment lever and check that the indicator A shows the locked condition ('red' is not visible).
- % Perform the above operation on the right and left sides.

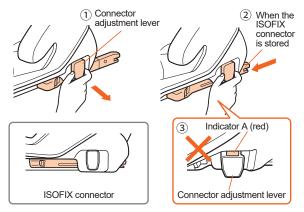

Preparation of Installation

 - Do not install the child car seat by a method other than described in this user manual and indicated on the main body.



Do not install the child car seat in a seat whose vehicle seatbelt is damaged in any way.

Prepare the installation of the child car seat in the same way as that of the child seat mode.

(Refer to Using Child Seat Mode/Preparation of Installation on page 21)

Installing to the Vehicle

In Junior seat mode, you can install the child car seat in the following three ways.

Child height of 100 cm to 150 cm							
How to restrain the child.	Store the baby belt and restrain the child directly with the vehicle seatbelt.						
	A	В	С				
How to fasten the child car seat in the vehicle.	Install the child car seat in the vehicle seat with the ISOFIX connector, top tether and vehicle seatbelt.	Install the child car seat in the vehicle seat with the ISOFIX connector and vehicle seatbelt.	Secure the child to the vehicle seat using the vehicle seatbelt that is restraining the child.				

How to install in A

Install the ISOFIX connector and top tether.

Perform Steps 1 to 8 of Installing to the Vehicle on pages 22 to 27. Check the Checklist after Installation on pages 28 and 29.

Fasten the child car seat with the vehicle seatbelt.

- Pull out the vehicle seatbelt.
 - 2 Pass the vehicle seatbelt through the shoulder area belt guide.
 - ③ Pass the vehicle seatbelt through the right and left waist belt guides.
 - ④ Pass the vehicle seatbelt through the shoulder area belt guide and then through the waist belt guides on the side near the vehicle buckle.
 - ④ Insert the insert tongue into the vehicle buckle until they lock with a 'click' sound.



WARNING

If using the ISOFIX connector interferes with installing the vehicle seatbelt or vehicle buckle, do not use the ISOFIX connector; install the vehicle seat only with the vehicle seatbelt.

If the vehicle buckle or insert tongue hits the child car seat body and the vehicle seatbelt becomes loose, the installation becomes unstable. Do not use the child car seat unless it is stable. If you have any questions, please contact Combi's Customer Service Center.

How to install in B

Install the ISOFIX connector.

Perform Steps 2 to 5 of Installing in the Vehicle on pages 22 to 27. Check 1 to s of the Checklist after Installation on pages 28 and 29.



Fasten the child car seat with the vehicle seatbelt.

How to install in C

Store the ISOFIX connector.

(Refer to How to change the mode in case of fastening to the vehicle using method C on page 42).



Fasten the child car seat with the vehicle seatbelt.

(Refer to Step 2 Fasten the child car seat with the vehicle seat belt on page 44.) % If the ISOFIX insertion guides disturb the installation, remove the ISOFIX insertion guides from the ISOFIX anchors. Remove the insert tongue from the vehicle buckle once, have your child sit deep in the child car seat and adjust the height of the head guard to suit your child. (Refer to Step 2 of Adjusting the Baby Shoulder Belt and Head Guard Positions on page 32.)

Continue



Head guard (Shoulder area belt guide) height reference

Adjust the head guard height so that the shoulder area belt guide is slightly above the child's shoulder.




The shoulder area belt guide adjusts the vehicle seatbelt (shoulder area) so that it is fastened in the correct shoulder position for the child. As the child grows and the shoulder area belt guide is lowered, readjust the height of the head guard.

NARNING

Seating the Child


- ① Pull the vehicle seatbelt forward.
- 2° Pass the vehicle seat belt through the shoulder area belt guide.
 - ③ Pass the vehicle seatbelt through the right and left waist belt guides.
 - ④ Pass the vehicle seatbelt that was passed through the shoulder area belt guide through the waist belt at the vehicle buckle side.
 - (5) Insert the insert tongue into the vehicle buckle until they lock with a 'click' sound.

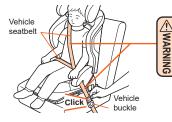

- Check that the baby belt is not twisted or loose.
- Always pull down the baby waist belt to firmly hold the pelvis position.

3 If the vehicle seatbelt is loose, pull the vehicle seatbelt (shoulder area) upward to adjust the tension.



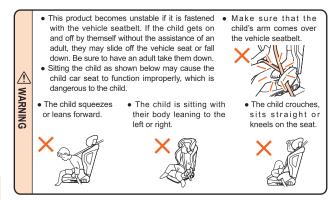

Checklist after Installation


After the child is seated and the vehicle seatbelt is fastened, check the following to make sure that the child car seat is installed properly.

Check ① to ⑩ for fastening method A.

Check ① to ⑨ for fastening method B.


Check 1 to 6 for fastening method C.

- ① Check that there is no large gap between the backrest of the vehicle seat and the child car seat.
- ② Check that the vehicle seatbelt has passed through the shoulder area belt guide, does not compress the child's neck and is not off the shoulder of the child.
- ③ Check that the vehicle seatbelt fits the child and is not twisted or loose.
- ④ Check that the vehicle seatbelt is around the child's pelvis position.
- ⑤ Check that the insert tongue of the vehicle seatbelt is securely inserted into the vehicle buckle and cannot be disconnected.
- 6 Check that the vehicle seatbelt passes through the right and left waist belt guides.
- Theck that the connector release button indicator B shows 'green'.
- (8) Check that the indicator A red part of the connector adjustment lever is not visible.
- ③ Check that the right and left sides of the child car seat main body and the vehicle seat are parallel. (The ISOFIX connector is not pushed further on only one side.)
- 10 Check that the tensioner indicator shows green.

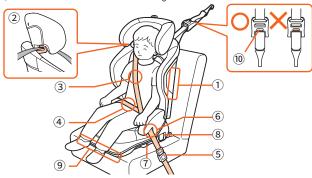


Returning to Child Seat Mode

Prepare the parts that were removed when changing to Junior Seat Mode To return to the child seat mode, (follow the reverse procedure of changing to Junior Seat Mode on pages 37 to 42).

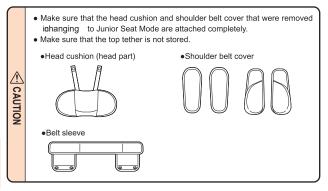

If you install the child car seat with the ISOFIX connector, top tether and vehicle seatbelt, it is unnecessary to return the top tether to the original position.

Using the Head Cushion

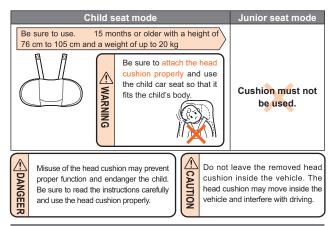

Attaching and removing the head cushion (head part)

Pull up the head guard.

(Refer to Adjusting the Baby Shoulder Belt and Head Guard Positions on page 31.) ⁽²⁾ To attach or remove the head cushion, use the two snaps on the back of the head

guard.

 


Attaching and Removing the Covers Continue



Attaching and removing the head guard cover

- Pull up the head guard to the top level. (Refer to Adjusting the Baby Shoulder Belt and Head Guard Positions on page 31.)
- 2 Remove the head guard installing rubber rings (one each for the right and left sides) from the back of the head quard.
- 3 Remove the head guard cover installing hooks (one each for the right and left sides) from the back of the head quard.
 - * A triangle arrow is placed as a mark.
- ④ Remove the hooks (two places from the rear upper section of the head quard cover).
- (5) Remove the head guard cover from above.
- ※ Installation is the reverse procedure from removal.




Head guard cover Hook Head guard cover installing rubber ring (5) 1 Head guard cover Head guard installing hook

Attaching and Removing the Covers

Attaching and Removing the backrest cover

- Remove the hooks (one for the left side and one for the right side) from the bottom of the backrest cover.
- 2 Remove the two hooks from the top of the backrest cover.
- ③ Remove the sides of the backrest cover from the backrest side groove of the child car seat body.
- ④ Pull out the top tether and tether belt from the run-through hole on the top of the backrest cover.
- % Installation is the reverse procedure from removal.




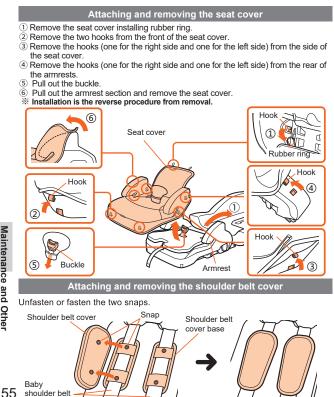

Attaching and Removing the Belt sleeve

Removal and Installation of waistband cover

- Removing the fixing rubber band of left and right seat surfaces and opening the seat surfaces;
- ② Remove the hooks (2 places on the left and right) on the belt cover, and remove the belt cover flaps wrapped around the left and right sides of the belt.
- ③ Removing the belt cover.
- \times When installing, please do it in the reverse order of the removal method.

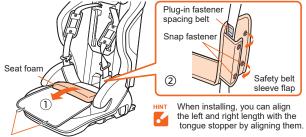


Fixing rubber band for seat cloth sleeve



Maintenance and Othe


Changing to Storage Mode

- Store the ISOFIX connector. (Refer to How to change the mode in case of fastening to the vehicle using method C on page 42.)
 - 2 Lower the head guard to the bottom.
 - ③ Loosen the baby belt. (Refer to Step 1 of Adjusting the Baby Shoulder Belt and Head Guard Positions on page 31.)
 - ④ Tilt the backrest until it is even with the seat base.
 - (5) Hold up the backrest to remove the hooks from the joints on the seat base.

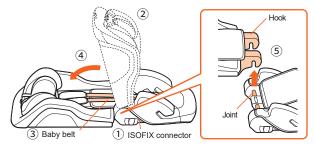


Maintenance and Other

 Put the seat base on the backrest as shown in the figure.




Put the tether belt to fit the recessed part before and after the seat base.



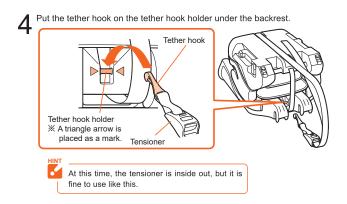

Tighten the tether belt.

 J * Tighten the tether belt so it does not wobble when lifting the child car seat.




Storing the Child Car Seat in Storage Mode

How to store the child car seat in storage mode

 - ① When storing the child car seat face down, keep the backrest on the bottom.
- (2) When storing the child car seat upright, keep the joint part on the bottom.
- When the child car seat is stored for a long time in the storage mode, recesses and wrinkles may remain in the head guard, backrest, seat base and other sewn products.
 - If you want to transport the child car seat in storage mode using your vehicle, be careful the child car seat does not fall down or turn over, endangering you while you drive.
 - Avoid storing the child car seat near any heat sources or at high temperatures such as inside the vehicle in the summer.
 - Do not store the child car seat with packages on it. It may cause failure or deformation.





Carrying the Child Car Seat in Storage Mode

When carrying the child car seat in the storage mode, hold it from below with both hands as shown. In this step, confirm that the child car seat is fastened with the tether belt so that it is not wobbling; confirm that the ISOFIX connector is completely stored.

- If you put the child car seat on the floor or the like, put it gently so as not to damage it. If you drop it or place it roughly, it will lead to damage, causing failure or deformation.
 Do not place it on any soil or any other
- dirty places. It may cause failure or deformation.

 If you carry the child car seat, make sure that it is fastened and is not wobbling.



Washing the seat cover and other sewn parts

Be sure to follow the washing instructions and cautions below.

- Follow the instructions noted on the washing label sewn onto the sheet cover.
- When using a washing machine, place the items in a laundry net. Failure to do so may result in fraying or other damage.
- Use the gentle cycle of the washing machine with cold or lukewarm water, or wash by hand.
- Do not use bleach.
- Use a neutral detergent. Do not use detergent containing fluorescent brightener or bleach. This may cause chapped skin or a rash.
- When using a horizontal washing machine (a washing machine with the drum facing horizontally or inclined), make sure the water level is sufficient.
- Color fading may occur due to the nature of the product.
- It is recommended to wash separately from other clothing and lightly colored items.
- Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
- Do not use an iron.
- Do not use a dryer or dry cleaning.

Maintenance of the main body and baby belt

Normally wipe clean with a well-wrung wet (water) cloth. When extremely dirty, remove the dirt using a solution or neutral detergent diluted with water, then wipe with a wet (water) cloth and dry in shade.

Urethane materials

- The dyestuff used in the seat cover and other sewn parts may transfer to the urethane materials on the back of these parts. However, this is not a problem for quality or safety.
- Urethane cushion materials for the seat base may not be washed.



Do not use undiluted neutral detergent, gasoline, benzene or other organic solvents when cleaning. These may damage the main body and baby belt, which is dangerous to the child.

Storage and Disposal

Storage

Main body

When the child car seat will not be used for a long period of time, uninstall it and store in a well-ventilated place out of direct sunlight and away from children.

User Manual

Be sure to read and understand this user manual before use. Always keep this user manual in the storage pocket undre the seat cover.

Disposal

- When disposing of the child seat, follow the standards of your municipality or region.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.

Standard service life

The Standard Service Life of this product is ten years after new purchase.

Once this standard service life has passed, material aging may prevent the child car seat from functioning properly, which is dangerous to the child. To avoid unforeseen circumstances, refrain from use past the standard service life.

- Always make sure to store the receipt (proof of purchase) issued by the dealer and this user manual as a record of the new purchase date.
- Even within the standard service life, the product may malfunction due to use, environment and storage conditions, and quality is not guaranteed during this period.
- For reasons of overall product safety, repair of products past the standard service life cannot be accepted.
- · Refrain from reusing products with an unknown usage history.

Combi Combi Child Car Seat Joytrip Advance Plus ISOFIX

Combi Corporation

200466070