

Citta Plus

Instruction manual

192286070

IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.


Using safety harness

1. Buckle: When you hear a "click" sound, the safety harness is securely buckled.
2. Length adjustment of safety harness Lengthen:
To loosen it: While holding the slide buckle, pull to loosen the belt in the direction of b, and then adjust the upper and lower shoulder belts to the same length.
To fasten it: While holding the slide buckle, pull to tighten the belt in the direction of a, and then adjust the upper and lower shoulder belts to the same length.

Note: For the safety of children, please make sure that the safety harness is securely buckled when using the stroller.

WARNING



1. Always use the restraint system.
2. Do not cross or adjusting it too tight the shoulder belts with each other when securing the shoulder to the insert plastic. Otherwise excessive pressure may be caused to child's neck.
3. The magnet in the buckle may impact the operation of a pacemaker. Do not allow the child with a pacemaker to ride on this product.

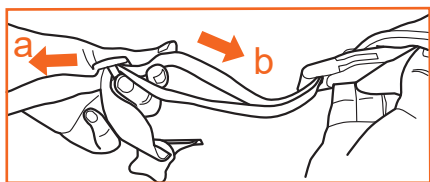

Instructions for installing the seat cushion with shoulder/waist/center strap cover

1. Open the bottom of the shoulder belt cover and release the shoulder belt buckle A.
2. Insert the seat cushion through the shoulder belt, waist belt, and crotch belt.

Note: To prevent the shoulder belt covers and the crotch belt cover from slipping off, insert the internal buckles of the shoulder belt covers into the bottom buckles of the stroller shoulder belt. To fix the crotch belt, the crotch belt should pass through the internal elastic band of the crotch belt cover.

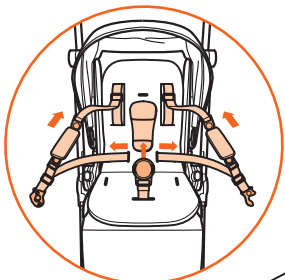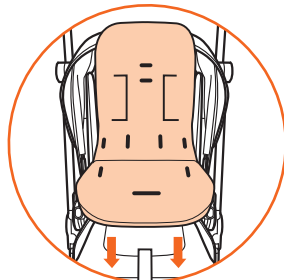

Backrest



1. Push the adjustment buckle behind the head upwards to adjust the backrest angle.
2. Three angles (upright, reclined and flat) are adjustable.

CAUTION

No continuous use for a long period, continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby in a reclined seat and 1 hour in an upright seat.


Reversing the seat unit

1. Adjust the backrest to align with the triangle mark on the seat and frame and the seat can be removed for reversal.
 2. After turning the seat (do not align with the triangle mark), insert it downwards until you hear a "click" sound. The white long strip mark on the connector is completely covered, indicating that the joint is fully connected.
 3. Please try to pull the seat up and confirm that it is securely fixed before placing the child.
- Note: please pay attention to installation methods to avoid pinching.

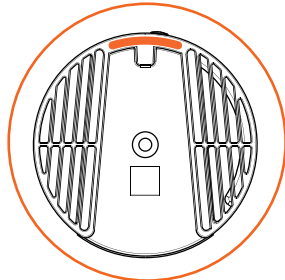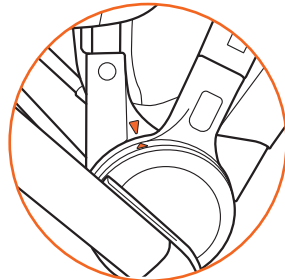

Canopy

1. As shown in the figure, pull the canopy forward or backward to open or close the canopy.
2. As shown in the figure, grasp the canopy bracket and pull it up until the slide rail is positioned, and the canopy can be placed raise and lower; to lower the canopy, grasp the bracket and operate it in reverse.

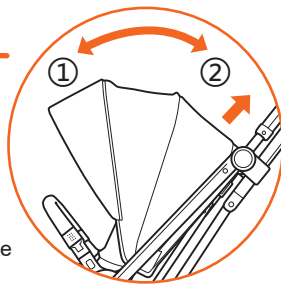


Front guard

Front guard: Adjust the slider with a protruding square button on the front guard plug to align with the square hole of the front guard socket on the stroller and insert it until you hear a "click" sound. The front guard is detachable on both sides.


Note:

1. When installing the front guard, please aim the front guard button at the front guard seat to avoid incorrect assembly, and pay attention to the installation method to avoid pinching.
2. When using the stroller, please pay close attention to the gap of the position marked with dotted lines in the figure to prevent the child's hands and feet from getting stuck accidentally.

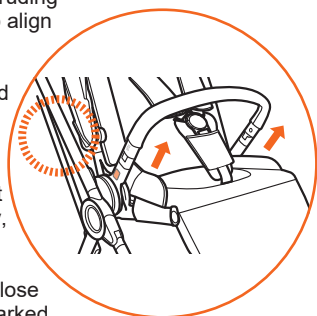


Foot support

Press the buttons on both sides of the arrow with both hands to adjust the foot support.

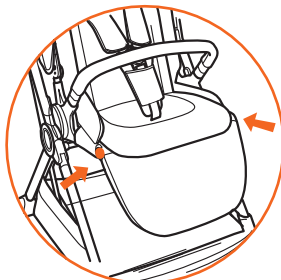

Basket

The basket can carry a maximum weight of 5kg.



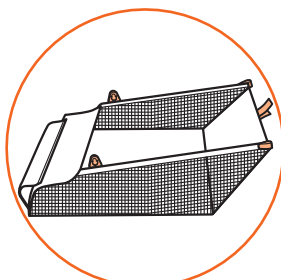


Wheel function

For easy cleaning and storage, the front and rear wheels support the quick release function.

1. Press and hold the rear wheel quick release button H to pull out the rear wheel.
2. When installing the rear wheel, insert the bearing in ward and pull the wheel to ensure the installation is complete.

Note: Do not insert foreign objects into the axle holes because the objects may cause incorrect installation of the rear wheels.

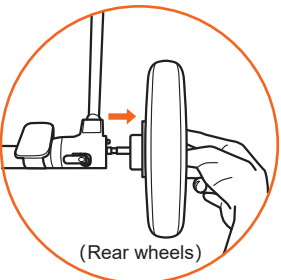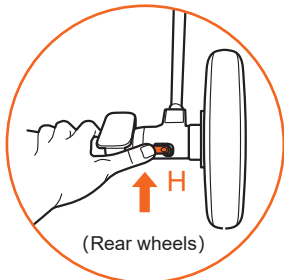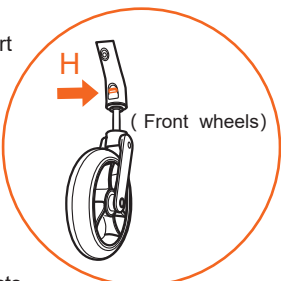

The stopper

WARNING

Always engage the stopper when you leave the stroller.




Unfolding the stroller

1. Lift the handle backward and upward to unfold the stroller.
Shake the handle up and down to confirm that the stroller is fully unfolded and locked.
2. Pull the seat in the direction of the arrow and press the pedal adjustment button with both hands to adjust the pedal.


⚠ WARNING

When unfolding/folding the stroller, it must be made clear that the children's limbs are kept at a safe distance from the stroller. And the operator should not touch the folding mechanism such as the dotted coil to avoid pinching.

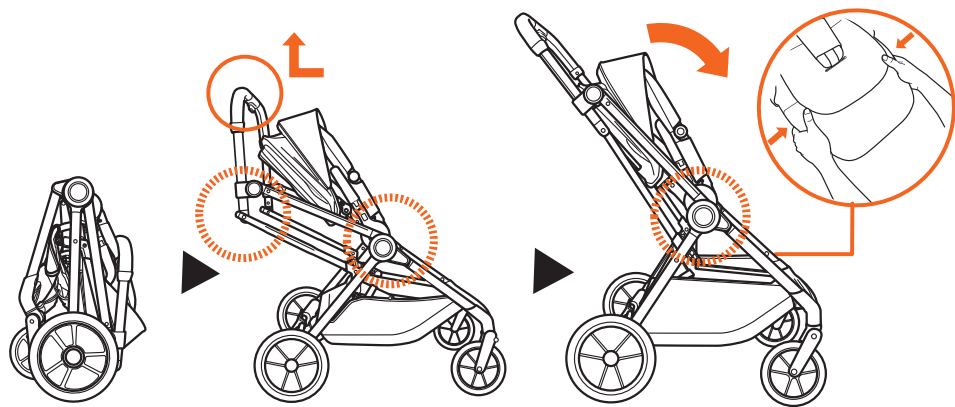


Folding the stroller (The seat is in the facing-forward mode)

1. Adjust the back of the stroller until it is parallel to the handle, lower the height of the canopy bracket, fold the canopy, and then flip the pedals up until they are parallel to the backrest of the stroller. (As shown in Figure ①).
2. Slide the safety lock A to the right and press the switch B. The stroller will be automatically folded. (As shown in Figures ② and ③).

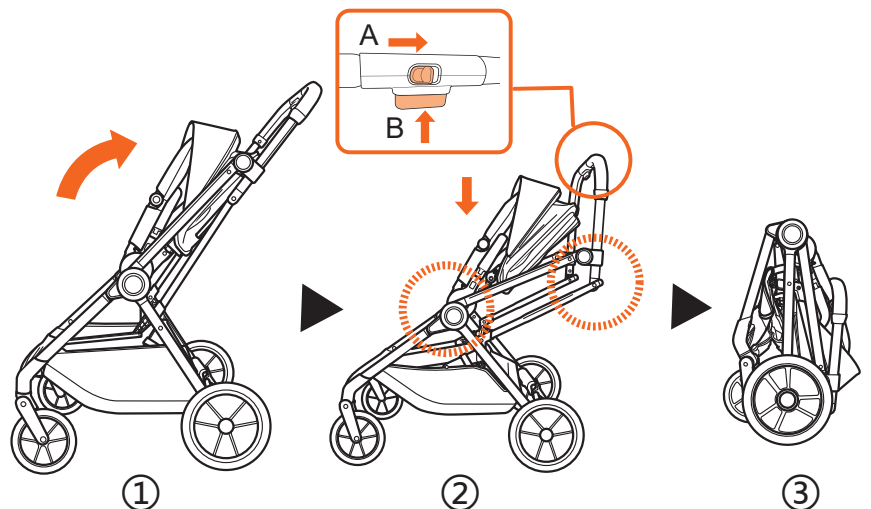

Folding the stroller (The seat is in the face-to-face mode)

1. Fold the backrest of the stroller towards the handle until it is parallel to the handle, lower the height of the canopy bracket, fold the canopy, and then flip the pedals up until they are parallel to the backrest of the stroller. (As shown in Figure ④).
2. Slide the safety lock A to the right and press the switch B. The stroller will be automatically folded. (As shown in Figures ⑤ and ⑥).

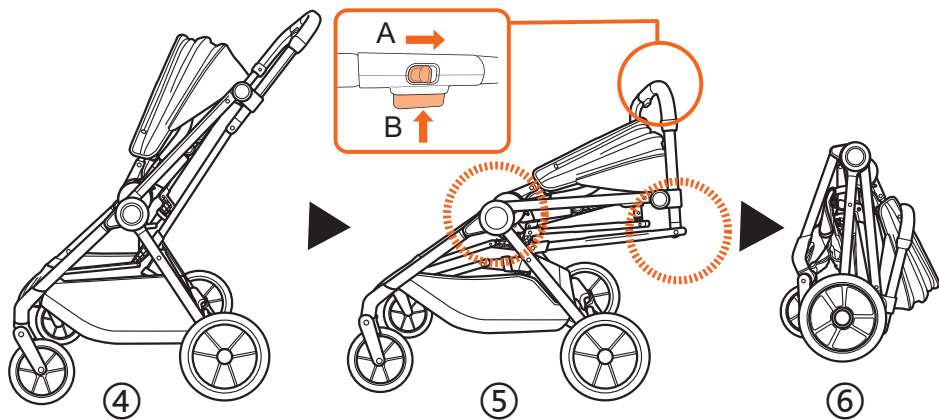


Installing the head cushion

Use the head cushion after installing the seat cushion.

Reference for head support insert outlets ① and ② :

- ① suits children aged approximately 1 to 4 months.
- ② suits children aged approximately 4 to 7 months.

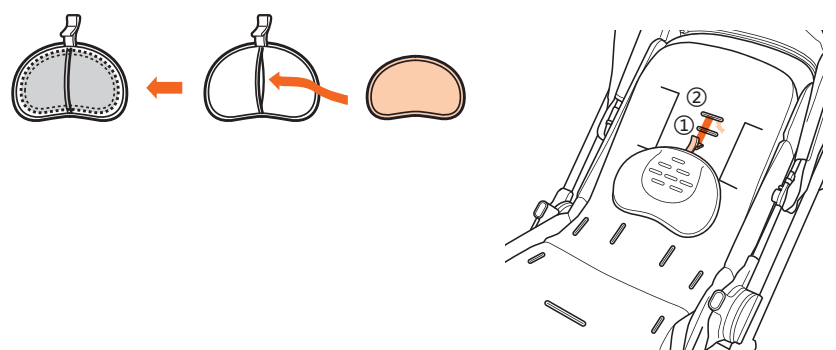

⚠ WARNING (Incorrect operation may cause serious injury or death)

The safety of the child may be seriously endangered if the instructions are not followed. You are personally responsible for the safety of your child.

- The stroller is suitable for children from birth to 4 years or up to 22kg, whichever comes first.
- Under EN 1888-2:2018+A1:2022 safety standard.
- Never leave the child unattended.
- The vehicle is designed for only one child use.
- The stroller is not allowed to carry two or more children or other items at the same time.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- Overloading, incorrect folding and the use of non-approved accessories may damage this stroller.
- Before use, make sure that the stroller stands upright and all mechanisms are fixed to ensure safety.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- Do not let the child play with this product.
- Always use the restraint system to avoid any possible accident.
- The safety harness or restraint system must be correctly buckled and used.
- When adjusting any movable parts on the stroller, keep a safe distance between the child's limbs and the stroller.
- The child may slip into gaps near the sole of its feet, which may cause suffocation.
- Do not use the stroller on stairs.
- Do not place the stroller near fire, high temperature, pool, or electric source.
- Do not allow your child to stand in or on the stroller, it may be dangerous.
- Do not leave the stroller on roads, ramps or any other dangerous places.
- Do not lift stroller while child is in stroller.
- Do not move the stroller by holding the seat.
- Be sure to use all braking devices when parking the stroller.
- To prevent accidents, ensure that the stroller is kept away from any automatically closing doors (for example, doors of train or elevator).
- To avoid the risk of suffocation, any coverings and binding straps must be removed, destroyed or kept away from the child.
- This product is designed for walking use only.
- This product is not suitable for running or skating.
- Ensure that all the locking devices are engaged before use.
- Excessive weight may cause a hazardous and unstable condition exist. (Maximum load: 22kg. Basket maximum load: 5kg).
- When adjusting the seat angle with a child seated in the stroller, please readjust the safety harness to a proper length. Do not adjust the seat angle while you are moving the stroller. Do not suddenly change the seat angle.
- If one gives excessive shock to the front wheels when getting over the step, stroller may fall down and cause damages. When stepping over, such as a curb, please slow down even a slight difference level, pull downward the handle and step on the foot-step, and make sure to pass the front wheels to get over the step.
- Lift front wheels and pay particular attention to gaps or ditch when crossing rail road to avoid the front wheels from accidentally getting to jammed and tipping over.
- Do not use in a reclined angle less than 150° for a child under 6 months old. when a child under 6 months old, please use of the most reclined position.
- Any loading attached to the handle affects the stability of the stroller, on the back of the backrest and/or on the sides of stroller will affect the stability of the stroller.
- Only replacement parts supplied or recommended by the manufacturer/distributor shall be used. Only use original accessories and parts that have been approved by the manufacturer. Do not make any modifications to the product.
- The parking device shall be engaged when placing and removing the children or stop the stroller, in case of sudden brake or turning, and then the stroller may fall off.
- Do not place toys or things with straps attached around the children riding around in a baby carriage.
- Check regularly that all screws, bolts and nuts are engaged tightly.
- In the event of damage or operation problems, stop using the stroller immediately and keep it out of reach of children.
- Make sure that there is no foreign matter adhering to the magnet buckle.
- When fastening the seat belt, be careful not to pinch the child's limbs, clothing, or foreign objects.

Maintenance and Cleaning

- Never apply force on any mechanism or moving parts.
- To prevent mildew forming, do not store this product in a wet or humid environment.
- Avoid prolonged exposure of the product to rain or snow.
- Clean with a wet cloth. For stubborn stains, use a diluted mild detergent.
- After wipe off the dirt by detergent, use a cloth to wipe off the excess water and detergent.
- Dry in shade area after wipe off water.
- You may lubricate moving parts if the Wheel turning part of the stroller is not smooth, Please do not apply any lubricating oil other part that will cause malfunction. Please do not apply any lubricating oil other part that will cause malfunction.
- In the event of if you find the tyre wear seriously affect movement/ stroller damage or operation problems, please contact customer service center.

Consumers from Hong Kong and South East Asia countries please refer to below

Manufacturer: Combi Holdings Limited

Supplier: Combi Hong Kong Limited Units 1616-18, 16/F, Tower 1, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Hong Kong and South East Asia countries



For more information, you can scan this QR code.

Combi Corporation