

Combi

NE-YO 使用說明書 Instruction Manual

使用前請詳細閱讀本書明書，然後正確使用本嬰兒手推車。閱讀后請妥善保存作日後參考之用。若將本製品轉讓予他人使用時，請將本說明書也一併移交對方。

For safety of your children, read this instruction manual carefully and use the baby stroller accordingly. After reading, please keep this instruction manual for future reference.

Please also attach this instruction manual in case the stroller is to be transferred to others to use.



EN Instruction manual


繁體中文 說明書







NE-YO






ENGLISH	Instruction manual	6
繁體中文	使用說明書	15




部件名稱【見P19】

List of components 【 P11 】


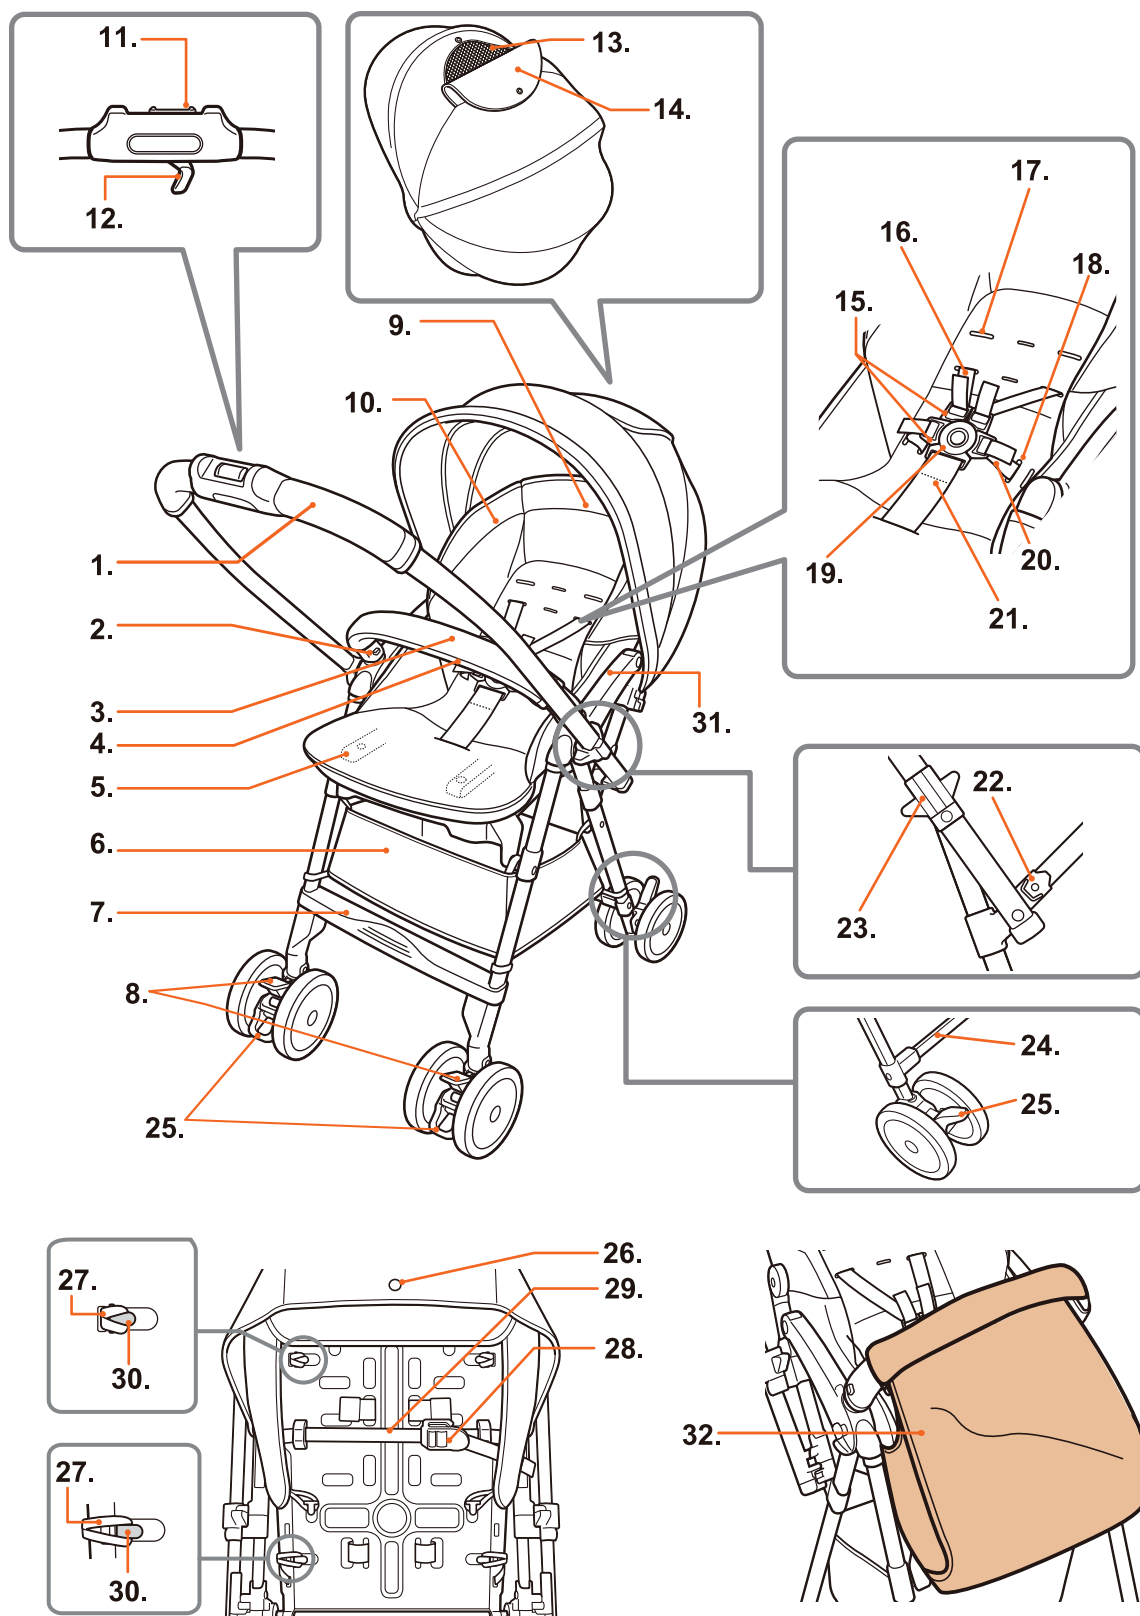


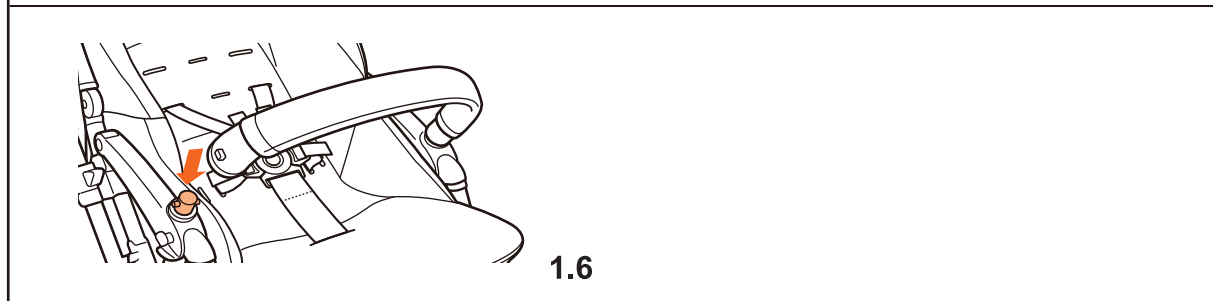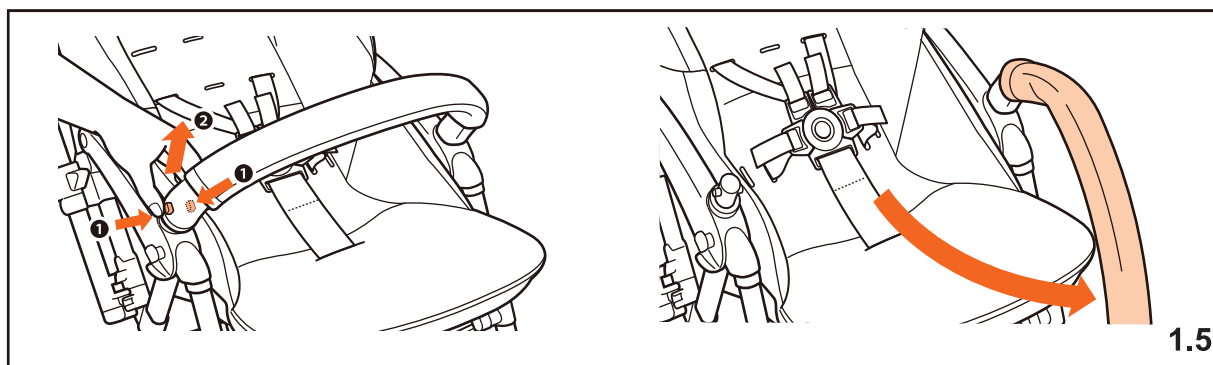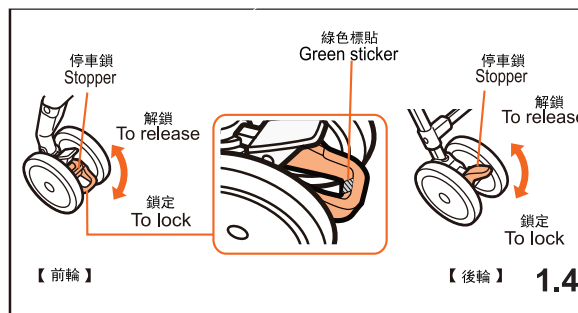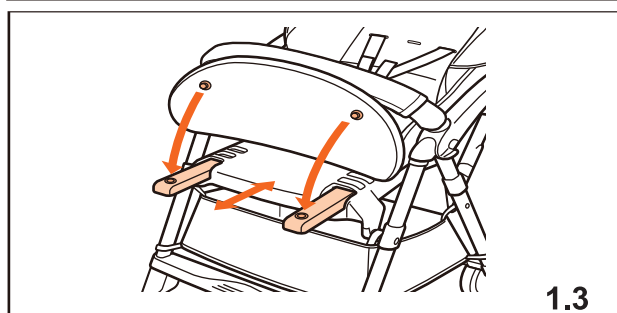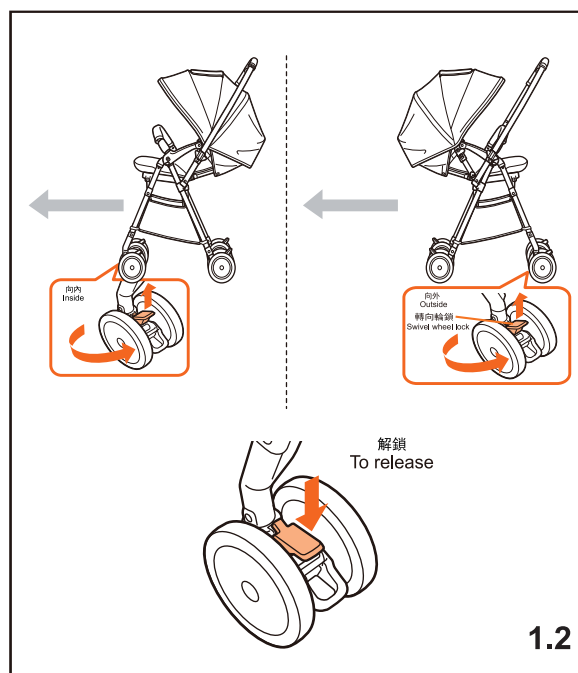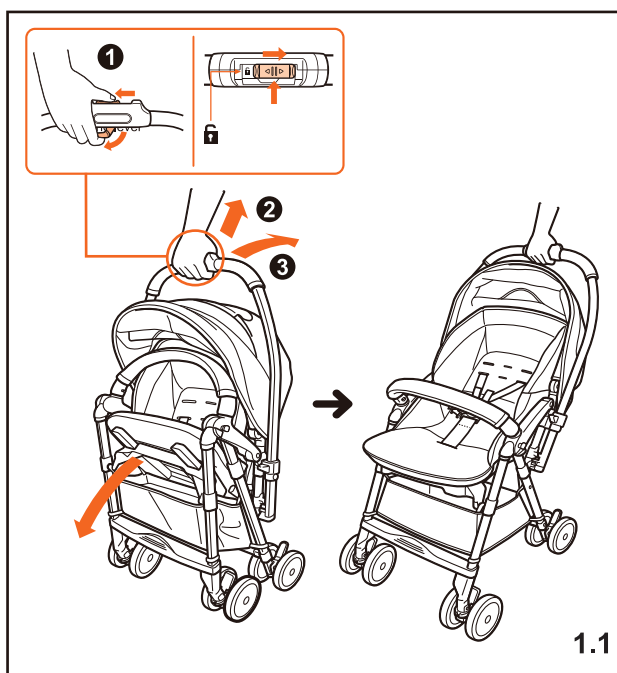

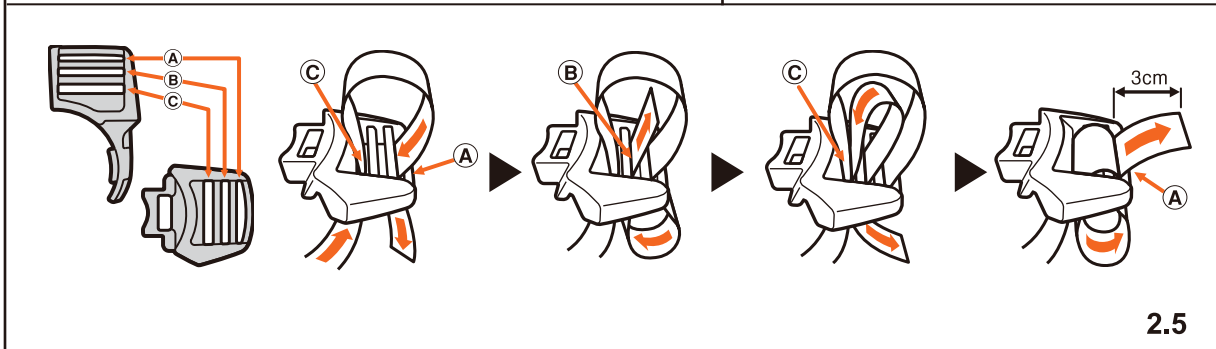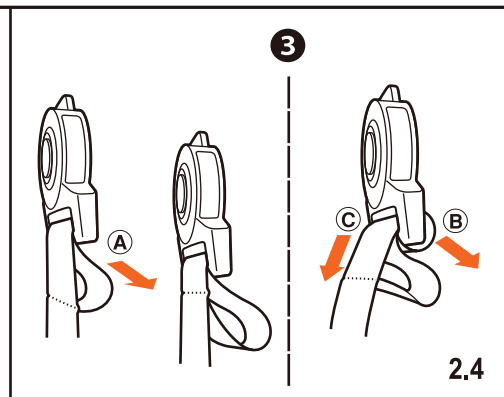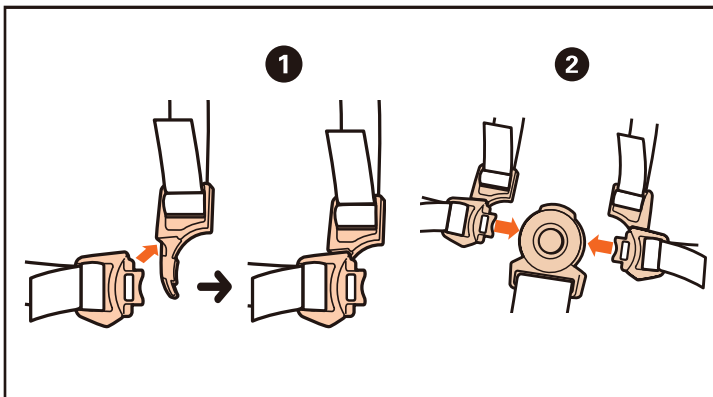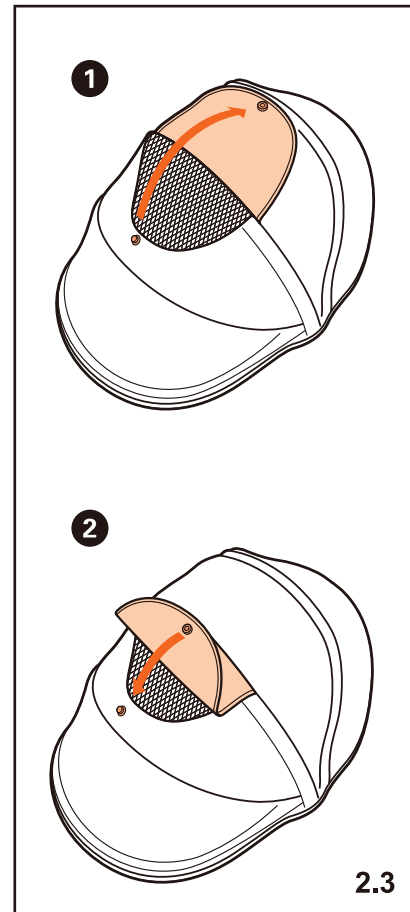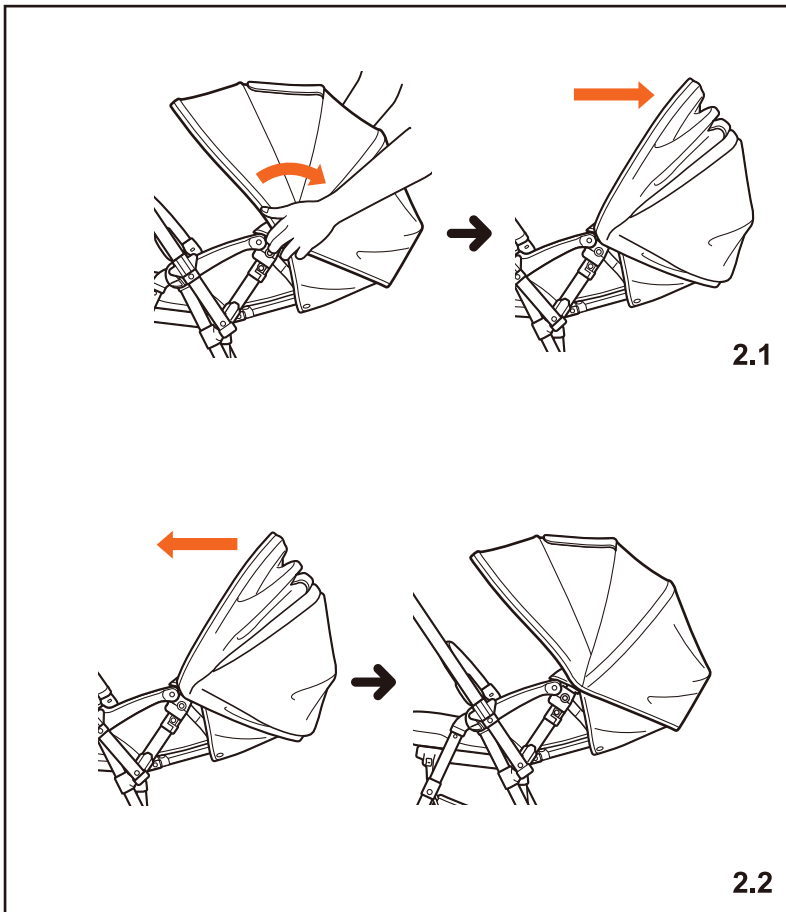


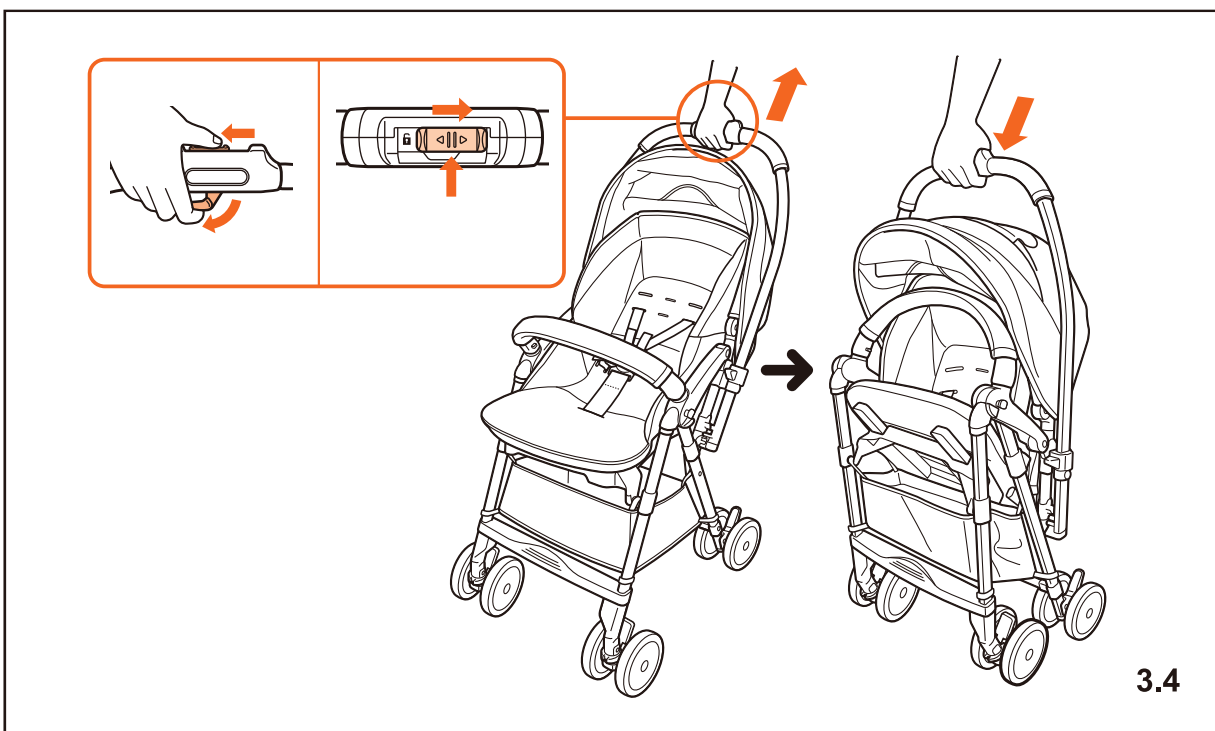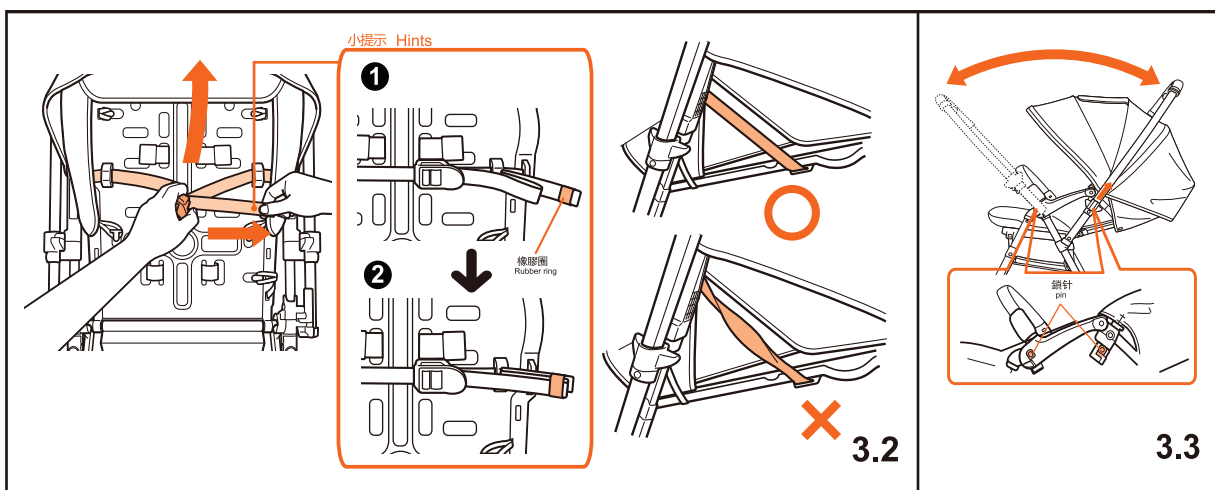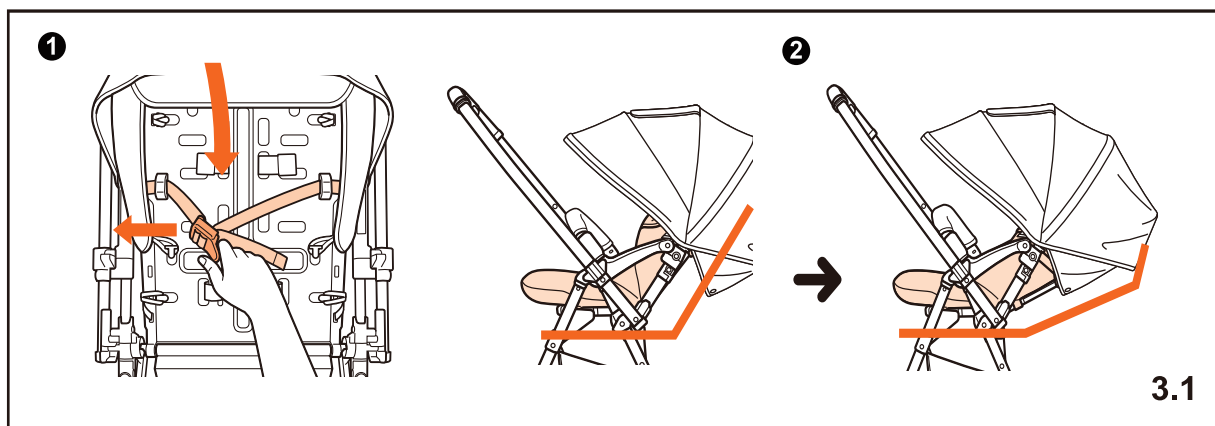


最大承載重量：5kg
Max loading : 5kg

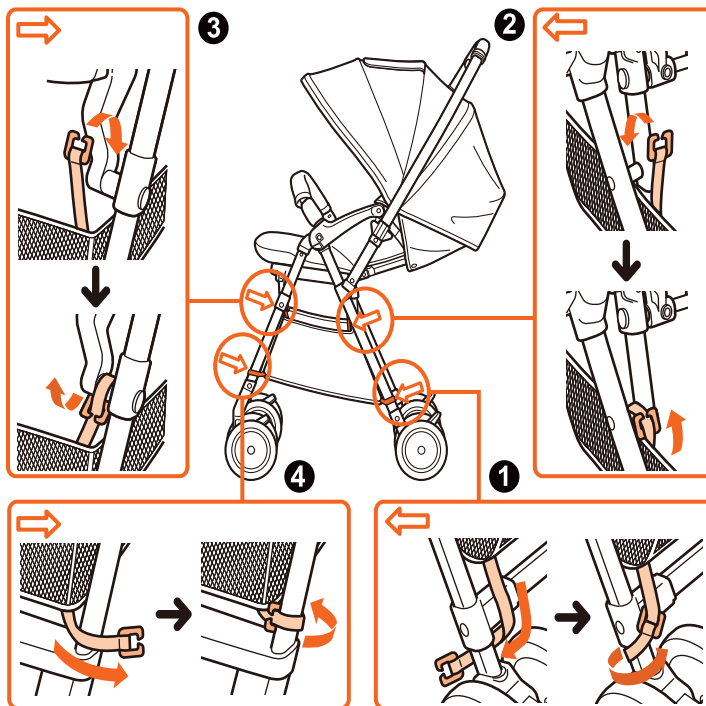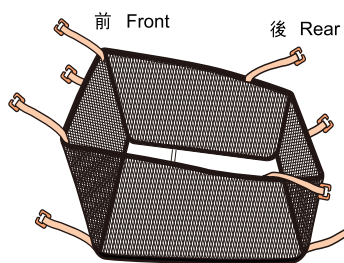


4.1

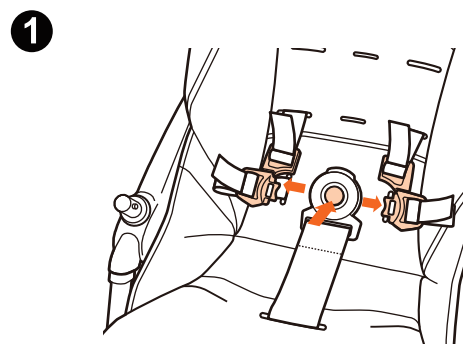


4.2

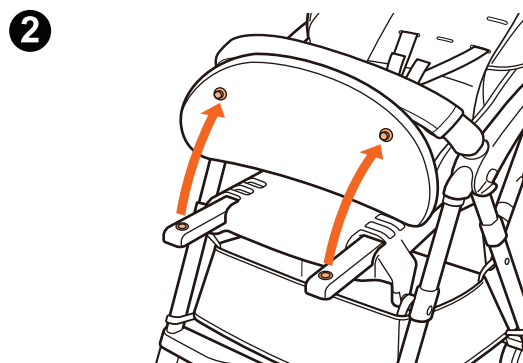

4.3

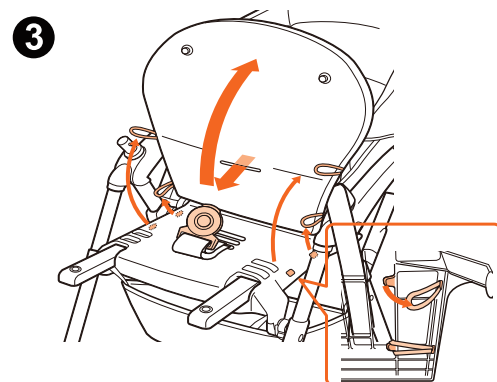


4.4

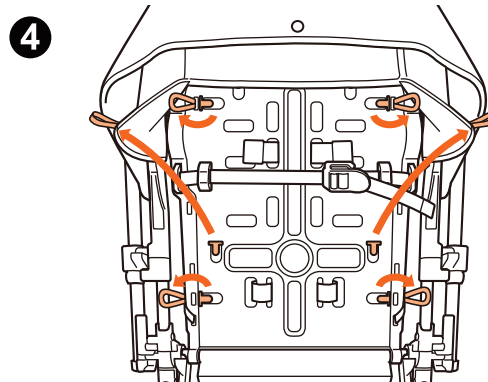

4.5

4

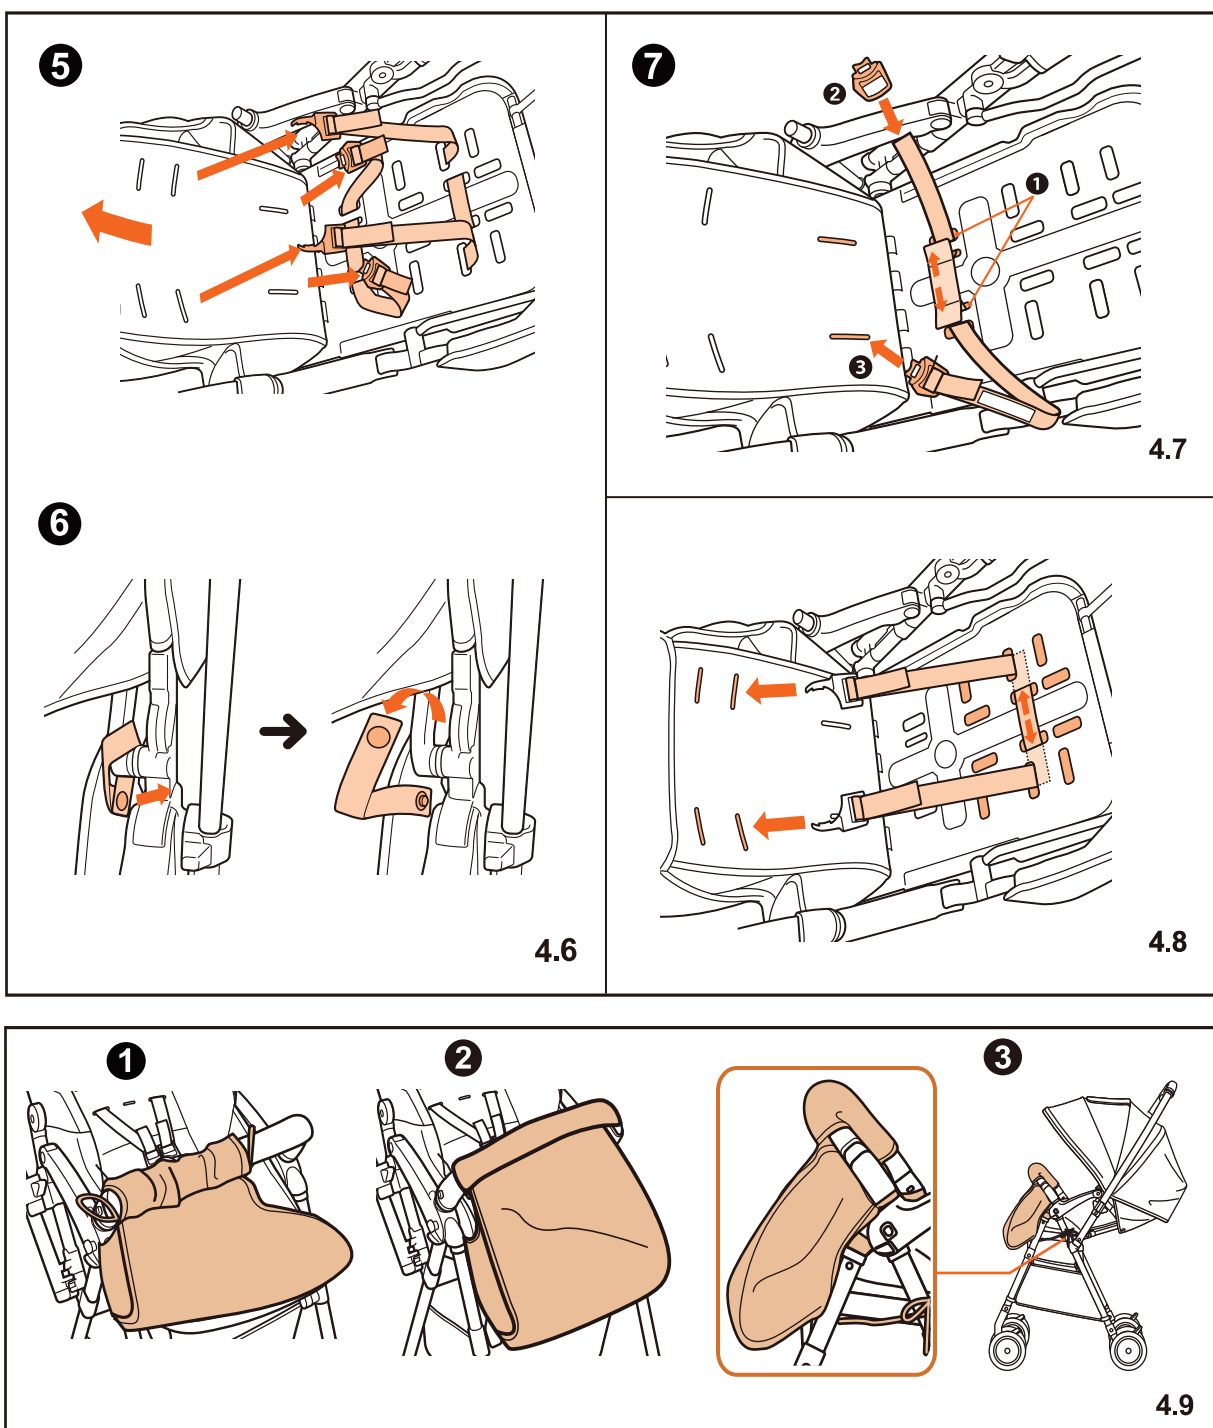

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING

Please read this instruction manual carefully and keep it for future reference. The safety of the child may be seriously endangered if the instructions are not followed.

You are personally responsible for the safety of your child.

- Do not use the seat cushion on which rift is found. Otherwise the seat cushion may not function as designed or the child may have chance to swallow the material inside the cushion.
- Make sure all snaps are secured before use. Otherwise accident or damage to stroller may be caused.
- Always let the child wear the seat belt in the stroller to avoid any possible accident.
- Adjust the seat belt to fit to the child.
- Do not cross the shoulder belts with each other when securing the shoulder belts to the insert plastic. Otherwise excessive pressure may be caused to child's neck.
- Loose the shoulder belts before lowering the seat angle with a child seated.
- Adjust the length of seat belt properly after change of the seat angle.
- Always apply the parking brake when you are stationary.
- Keep all small parts away from children as they are choking hazard.
- To prevent the risk of suffocation, always keep the plastic bags out of the reach of children.
- This product is not suitable for running or skating.
- Before each use check the stroller body, and/or seats are installed correctly and securely locked.
- Overloading, incorrect folding and the use of non-approved accessories such as buggy boards may damage or break this stroller.
- Regularly clean and inspect the stroller.
- Do not place the stroller near fire.
- Do not allow children to play with this product.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- When opening or folding up the stroller and reversing the handle, be careful and avoid the seat cushion, seat belt, blanket and toys, etc., pinched into the stroller body.
- If open/fold lock cannot be applied, the caster may be not locked automatically.
- If one give excessive shock to the front wheels when getting over the step, stroller may fall down and cause damages. When stepping over, such as a curb, please slow down even a slight difference level, pull downward the handle and step on the foot-step, and make sure to pass the front wheel to get over the step.
- Misuse may result in severe injury or death.
- Make sure the open-fold lock is engaged completely before use. Otherwise the stroller may fold suddenly in use.

EN

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING

EN

- For American safety standard : Child may slip into leg openings and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.
- Do not use the stroller on steep slopes, stairs, escalators, rough roads, beaches, mud, etc.
- Do not lift and carry the stroller while a child seated, failure to comply may cause the stroller to fold up suddenly or get hold of the front guard etc. to lift the stroller. Otherwise the stroller may accidentally slip off, or the front guard may be detached, all of which will cause the stroller to fall down.
- In the event of damage or operation problems, stop using the stroller immediately.
- Avoid serious injury from falling or sliding out. Always use seat belt (crotch belt, waist belt and shoulder belt).
- Pay attention to child even when seat belt is in use in case of any sudden movement of child causing it to fall off.
- Do not allow your child to stand in or on the stroller, it may be dangerous.
- Never leave your child unattended.
- Do not lean on or hang loads on the handle.
- Do not put or hang things on the canopy or handle as it may cause tipping over.
- Do not hang parcels or accessory items (Except items provided in the sales package) on the stroller. Otherwise the stroller may become unstable.
- Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas other than the seat.
- Excessive weight may cause a hazardous unstable condition exist. (Maximum load: 15kg. Basket maximum load: 5kg.)
- Do not attach other accessory like buggy board on the main body during a child being carried in stroller, otherwise accident or damage to stroller may be caused.
- Stroller may move suddenly or tip over even when stoppers are engaged.
- Do not leave baby stroller at road side or slope even when it is not in use.
- Please do not touch the folding lever except when folding the stroller.
- Do not rely too much on the stoppers even when the stroller is parked empty.
- Even with all stoppers engaged, always stay close to the stroller when it is carrying a child. Make sure to engage all stoppers to avoid sudden movement or tipping over.
- Make sure to use the seat belt when the child is seated. The front guard is not designed to prevent the child from standing up.
- Do not let the child operate the front guard. It may make the child to fall off from the stroller.
- Misuse may result in injury or damage of product.

CAUTION

- Please do not use the stroller in whatever purposes other than seating a baby. Failure to comply may result in damage of the stroller.
- Never leave the child in a stroller without seat cushion. The child's hands or feet maybe get jammed in between the stroller frame.
- Do not let children operate the baby stroller to avoid accident.
- Be careful of those around you to avoid pinching their fingers when you are opening or folding the stroller or adjusting the seat angle.
- Do not pull or twist or forcibly press down the front guard hardly. Otherwise the stroller may be damaged.
- Make sure to fasten the seat belt after seating the baby. Check if the seat belt fits properly. Otherwise the baby may fall off from the stroller.
- Pay particular attention to baby's hands in case they may be pinched when switching the handle's direction.
- Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat must be used.
- Lift the backrest a little to use if the seat is found too narrow when fully reclined. However, the baby should be able to sit straight when stroller is used in such way.
- Do not use the most reclined angle if the baby's head touches at the head rest.
- Do not let an adult sit on the stroller, or add load on the stroller to avoid any damage to it.
- When pushing the stroller, please walk slowly to avoid any damage to the stroller swivel wheels or any tipping over happened.
- Do not load more than 5 kg into the basket to avoid damage.
- When pushing the stroller, please pay attention to any hole or track on the ground to avoid the front wheel from accidentally getting jammed and tipping over.
- Do not use the stroller in snowy, windy days or wet road to avoid the stroller or guardian from slipping.
- Do not use the stroller in lightning days to avoid thunder stroke.
- During summer, continuous outdoor usage will make the temperature of stroller goes up particularly in summer.
- Avoid continuous outdoor usage particularly during day time in summer.
- Avoid storing the stroller in places that under high temperature, near a heat source or inside a car. Exposure to high temperature may damage or deform the stroller.
- Do not remodel or restructure the stroller by yourself.
- Check regularly that all screws, bolts and nuts are engaged tightly.
- Do not use the stroller on public vehicles.
- Swivel wheel lever should be secured at the same side of the pushing person. Lever secured in wrong position may affect maneuvering or damage the product.

EN

CAUTION

- Lift front wheels to cross obstacle etc. which is over 3cm of height. Do not hit front wheels directly to obstacle or wheels may be damaged.
- Lift front wheels and pay particular attention to gaps or ditch when crossing rail road.
- No continuous use for a long period.
Continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby seated in a reclined seat and 1 hour in an upright seat.
- For use on trains
This product is not designed to be used on trains. When user attempts to use the product at his/her own risk, please lock stoppers in case of sudden brake or turning. Otherwise stroller may fall off.
- Open the baby stroller in clear area to avoid pinching baby's finger.
- Do not press on the folding lever while lift the stroller to avoid damage to the parts.
- Make sure to lock the safety lock after folding up the baby stroller.
- Make sure to release the lock before opening the stroller, misuse may damage parts.
- When feel jammed, please do not forcibly fold the stroller to prevent from any damage. You should re-open the stroller to check and operate again.
- Make sure the basket is empty before folding up the stroller.
- Make sure the canopy is completely folded up before folding the stroller to avoid damage of the parts.
- Turn swivel wheels to inner side and lock up before folding the stroller. Improper position may cause stroller becoming imbalanced after folded.
- Be careful not to pinch the baby's hands or feet when reversing the handle.
- Check the baby's situation from the front side before reversing the handle.
- Do not reverse handle while pushing the stroller.
- Do not touch at the handle lock when folding or unfolding the stroller. Otherwise damage may be caused to the stroller.
- Even when empty, always engage all stoppers since the stroller may suddenly move.
- Swivel wheels when secured in wrong position may obstruct smooth strolling. Make sure it is secured in correct position.
- Do not lay down the stroller and do not put things on the canopy to avoid deformation.
- Do not get hold of an opened front guard to pull the baby stroller.
- Do not forcibly press on the front guard to avoid damage.

CAUTION

- The used insert outlet from the base seat and the cushion should be matched. (e.g. upper insert outlet of base seat should match with upper insert outlet of cushion.) Otherwise, the shoulder belt may not be long enough to harness the baby.
- It is extremely dangerous to adjust the seat angle when pushing the stroller. Do stop the stroller first before operation.
- Do not suddenly change the seat angle while a child is seated.
- Support the backrest with the other hand when lowering the seat angle with a child seated.
- Do not put things that are too sharp or too large into the basket since it may cause damage to the basket.
- Only use neutral detergent to clean the stroller body.
- Make sure no oil or lubricant is left on parts such as front guard or armrest where baby may have chance to lick.
- The parking device shall be engaged when placing and removing the child.

EN

SAFETY INSTRUCTIONS

Use NE-YO for only one child at a time.

- The stroller is suitable for children from 1month to 15kg (approximately 3 years of age)
- Keep your child and your fingers/hands away from moving/folding parts when folding or unfolding or adjusting the stroller.
- Never lift the stroller or use it on escalators or stairs when your child is sitting or lying in the stroller.
- This stroller requires regular maintenance by the user.
- Before each use check that the product and all its components have not been damaged during transportation.
- If damage is identified, do not use the product and keep it out of reach of children.
- Never leave the stroller close to stairs or steps.
- Only use on a flat, relatively smooth, stable and non-slippery surface.
- Only use original accessories and parts that have been approved by the manufacturer. Do not make any modifications to the product.

LIST OF COMPONENTS

1. Handle	12. Folding lever	23. Handle lock
2. Front guard buttons	13. Ventilation window	24. Rear stay
3. Front guard cover	14. Top window cover	25. Stopper
4. Front guard	15. Shoulder and waist belt buckle	26. Canopy snap
5. Leg support bar	16. Shoulder belt	27. Elastic
6. Basket	17. Shoulder belt insert outlet	28. Seat reclining buckle
7. Foot rest	18. Waist belt insert outlet	29. Reclining cord
8. Swivel wheel locks	19. Crotch buckle	30. Plastic hooks
9. Headrest	20. Waist belt	31. Armrest
10. Seat cushion	21. Crotch belt	32. ASTM foot cover(only for packages that comply with ASTM safety standard)
11. Safety lock	22. Open/Fold lock	

INSTRUCTIONS

Unfolding/Opening (Figure 1.1)

- ❶ Grip and pull the folding lever upwards simultaneously.
- ❷ Slide the safety lock as demonstrated direction and hold it in place.
- ❸ Slightly lift the stroller and open it.

Using the swivel wheels (Figure 1.2)

- ❶ Lift the swivel wheel locks to fix the direction
- ❷ Lift the swivel wheel lock to release the swivel wheels. Be careful to secure the lock in correct position according to the handle position.

NOTE: Press down the swivel wheel locks and the wheels can turn to every direction

Using the leg support bar (Figure 1.3)

Apply the leg support for better comfort when child is asleep.

- ❶ Lift the seat cushion and pull out the leg support bars from the seat base.
- ❷ Snap the seat cushion onto the leg support bars.

To store the leg support bars

Release the snaps and push the bars back to the seat base.

WARNING: Make sure to snap the seat cushion onto the leg support bars while carrying the baby on stroller.

Parking brakes (Figure 1.4)

- ❶ To lock wheels, press the stoppers down which are located at wheels on both left and right sides.
- ❷ Try to push the stroller back and forth slightly to ensure that the stoppers are properly engaged.

NOTE: Check the brakes are fully engaged by gently attempting to push the pushchair when the brake of front wheel is fully engaged, the Green sticker can be seen from above.

WARNING: Always engage the parking brakes when you leave the pushchair.

Open the front guard (Figure 1.5)

Press and hold the button at the end of the front guard as illustrated.
Detach the front guard.

Attach the front guard (Figure 1.6)

To attach front guard, lift and plug into the projected part at the end of the armrest.

WARNING : Do not hold the front guard to lift the stroller**Adjust the covering size of canopy****Using in small covering size (Figure 2.1)**

Fold the canopy from backward.

Using in big covering size (Figure 2.2)

Unfold the canopy further to the front.

Top window (Figure 2.3)

- ❶ Open top window by releasing snaps.
- ❷ Fasten the snap to close top window.

Install and adjust the crotch belt (Figure 2.4)

- ❶ Attach shoulder belts to the shoulder belt hook of the left and right insert plastics.
- ❷ Pull out the crotch belt and put the insert plastics into the buckle until a "Click" sound is heard.
- ❸ Tightening
 - Ⓐ Pull out the center belt to the end.
Extending
 - Ⓑ Follow the direction of arrow and pull out the belt to end.
 - Ⓒ Follow the direction of arrow and pull the belt to the end.

Pull the center belt, the shoulder belts and waist belts to check if they are secured.

WARNING: Always use the restraint system.**Adjusting the waist belt (Figure 2.5)**

Pull the belt in the direction as illustrated to adjust its length.

NOTE: Always leave at least 3cm at the belt end.

NOTE: To release harness, go in the steps reverse.

The steps of adjusting shoulder and waist belts are the same.

Adjusting the backrest (Figure 3.1)

Support the backrest with one hand before reclining the backrest.

The headrest will be lifted automatically after the backrest is reclined.

(Figure 3.2)

Pull the reclining cords as illustrated to raise the seat back.

NOTE: Raising the backrest may be difficult while a child is leaning on the backrest.

The reclining belt sometimes is twisted, correct the twisted reclining belt by the following steps:

Set the backrest down to the lowest.

Hold the belt mounting part and turn to the direction of the twisted reclining belt.

Reversing handle (Figure 3.3)

Lift and release the handle locks to change the handle direction until the locks are secured in places.

Folding the stroller (Figure 3.4)

- ❶ Slide to release the safety lock of direction as illustrated.
- ❷ Grip the folding lever and slightly lift up the handle, then press down the handle as illustration to fold the stroller.

EN

WARNING: When opening and closing the stroller, please ensure your child and other children are kept at a safe distance. Please ensure that they are not in contact with any mounting parts. Prevent children from touching the parts of stroller.

Basket (Figure 4.1)

The basket can carry a maximum weight of 5kgs. You can attach and remove it using the belts and snaps according to step ❶ ❷ ❸ ❹

Detaching the seat cushion (Figure 4.2-4.6)

- ❶ Release front snaps and elastic bands underneath of the seat, and on both sides of seat. Remove the shoulder belts from the shoulder belt hooks.
- ❷ Detach the snap on the seat cushion from the leg support bar (if the leg support bar is in use)
- ❸ Pull out crotch belt from seat cushion.
- ❹ Release both elastic bands from backrest sides.
- ❺ Pull out shoulder and waist belts from seat cushion.
- ❻ Release the snaps of elastic on both sides of the cushion and unwind (one circle) from the connections of armrest sides for detachment.

NOTE: To install seat, follow the steps reverse.

WARNING : Make sure the seat cushion has been correctly attached before use.

Attaching the waist belt (Figure 4.7)

- ❶ Remove two of insert plastics buckle from the waist belt.
- ❷ According to the direction of arrow instructions , Pull the waist belt through the 4 slits on the base board with the reverse side(waist belt) facing up.
- ❸ Re-attach the insert plastic buckle and pull it out through relevant slots of seat cushion.

NOTE: Make sure to pull through all waist belt insert outlets(total 4 places)when attaching the waist belt.

Adjust shoulder harnesses heights (Figure 4.8)

- ❶ Pull out shoulder harnesses from seat cushion and base seat.
- ❷ Set the correct slots of shoulder harnesses through on the base seat.
- ❸ Set correctly the harness shoulder heights and pull it out through relevant slots of seat cushion.

NOTE: The lowest shoulder harness insert outlet should be used for children under 6 months.

Installing the ASTM foot-cover (Figure4.9)

1. Press and hold the button at the left end of the front guard, put a band and foot cover onto the front guard as illustration.
2. Tie up another band to the projected part, plug the front guard into the projected part at the end of the armrest.
3. To attach front guard and fasten the holding strings to the rear leg tubes to complete the installation.

Hints for maintenance

- Never apply force on any mechanism or moving parts.
- To prevent mildew forming, do not store this product in wet or humid environment.
- Protect the product from rain, snow and prolonged exposure to sunlight.
- Clean the plastic and metal parts with a wet cloth. For stubborn stains, use a diluted mild detergent.
- You may lubricate moving parts if the operation or movement of the stroller is not smooth. Do not apply excessive lubricant as it may lead to a build up of dirt which may cause malfunction.

Cleaning and maintaining fabrics

- ※ Be careful not to injury of the plastics on canopy and the snaps from basket.
- ※ Due to the characteristic of the product, the color may fade after numbers of washing.
- ※ It is recommended to wash with neutral detergent which does not contain fluorescent brightener, bleach etc.
- ※ Always keep clean due to the condition of storage, the mildew may be generated.
- Washing of the Body & Hip support, the shoulder belt and the crotch belt .
 - Hand wash in warm water or machine-wash gently .
 - When using the washing machine, put the laundries into the washing net before washing. Otherwise a fray and damage may be caused.
 - Detach the seat cushion and wash according to the washing instructions.
 - It is recommended to wash and spin separately with other clothes.
 - Gentle spinning after rinsing thoroughly and Straighten it .
 - Do not use drying machine or dry cleaning.
- Washing of the canopy ,crotch belt and the basket.
 - Do not soak into the water. Use sponge or brush wipe off the dirt with warm water.
 - After wipe off the dirt by detergent, use a cloth to wipe off the excess water and detergent.
 - Dry in shade area after wipe off water by dried cloth.

Supplier:

Combi Hong Kong Limited
Rm 1003, HK Pacific Centre, 28 Hankow Road,
Tsimshatsui, Kowloon, Hong Kong

使用前請詳細閱讀本說明書並妥善保存作日後參考之用

警告

使用前請詳細閱讀本說明書並妥善保存作日後參考之用。

不按照本使用說明書指引使用手推車，可能對幼兒造成重大傷害。幼兒的安全是您的責任。

- 停止手推車時，請使用停車鎖。
- 即使已經鎖上停車鎖，手推車也有可能意外滑動或翻倒。
- 即使幼兒不在車上，也不可將手推車隨意放在路旁或斜坡等危險地方。
- 除開折手推車外，請勿觸碰開關掣。
- 不論有否乘載嬰孩，停車時勿過分信賴停車鎖的性能。
- 即使已使用停車鎖，如載有嬰孩，應隨時留意手推車附近，以防任何危險發生。此外，停車鎖應左右兩方同時使用，以免意外滑動或翻倒。
- 切勿將小配件放近幼兒，以免幼兒吞下而造成窒息的危險。
- 為了防止幼兒窒息的危險，在拆開包裝後，請將膠袋之類的包裝物料棄掉。
- 本產品不適用於奔跑或滑行時使用。
- 每次使用前請確保車體和座墊都已正確安裝並安全鎖上。
- 切勿讓兒童玩弄本產品。
- 使用前確保所有的鎖定裝置使用中。
- 過份超載，錯誤摺疊以及使用未經認可的附件會對手推車造成損壞。
- 請定期清潔以及檢查手推車。
- 請勿把手推車放近火源。
- 安裝椅墊時，請確保所有鈕釦等已經裝好，以免引致意外或造成損壞。
- 請牢牢地繫上安全帶，但注意不要過緊。
- 將肩帶釦在插釦片上時，請勿交叉肩帶，以免肩帶對幼兒頸部造成壓迫。
- 在已乘載幼兒的狀態下調低座椅角度時，請先將肩帶調鬆。
- 調較座椅角度後，請重新調較安全帶至適當長度。
- 請勿外加任何以輪板或元件於主體上乘載幼兒，以免對手推車造成損壞。
- 乘載幼兒時必須繫上安全帶。前護欄不能防止幼兒從座椅上站起來。
- 不要讓幼兒操作前護欄以免其意外跌倒。
- 請勿使用磨損或破損的椅墊，以免椅墊不能發揮其應有功能，或令幼兒誤吞內裡的棉花等。
- 當操作開關及轉換把手時，請注意及避免可裝拆的座墊、手推車的安全帶、被子，及玩具夾在手推車車體上。
- 當開關掣未能應用時，可能令轉向輪不能自動鎖上。
- 當越過不同段差時，若強行附加力量於前車輪上使之與段差碰撞，可能引起手推車損壞和故障，（轉換把手方向使用手推車也是同樣如此）。當越過段差時，即使是微小段段差區的地方應以減緩推行；並踏上腳踏或者是後腳支架及往後按下把手往前行，確保前車輪越過段差才可通行。

使用前請詳細閱讀本說明書並妥善保存作日後參考之用

警告

- 按照美國標準，幼兒有可能滑進手推車的通腳口而被勒斃，只可預備有座位伸延及固定安全腳套的情況下使用斜躺功能。
- 錯誤操作可能引致重大傷害或死亡。
- 使用前一定要確認開關鎖已鎖上，否則手推車會有突然折起的危險。
- 不可於斜坡、階梯、自動電梯、顛簸坡道、沙灘、泥地等場所使用手推車。
- 切勿搬動乘載了嬰孩的手推車，以免手推車突然收合，或手執前護欄等地方搬動手推車，以免手推車意外滑脫，或令前護欄鬆脫，引致手推車掉下。
- 如手推車出現損壞或操作問題，應立即停止使用。
- 為避免意外，兒童應在任何時刻佩帶安全帶，安全帶包含中央帶，腰帶和肩帶。
- 為防止幼兒突如其來的動作令其跌出手推車，即使已經扣上安全帶，也請經常留意幼兒，小心使用。
- 不可讓幼兒站立在車上，這是十分危險的。
- 切勿讓幼兒單獨坐在車上。
- 切勿把身體靠於或把重物掛於把手上。
- 切勿懸掛物件於車篷或把手上，以免引致手推車翻倒。
- 如懸掛包裹或其他物件（附設包裝箱內之物件除外）或配件於手推車上時有可能導致手推車不穩定。
- 切勿承載超過一名幼兒，或讓幼兒坐在座椅以外的地方。
- 承載超重會容易產生不穩定的危險情況。（最大承載重量：15kg。置物籃最大承載重量：5kg。）

安全守則

- 本產品適用於一個月初生兒至15kg（大約三歲）的幼童。
- 收摺，打開或調節手推車時，請勿讓幼兒的手接觸活動零件部份。
- 當幼兒乘坐時，請勿在手扶梯上使用或搬動手推車。
- 使用者必須對本產品作定期保養。
- 每次使用前請檢查配件是否在運輸過程中被損壞。
- 如發現損壞，請勿使用本產品並將其存放在遠離幼童的地方。
- 請勿將本產品放近樓梯或階梯上。
- 只可在乾燥的平地上使用。
- 請勿使用非原廠供應的零件替換或自行改裝手推車。如發現手推車損壞，請聯絡原購買店家或技術服務中心聯絡。
- 禁止於樓梯間使用手推嬰幼兒車。

⚠ 注意

- 錯誤操作可能引致受傷或組件損壞。
 - 請勿將手推車作乘載幼兒以外的用途，否則會引致損壞。
 - 切勿讓嬰孩乘坐未安裝椅墊的手推車。幼兒的手腳可能被車架夾到。
 - 不要讓幼兒操作嬰兒手推車，以免手推車翻倒或發生其他意外。
 - 開關手推車或調節座墊時要注意四周旁人及小孩，以免夾傷指頭。
 - 請勿用力拉動、扭動、壓下前護欄，以免引致損壞。
 - 幼兒坐下後，須扣上安全帶。請確認安全帶沒有鬆脫，以免幼兒突然跌出手推車。
 - 對還未能坐直的幼兒，切勿使用直立角度，請以最平躺角度使用。
 - 假如放低椅背使用時座位太窄，可以將靠背調高一點使用。但注意幼兒應已差不多能獨自坐直，才可這樣使用。
 - 假如幼兒頭部碰到護頭板時，請勿使用躺臥角度。
 - 請勿讓成年人坐上手推車，或在上面放置重物，以免損壞手推車。
 - 推動手推車時請勿奔跑，應慢慢步行，以免轉向輪損壞，或引致翻倒等意外。
 - 置物籃請勿載重超過5kg，以免引致損壞。
 - 推動手推車時請小心路上凹陷之地方，以免前輪意外陷進溝內令手推車翻倒。
 - 請勿於雪地和強風時或濕滑路面上使用，以免令手推車或監護者意外翻倒。
 - 請勿於打雷時使用手推車，以免意外遭受雷擊。
 - 夏天使用時，戶外的天氣和路面情況會令手推車溫度提高，應避免連續長時間使用。
 - 避免將手推車存放於高溫，接近熱源的地方或車箱內，因高溫可使手推車變形。
 - 請勿隨意改造或拆卸手推車。
 - 請定期檢查所有螺絲是否上緊。
 - 請勿於公共汽車上使用手推車。
 - 轉向輪鎖杆應該鎖定於推行者的一方。
- 固定在不正確位置的方向輪鎖杆會令推行更困難，或可能引起手推車故障。
- 當路面石階等段差超過3cm時，請提高前輪跨越石階。直接撞向石階會令前輪受到衝擊，造成產品損壞。
 - 跨越火車軌和汽車道的十字道口等時，請提高前輪跨越間隙，以免前輪意外卡在溝內。
 - 禁止長時間使用
- 連續長時間使用會對幼兒造成負擔。躺臥姿勢的連續使用時間上限為2小時，坐著姿勢的則為1小時。

⚠ 注意

- 有關火車上的使用
本產品並非以火車上的使用為目的所設計的產品。假如閣下自行決定於火車上使用，請小心注意，並鎖上停車鎖，以免轉彎或剎車時令手推車翻倒。
- 打開嬰兒手推車時不要讓他人接觸，以免意外夾傷。
- 請勿在提起手推車的狀態下按下開關掣，以免引致組件損壞。
- 收起手推車後必須確認把手上的安全鎖已鎖好。
- 按開關掣前請先解除安全鎖。錯誤操作可能損壞零件。
- 感覺有異物卡住時，請勿強行摺疊，以免造成損壞。應先打開手推車，確認後再操作。
- 收起手推車前請先確認置物籃內的物品已取出。
- 收摺前請先確認車篷已經完全收起，以免引致組件損壞。
- 收摺前請將轉向輪翻往內側然後鎖定。如果不將轉向輪鎖定在內側位置，收摺後手推車將較易翻倒。
- 轉換把手方向時，請小心確認幼兒手足沒有放在扶手上，以免夾傷。
- 轉換把手方向時，請先從前方確認幼兒狀況後才開始操作。
- 請勿一邊推動手推車，一邊轉換把手方向，以免引致危險。
- 開關手推車時，切勿操作把手鎖，以免造成手推車損壞。
- 無論車內是否載有嬰孩，也須經常按下停車鎖。
- 收起手推車時，請避免橫放，或於上面置放重物，以免車篷變形。
- 請勿手執開放的護欄來拖動手推車。
- 在座席使用的肩帶穿孔和座墊的肩帶穿孔位置要一致。如使用座席的上方肩帶穿孔，座墊亦同樣要使用上方肩帶穿孔，不然肩帶有可能因長度不足繫緊幼兒。
- 一邊推行一邊調較座席角度是非常危險的，請勿同時進行。
- 在已乘載幼兒的狀態下調較座席角度時，請注意勿讓座席角度突然改變。
- 在已乘載幼兒的狀態下調低座席角度時，請以另外一邊手支持著靠背。
- 置物籃裡請勿盛載太尖或太大的東西。
- 請勿使用非中性的清潔劑清潔車架。
- 請注意勿讓油分附在幼兒有機會舔到的地方，如前護欄，扶手等。
- 當旋轉輪固定在錯誤的位置時，可能會妨礙平穩的行走。請確保將其固定在正確的位置。
- 請勿用力按壓前護欄以免損壞。
- 放置、移動兒童時應使用停車裝置

部件名稱

- | | | | |
|----------|----------|----------|-----------------------------------|
| 1. 把手 | 10. 座墊 | 19. 中央帶扣 | 28. 角度調節扣 |
| 2. 護欄鬆脫掣 | 11. 安全鎖 | 20. 腰帶 | 29. 角度調節帶 |
| 3. 護欄套 | 12. 開關 | 21. 中央帶 | 30. 塑膠掛鉤 |
| 4. 前護欄 | 13. 透氣窗 | 22. 開關鎖 | 31. 扶手 |
| 5. 腿部支撐桿 | 14. 天窗蓋 | 23. 把手鎖 | 32. ASTM腳套（僅符合美國ASTM安全基準的市場販賣品配備） |
| 6. 置物籃 | 15. 肩腰帶扣 | 24. 後腳支架 | |
| 7. 腳踏 | 16. 肩帶 | 25. 停車鎖 | |
| 8. 轉向輪鎖 | 17. 肩帶穿孔 | 26. 遮陽棚鈕 | |
| 9. 護頭板 | 18. 腰帶穿孔 | 27. 鬆緊帶 | |

使用方法

打開手推車（圖1.1）

- ❶ 將把手上的安全鎖向箭頭方向滑動並握住。
- ❷ 同時握著並提起開關掣。
- ❸ 稍稍提起並打開手推車。

使用轉向輪（圖1.2）

向上推起轉向輪鎖，即可固定車輪前行方向。注意鎖定之位置會因把手方向而有所不同。

小提示：按下前輪的轉向輪鎖，車輪可自由轉向，改變推行方向更容易。

使用腿部支撐桿（圖1.3）

使用腿部支援桿，可以使幼兒睡覺時姿勢更舒適。

- ❶ 提起座墊，將座椅下的腿部支撐桿抽出。
- ❷ 蓋上座墊，再將鈕扣扣上。

收起腿部支撐桿時解除鈕釦，再將腿部支撐桿推回座椅底部。

警告：承載幼兒時請確保已用鈕釦把座墊和腿部支撐桿扣上。

停車鎖（圖1.4）

壓下左右車輪的停車鎖，即可鎖定。

- ❶ 將停車鎖向上拔即可解鎖。
- ❷ 輕輕前後推動手推車，確定停車鎖已鎖緊。

前輪停車鎖踩到底時可見到綠色標貼，表示手推車剎車裝置已完全鎖住車輪。

警告：在遠離手推車時，請時刻謹記使用停車鎖。

打開前護欄（圖1.5）

- ❶ 如箭頭方向按下前護欄鬆脫掣
- ❷ 抽起前護欄。

安裝前護欄（圖1.6）

要鎖上護欄時，請先將護欄提起，照準末端突起部位，然後插入安裝。

警告：請勿手執前護欄搬動手推車。

調節車篷大小

(圖2.1) 以較小幅度使用時

將車篷往後收摺。

(圖2.2) 以較大幅度使用時

將車篷再往前方打開。

打開天窗 (圖2.3)

❶ 打開天窗須將鈕釦打開。

❷ 關閉天窗將車篷上的鈕釦重新扣上。

調節中央帶 (圖2.4)

❶ 將肩帶扣在左右兩方插扣片上的肩帶鉤上。

❷ 拉出中央帶，將左右兩方的插扣片插進中央帶的安全帶扣內，直到聽到[咔嚓]一聲為止。

❸ 收緊中央帶，如圖 ㉑ 拉出中央帶到最末端，為最短狀態。

延長時，如圖 ㉒ 箭頭方向拉出中央帶到末端，按照圖 ㉓ 箭頭方向拉到底，為最長狀態。

警告：任何時刻都必須使用安全帶

小提示：當改變靠背角度時，請謹記檢查並確認安全帶已作出最適當的調整。

安裝腰帶 (圖2.5)

將腰帶參照圖示的步驟來進行安裝。

小提示：注意腰帶末端應留下3cm以上的長度。

小提示：若解除請按照相反的步驟操作。

肩帶的調節方法和腰帶的調節方法相同。

調節靠背

(圖3.1)

❶ 調低座席角度時，先以單手支撐著靠背。將角度調節扣往下拉調底靠背。

❷ 擋頭部自動升起。

(圖3.2)

將角度調節帶往箭頭方向拉來調高靠背角度。

小提示：幼兒靠在靠背時，角度調節會變得困難。

斜躺操作困難，斜躺帶有時會被扭曲。通過以下步驟改正扭曲的斜躺帶。

將靠背設置最低。

將斜躺帶整體地從帶固定的地方扭轉方向。

手推車換向 (圖3.3)

將左右兩邊的把手鎖拉起解除後轉換把手方向，直至把手鎖重新鎖上為止。

收摺手推車（圖3.4）

如圖中箭頭方向拉動安全鎖作解除。

一邊握住折疊按鈕，一邊提起推把桿，然後按下推把桿，推車被折疊起來。

警告：在收摺手推車前，請確保與幼兒保持安全的距離，請勿讓幼兒觸及活動零件。

置物籃（圖4.1）

置物籃的最大承載重量是5kg。

使用安裝帶子及帶扣并按照步驟 ❶ ❷ ❸ ❹ 安裝或拆除置物籃。

拆除座墊的方法（圖4.2-4.6）

- ❶ 按下安全帶扣按鈕，將插扣片從安全帶扣解下。
- ❷ 解除座墊末端和腿部支撐桿間的鈕扣（如有使用腿部支撐時）。
- ❸ 將中央帶從座墊上拉出。
- ❹ 解除背板尾部兩側的鬆緊帶。
- ❺ 將肩帶、腰帶從座墊拉出。
- ❻ 解除座墊前端（兩處）的鈕扣和前端底下的鬆緊帶，及座墊兩側邊中間部位的鬆緊帶。

腰帶的安裝方法（圖4.7）

- ❶ 先解除腰帶兩方的腰帶扣。
- ❷ 將腰帶的內側向上通過背板上的4個腰帶穿孔。
- ❸ 再將兩方的腰帶扣安裝上去並且穿過座墊對應的穿孔。

小提示：安裝腰帶時必須要穿過（4個）腰帶穿孔。

調節肩帶高度（圖4.8）

- ❶ 先將肩帶從座墊及背板上拆除。
- ❷ 將肩帶穿過背板上正確的肩帶孔。
- ❸ 將肩帶穿過座墊上正確對應的穿孔，並確認兩邊穿孔在適當的高度。

小提示：當幼兒未滿六個月時，請使用最低的肩帶穿孔。

使用ASTM腳套（圖4.9）

- ❶ 手執前護欄末端如圖般按緊左邊的護欄按鈕，將前護欄提起后慢慢將鬆緊帶和腳套穿到前護欄上。
- ❷ 然後將另一方的鬆緊帶固定突起部分及將前護欄提起，向末端突起部分準確地按下。
- ❸ 固定前護欄后，將兩側的固定帶如圖般穿過兩側的后腳管后固定，這樣便完成安裝。

保養方法

- 切勿強行拉動活動零件或裝置。
- 請勿把產品存放在潮濕的地方以免產品發霉。
- 避免把產品長時間暴露於雨水或雪霜之中。
- 請以濕布清潔金屬及塑料部位。如遇頑固污垢，可使用稀釋的清潔劑。
- 若感到手推車操作或運行不順暢時，可以添加適量的潤滑劑。注意不要添加過多的潤滑劑，否則反而會容易沾上塵埃，引起操作異常。
- 注意某些部位不可以加潤滑劑，如把手操作部、座席安全帶扣、前扶手的安裝部、開閉鎖周圍、轉向輪迴轉部、否則可能引起動作不良。
- 若需妥善保養方式，請與康貝技術服務中心聯繫。

清洗縫製品洗滌指引

- ※ 請注意不要損壞遮陽篷的塑膠部分或籃子的u字鉤子等。
- ※ 根據產品的特性，會有輕微的褪色。
- ※ 洗滌的時候建議使用中性洗滌劑。使用含螢光劑、漂白劑的清洗可能會引起皮膚乾燥、濕疹等，所以請不要使用這類洗滌劑。
- ※ 根據保管狀態，會有發黴的現象發生，請小心洗滌及保持清潔。
- 座墊、肩帶、腰帶等縫製類的洗滌方法
 - 請以溫水手洗或弱速機洗。
 - 使用洗衣機的時候，請將縫製品放入柔洗袋內，避免縫製品損壞。
 - 手洗後，請輕輕的擰幹，大力擰幹的話可能會使縫製品留下褶皺。
 - 部分縫製品可能會出現掉色，請跟其他物品分開清洗，另外請避免泡洗。
 - 輕輕擰幹後，整理好形狀，放於陰涼處晾乾。
 - 請勿使用烘乾機、熨斗及乾洗以免縫製品損壞。
- 遮陽篷、置物籃、中央帶的保養方法
 - 請不要把遮陽篷、置物籃、中央帶類縫製品泡在液體中。請用擰乾的濕布，或是用海綿沾已稀釋的中性清潔劑清潔。
 - 使用中性清潔劑把污垢擦拭掉後，為了不讓清洗劑殘留在產品上，請用濕布或海綿反覆擦拭。
 - 然後用乾布將產品上的水分擦乾後，至於陰涼處陰乾。

memo

memo

Combi Corporation

178606060