

Combi

NE-YO AUTO 4CAS



EN Instruction manual

繁體中文 說明書


NE-YO AUTO 4CAS









ENGLISH Instruction manual 7






繁體中文 使用說明書 18






List of components (Please refer P13)

部品名稱(詳見P22)


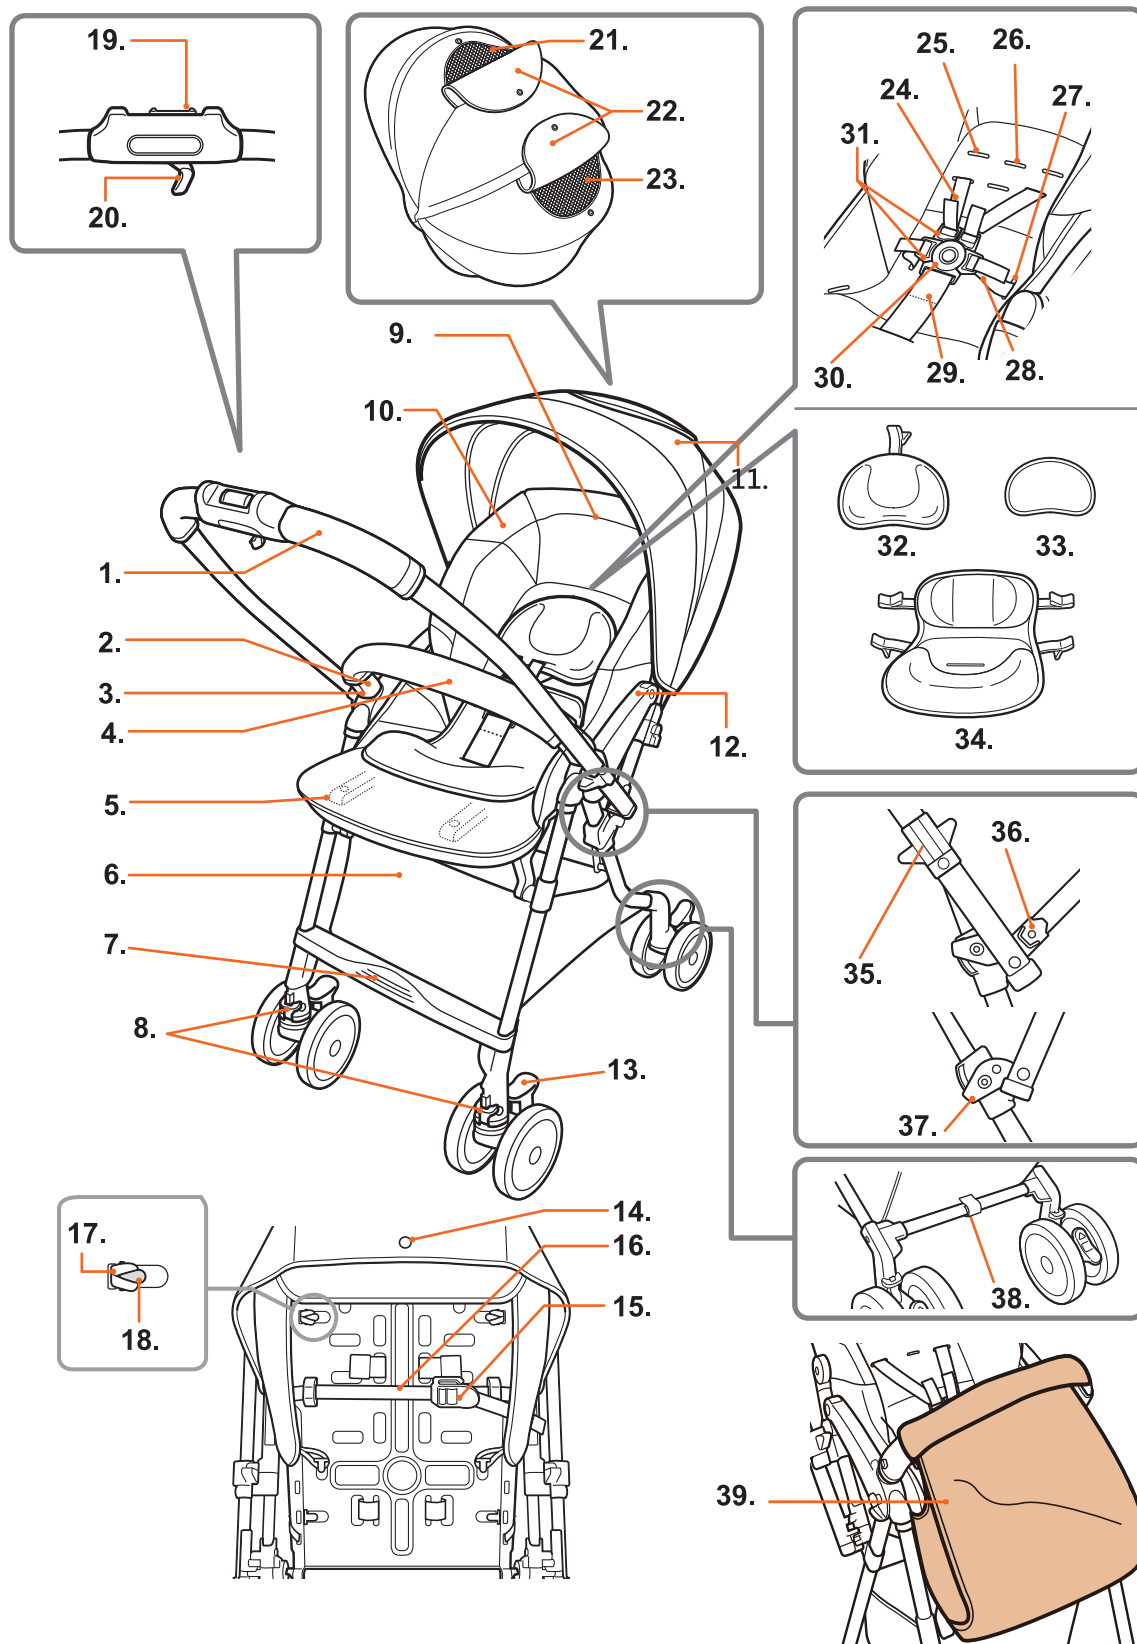


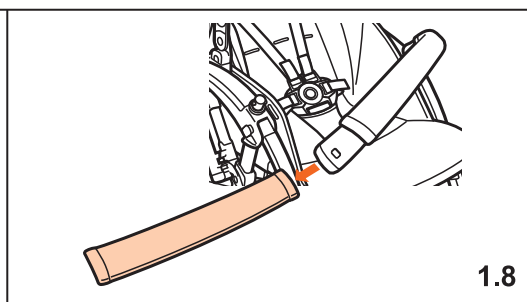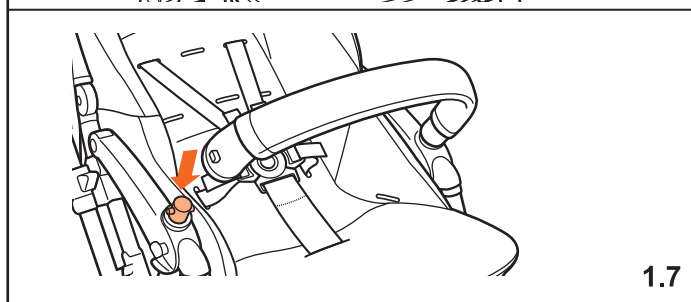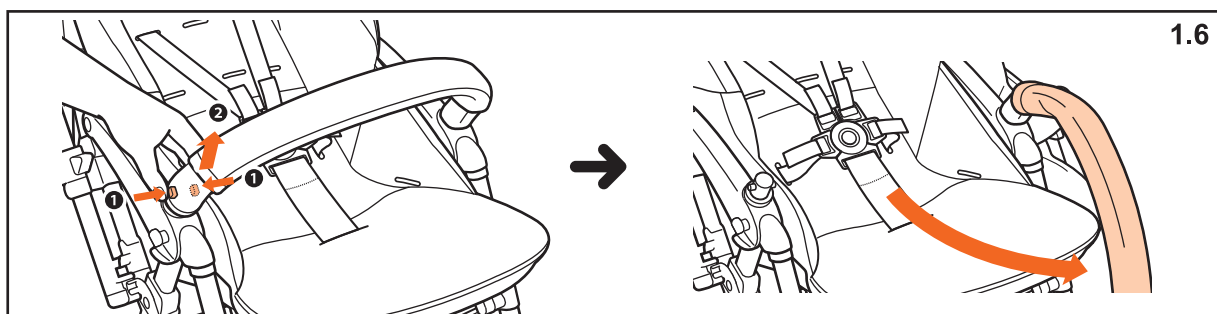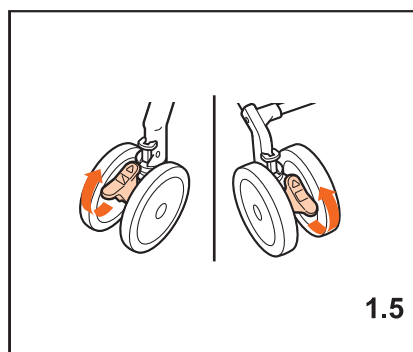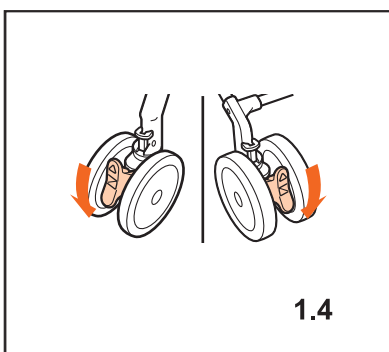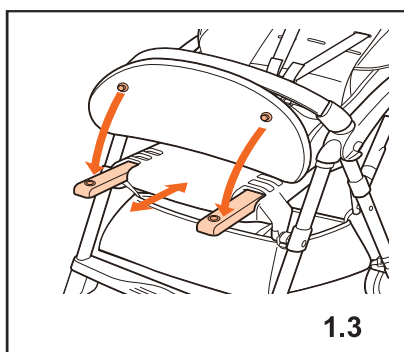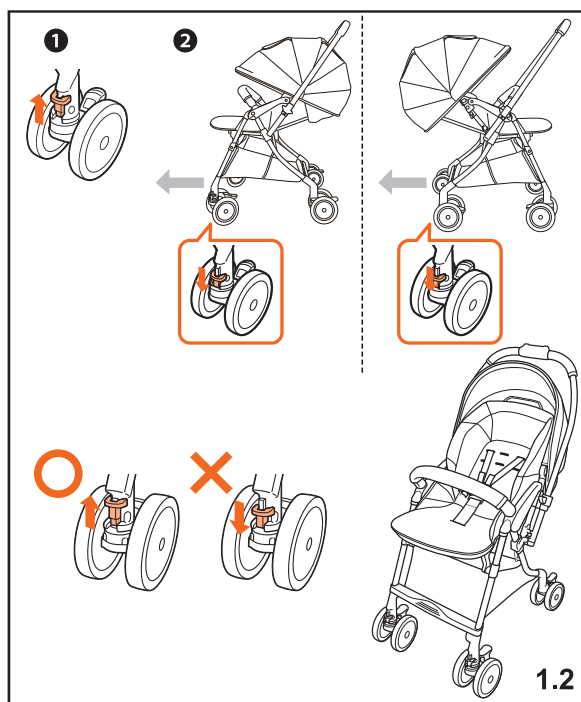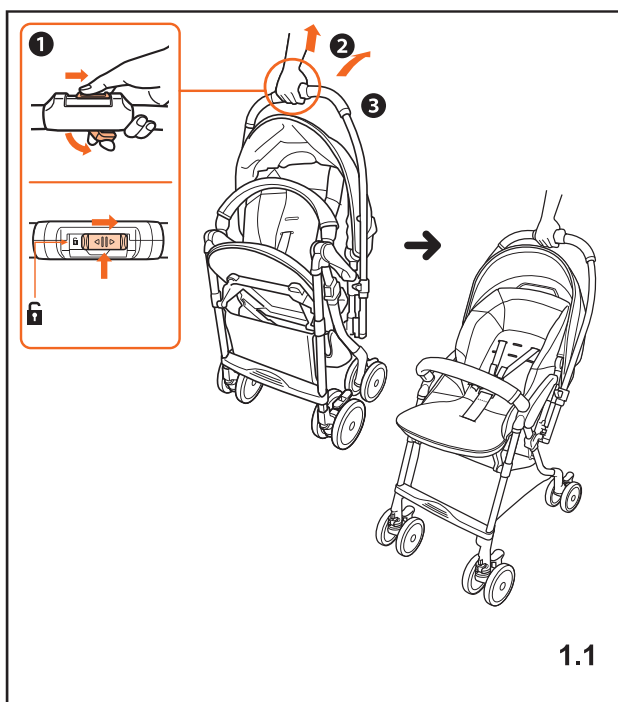

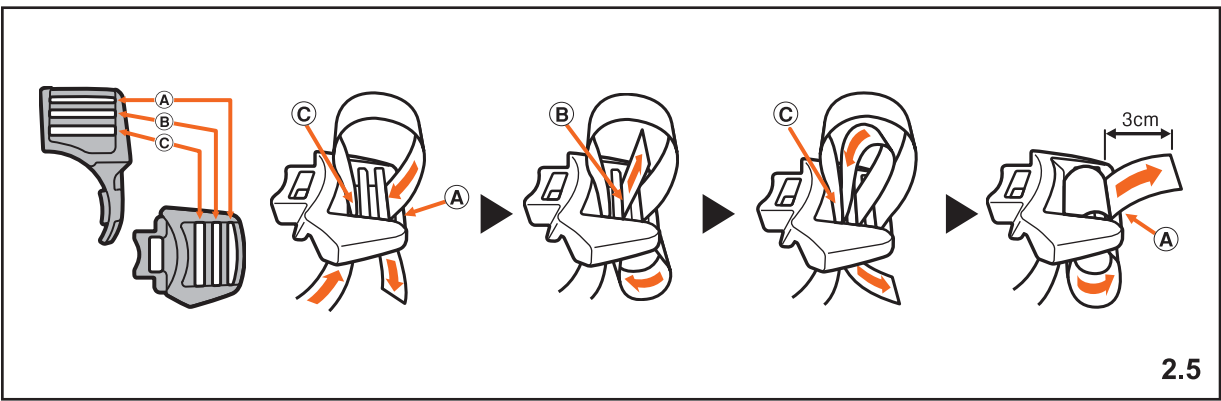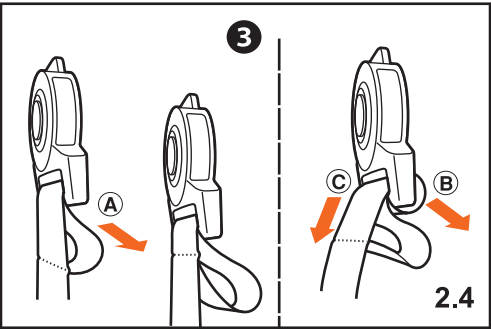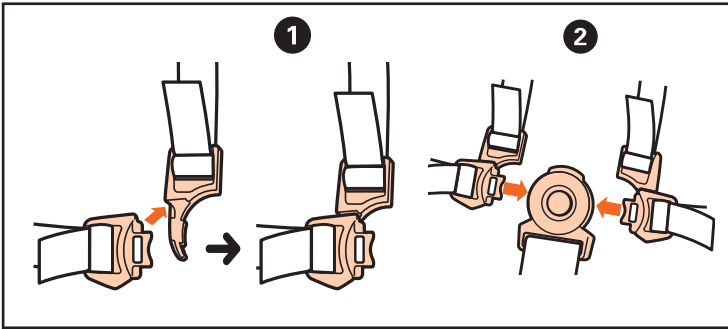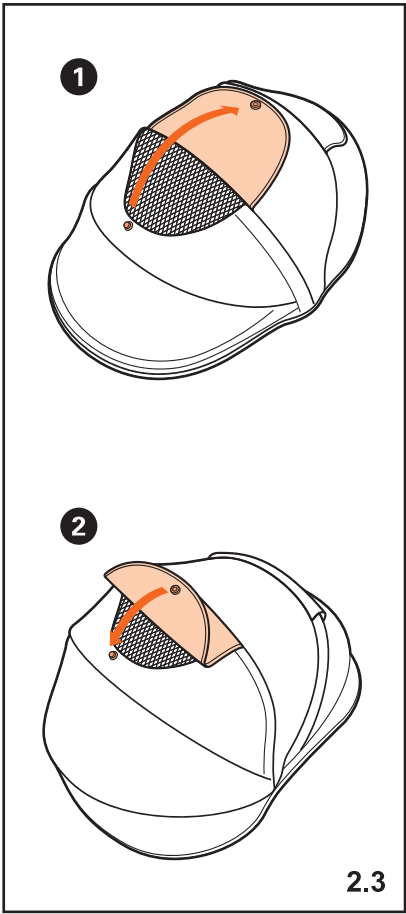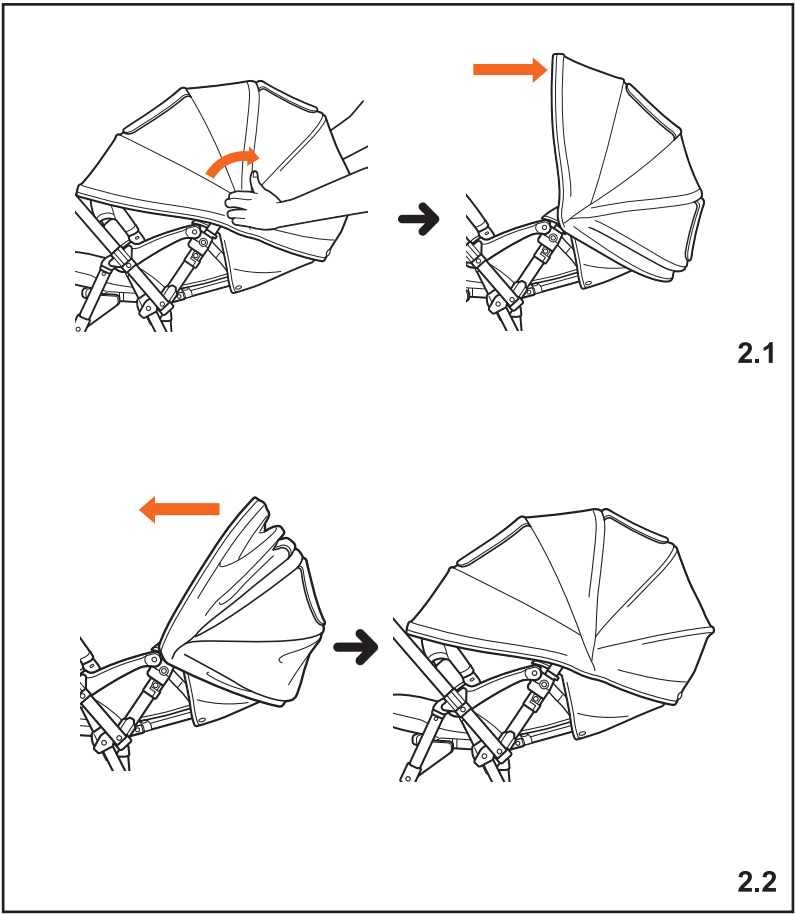


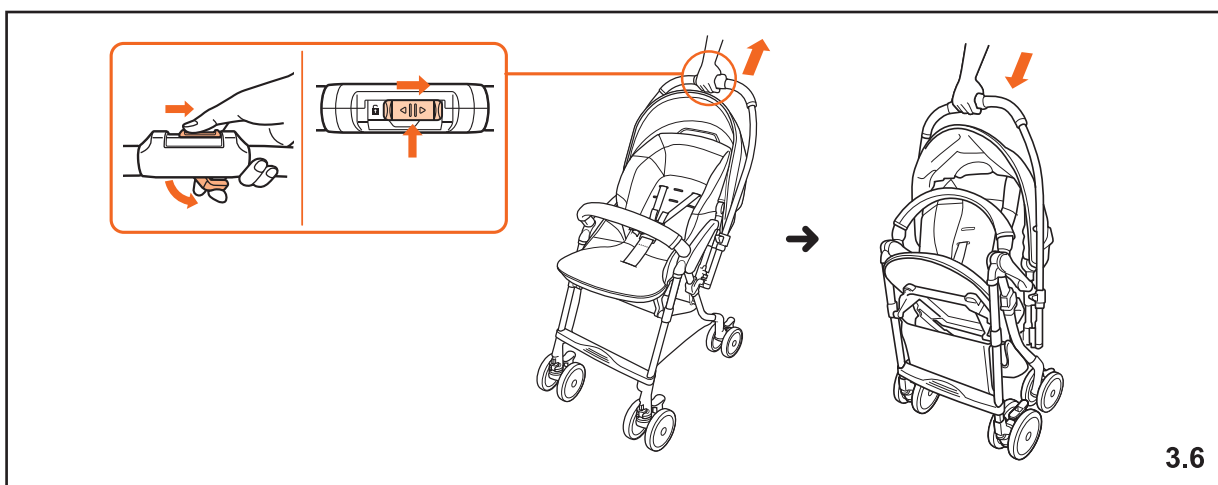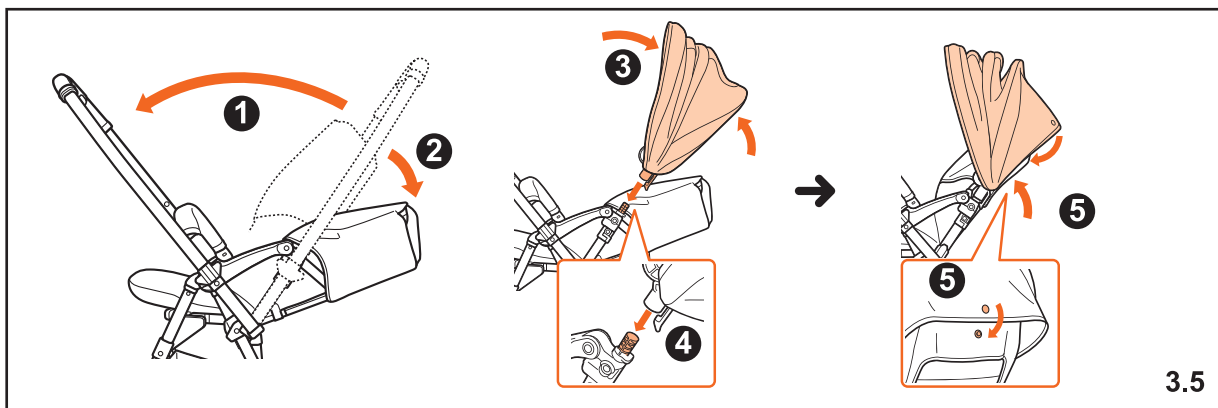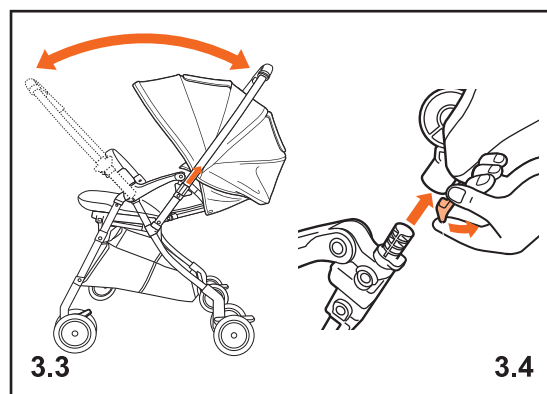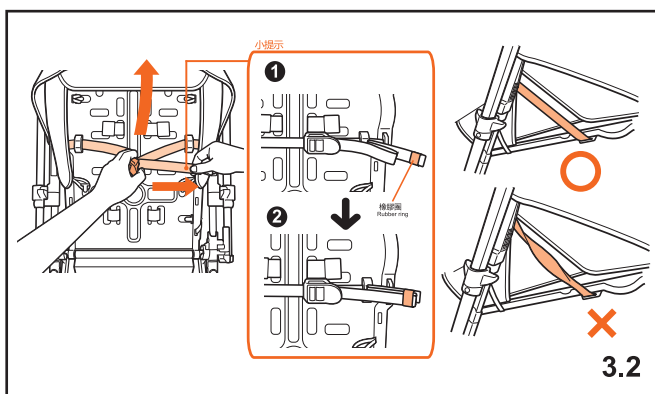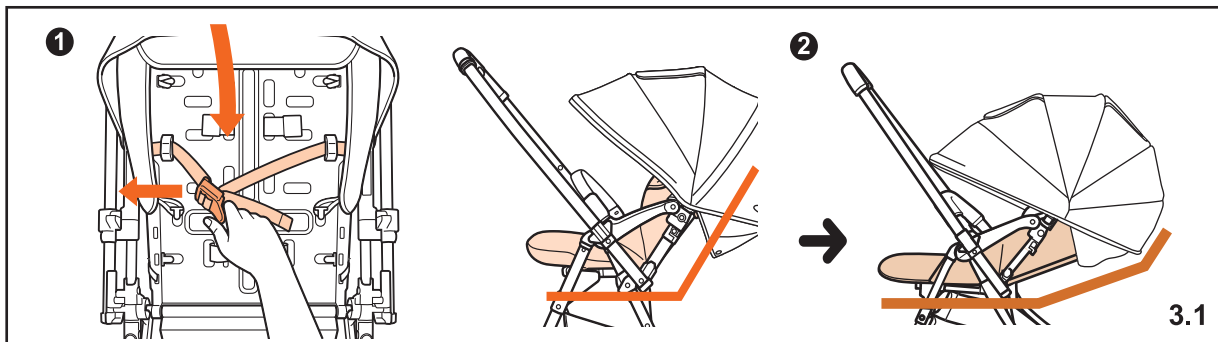


Max : 5kg

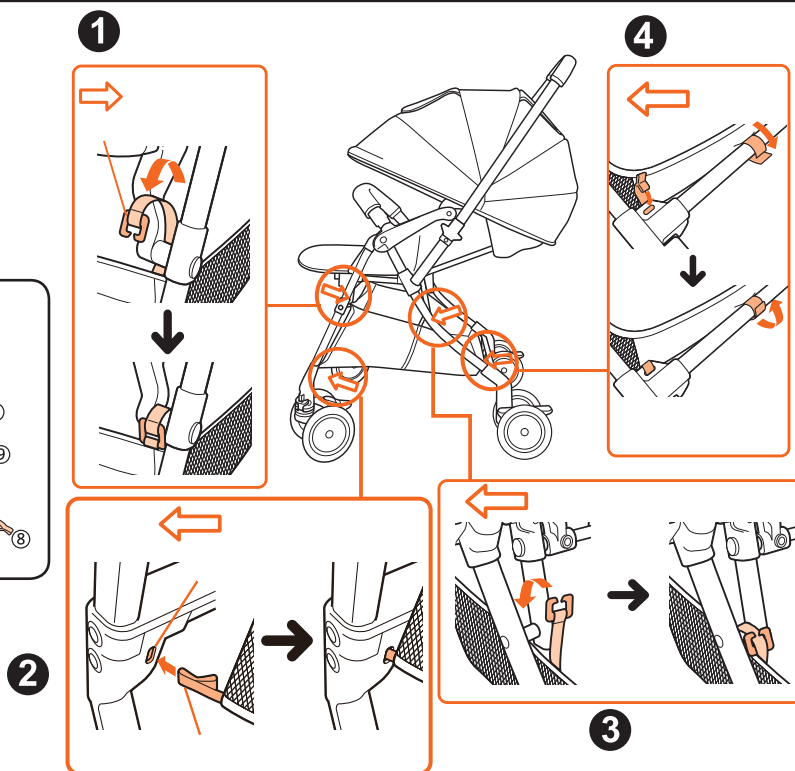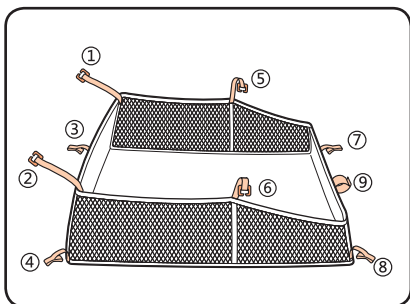


4.1

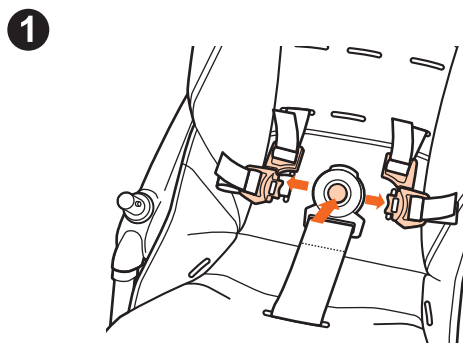


4.2

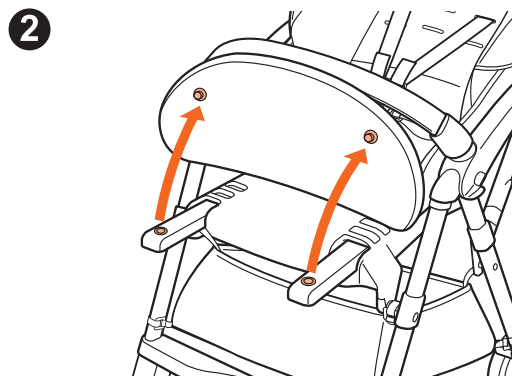

4.3




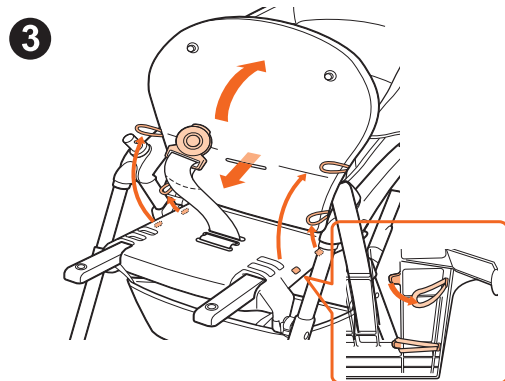





4.4

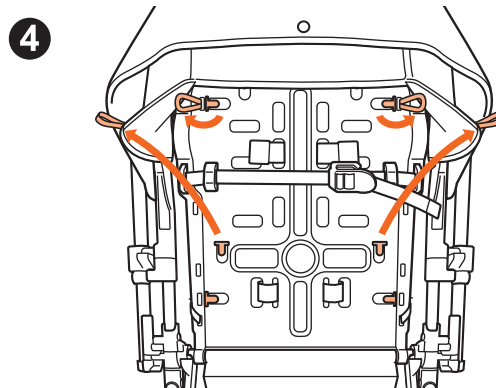

4.5

4

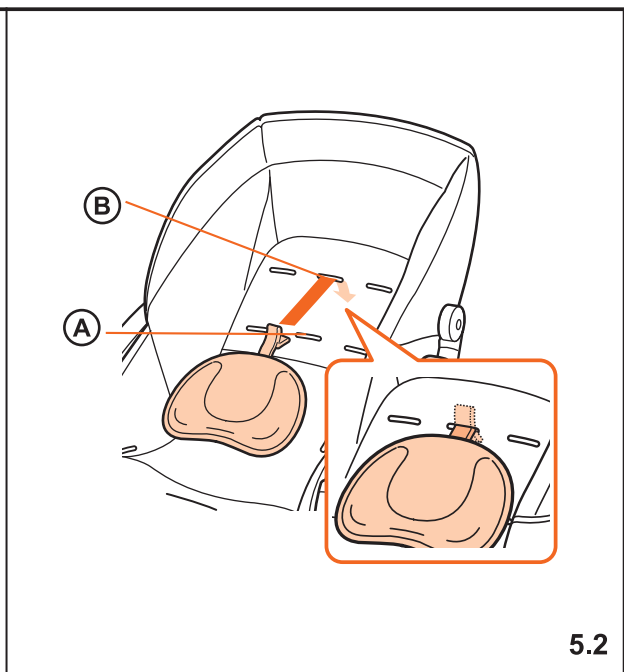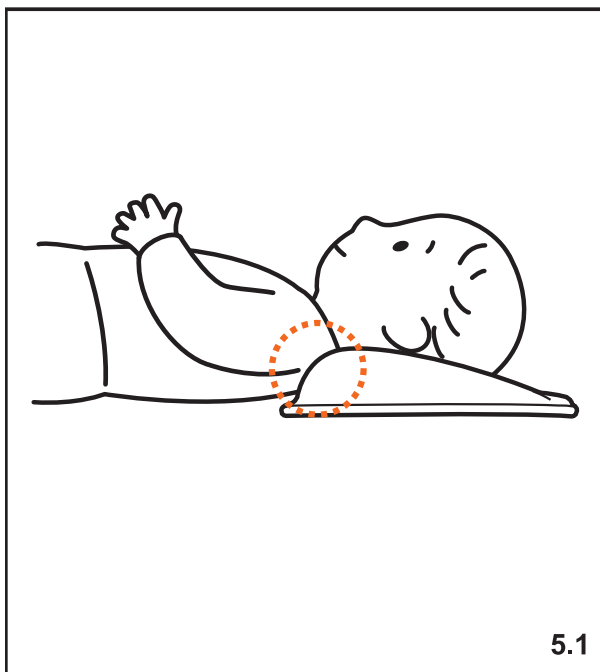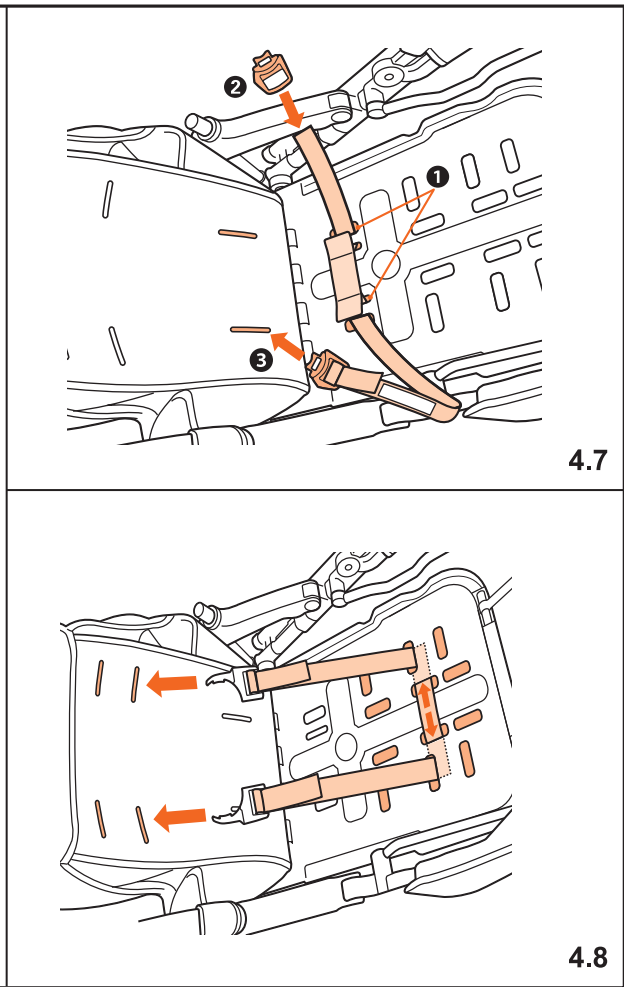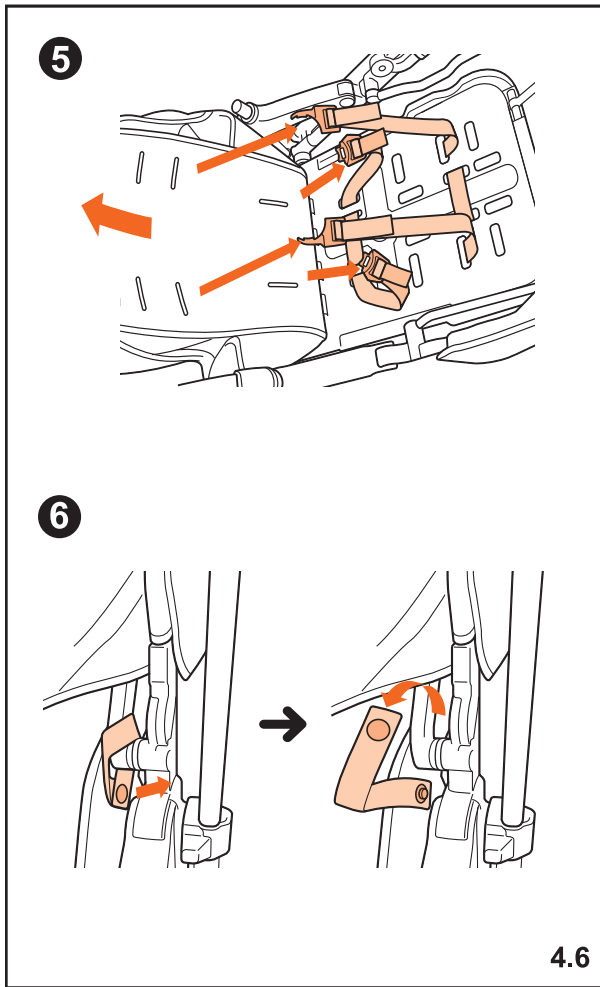

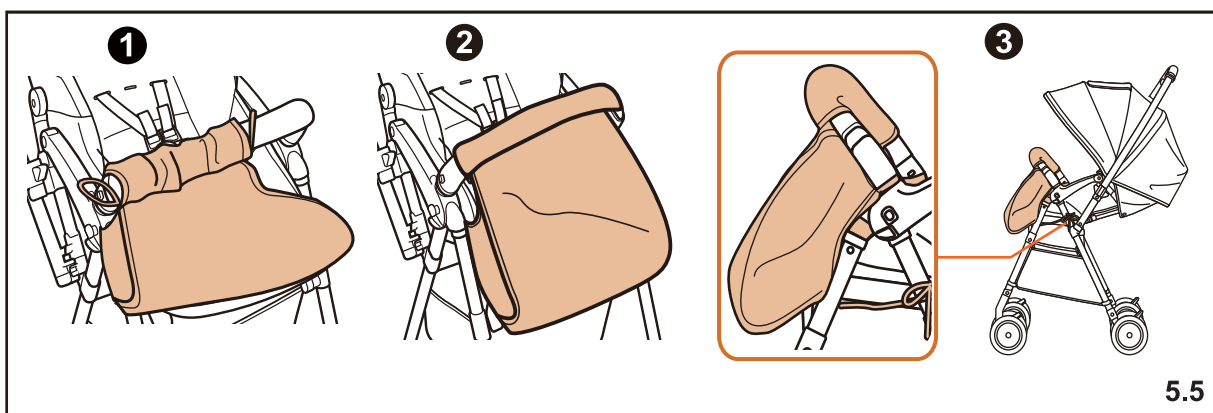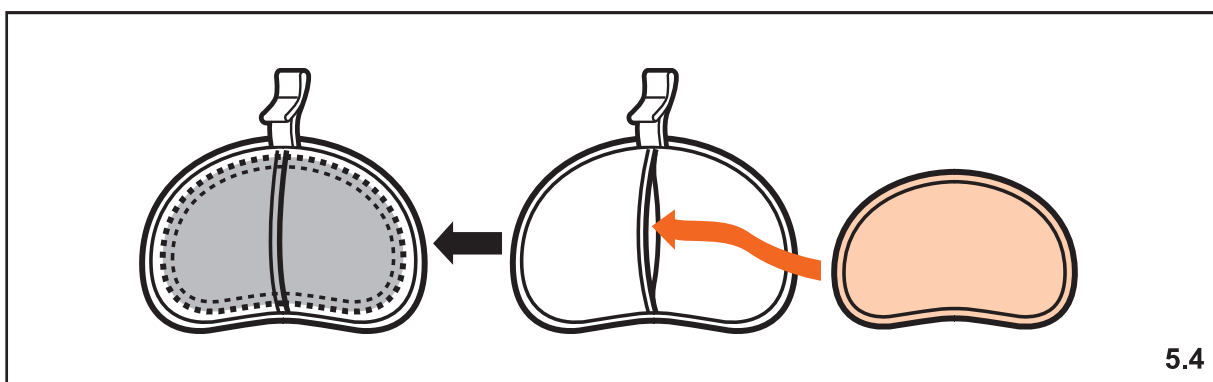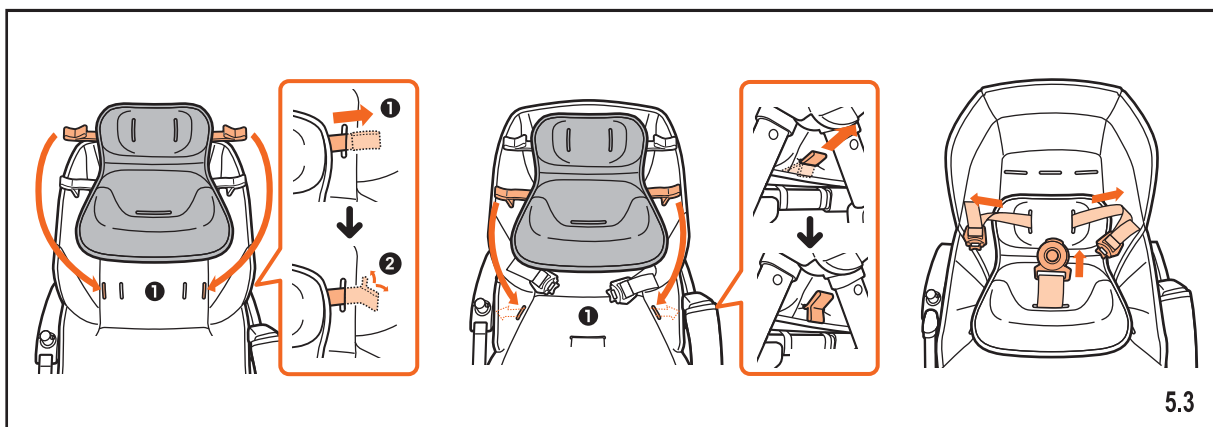

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING (Incorrect operation may cause serious injury or death)

Please read this instruction manual carefully and keep it for future reference. The safety of the child may be seriously endangered if the instructions are not followed.

You are personally responsible for the safety of your child.

The stroller is suitable for children from 1 month to 15kg (approximately 3 years of age).

EN

- Ensure that all the locking devices are engaged before use.
- Always apply the parking brake when you are stationary.
- Do not rely too much on the stoppers even when the stroller is parked empty.
- When a baby is in the stroller, you should always pay attention to the stroller to avoid any danger. In addition, both the left and right parking locks should be used at the same time to avoid accidental sliding or overturning.
- Keep all small parts away from children as they are choking hazard.
- To prevent the risk of suffocation, always keep the plastic bags out of the reach of children.
- Overloading, incorrect folding and the use of non-approved accessories such as buggy boards may damage or break this stroller.
- Always let the child wear the seat belt in the stroller to avoid any possible accident.
- The child being carried by the stroller must be tied with the seat belt that contains the crotch belt, waist belt and shoulder belt. The front guard cannot prevent the child from standing up from the cushion. Make sure the seat belt is not loose to prevent the child from suddenly falling out of the stroller.
- Pay attention to child even when seat belt is in use in case of any sudden movement of child causing it to fall off.
- Do not cross the shoulder belts with each other when securing the shoulder belts to the insert plastic. Otherwise excessive pressure may be caused to child's neck.
- Do not use the seat cushion on which rift is found. Otherwise the seat cushion may not function as designed or the child may have chance to swallow the material inside the cushion.
- Never leave the child in a stroller without seat cushion. The child's hands or feet may get jammed between the stroller frame.
- When a child is sitting in it, the caretaker is not allowed to leave.
- Make sure the open-fold lock is engaged completely before use. Otherwise the stroller may fold suddenly when using.

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.



WARNING (Incorrect operation may cause serious injury or death)

- To prevent the stroller from accidental slippage, or falling off from the stroller by loosening of the front guard, do not hold the front guard or places like that when moving the stroller.
- Do not let the child operate the front guard. It may make the child fall off from the stroller.
- Never leave your child unattended.
- Do not allow your child to stand in or on the stroller, it may be dangerous.
- Do not lean on or hang loads on the handle. Putting any load on the handle will affect the stability of the stroller.
- Do not hang any object (except original Combi parts) on the hood or handle to prevent the stroller from overturning.
- Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas other than the seat.
- Excessive weight may cause a hazardous unstable condition
(Maximum load: 15kg. Basket maximum load: 5kg)
- Do not use the stroller on stairs.
- Do not let children operate the baby stroller to avoid accident.
- Be careful of those around you to avoid pinching their fingers when you are opening or folding the stroller or adjusting the seat angle.
- Keep your child hands away from moving/folding parts when folding or unfolding or adjusting the stroller.
- Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat must be used.
- When pushing the stroller, please walk slowly to avoid any damage to the stroller swivel wheels or any tipping over happened.
- Don't let others touch when you open the stroller to avoid accidental injuries.
- In changing the handle direction, check and ensure that the baby's hands and feet are not on the side of armrest to avoid pinching.
- Do not reverse handle while pushing the stroller. Otherwise damage may be caused.
- Shoulder belt hole positions on the seat and the cushion must be aligned.
- If upper shoulder belt hole on the seat is used, upper shoulder belt hole on the cushion should be used; otherwise the child may be held tightly because the shoulder belt is not long enough.
- Do not adjust the seat angle while pushing the stroller because this is very dangerous.
- Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless the ASTM-footcover is attached.

EN

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.



WARNING (Incorrect operation may cause serious injury or death)

WARNING: It may be dangerous to leave your child unattended.

WARNING: Ensure that all the locking devices are engaged before use.

WARNING: When your baby is sitting in the stroller, please be sure to fasten the safety belt.

WARNING: Do not use in a reclined angle less than 150° for a child under 6 month old.

WARNING: Any loading attached to the handle affects the stability of the stroller.

WARNING: Please always fasten the five-point seat belt to ensure the baby's safety .

WARNING: Check that the pram body or seat unit attachment devices are correctly engaged before use.

WARNING: This product is not suitable for running or skating.

EN



CAUTION (Incorrect operation may cause injury or component damage)

- Make sure all snaps are secured before use. Otherwise accident or damage to stroller may cause.
- When adjusting the seat angle with a child in the stroller, loose the shoulder belt first, and then adjust the angle with the other hand holding the backrest. Please be careful not to change the seat angle suddenly.
- Adjust the length of seat belt properly after changing of the seat angle.
- Please do not touch the folding lever except when folding the stroller.
- When opening or folding up the stroller and reversing the handle, be careful and avoid the seat cushion, seat belt, blanket and toys, etc., pinched into the stroller body.
- If one gives excessive shock to the front wheels when getting over the step, stroller may fall down and cause damages. (It is the same as changing handle direction to use the stroller.) When stepping over, such as a curb, please slow down even a slight difference level, pull downward the handle and step on the foot-step, and make sure to pass the front wheel to get over the step.
- Never lift the stroller or use it on escalators when your child is sitting or lying in the stroller.
- This stroller requires regular maintenance by the user.
- Before use, check that the product and all its components have not been damaged during transportation.
- Please do not use the stroller in whatever purposes other than seating a baby. Failure to comply may result in damage of the stroller.
- Do not pull or twist or forcibly press down the front guard hardly. Otherwise the stroller may be damaged.
- Do not use an adult sit on the stroller, or add loading on the stroller to avoid any damage to it.
- When used in summer, outdoor weather and road conditions will increase the temperature of the stroller, that using for a long time should be avoided.
- Avoid storing the stroller in places that under high temperature, near a heat source or inside a car. Exposure to high temperature may damage or deform the stroller.
- Check regularly that all screws, bolts and nuts are engaged tightly.
- Swivel wheel lever should be secured at the same side of the pushing person.
- Lever secured in wrong position may affect maneuvering or damage the product.
- For use on trains: This product is not designed to be used on trains, When user attempts to use the product at his / her own risk, please lock stoppers in case of sudden brake or turning. Otherwise stroller may fall off.

EN

CAUTION (Incorrect operation may cause injury or component damage)

EN

- Do not press on the folding lever while lift the stroller to avoid damage to the part.
- Make sure the basket is empty before folding up the stroller.
- Make sure the canopy is completely folded up before folding the stroller to avoid damage of the parts.
- Do not touch at the handle lock when folding or unfolding the stroller. Otherwise damage may be cause to the stroller.
- Do not lay down the stroller and do not put things on the canopy to avoid deformation.
- Do not get hold of an opened front guard to pull the baby stroller.
- Please do not put the stroller near fire.
- The stroller may slide or overturn accidentally even if the parking lock is engaged.
- Do not leave baby stroller at road side or slope even when it is not in use.
- Do not use the stroller on steep slopes, stairs, escalators, rough roads, beaches, mud, etc.
- When pushing the stroller, be careful of the road depression to prevent the front wheels from being trapped into the slot and overturning.
- In the event of damage or operational problems, stop using the stroller Immediately and contact the customer service center.
- If damage is identified, do not use the product and keep it out of reach of children.
- Never leave the stroller close to stairs or steps.
- Use the stroller on flat ground only. Never use any parts from other sources than the original producer. Do not refit the stroller.
- Do not use the most reclined angle if the baby's head touches at the head rest.
- Do not use the stroller in snowy, windy days or wet road to avoid the stroller or guardian from slipping.
- Do not use the stroller in lightning days to avoid thunder stroke.
- Do not modify or remodel the stroller.
- Do not attach other accessory like buggy board on the main body during a child being carried in stroller, otherwise accident or damage to stroller may cause.
- Do not use this stroller inside the bus.

⚠ CAUTION (Incorrect operation may cause injury or component damage)

- Lift front wheels and pay particular attention to gaps or ditch when crossing rail road.
- No continuous use for a long period:Continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby seated in a reclined seat and 1 hour in an upright seat.
- When feel jammed, please do not forcibly fold the stroller to prevent from any damage. You should re-open the stroller to check and operate again.
- Turn swivel wheels to inner side and lock up before folding the stroller. Improper position may cause stroller becoming imbalanced after folded.
- Do not put things too sharp or too large into the basket.
- Please regularly clean and check the stroller. Only use neutral detergent to clean the stroller body.
- Make sure no oil or lubricant is left on parts such as front gurad or armrest where baby may have chance to lick.

EN

LIST OF COMPONENTS

1.Handle	16.Reclining cord	29.Crotch belt
2.Front guard buttons	17.Elastic	30.Crotch buckle
3.Front guard	18.Plastic hooks	31.Shoulder and waist belt buckle
4.Front guard cover	19.Safety lock	32.Head support
5.Leg support bar	20.Folding lever	33.Eggshock pad
6.Basket	21.Top window	34.Body & Hip support
7.Foot rest	22.Top window cover	35.Handle lock
8.Swivel wheel lock	23.Ventilation window	36.Open/Fold lock
9.Headrest	24.Shoulder belt	37.Rear leg latches
10.Seat cushion	25.Shoulder belt insert outlet	38.Rear stay
11.Canopy	26.Head support insert outlet	39.ASTM foot cover (Only for packages that comply with ASTM safety standard)
12.Armrest	27.Waist belt insert outlet	
13.Stopper	28.Waist belt	
14.Canopy snap		
15.Seat reclining buckle		

INSTRUCTIONS

Unfolding/Opening (Figure 1.1)

- 1 Slide the safety lock as demonstrated direction and hold it in place.
- 2 Grip and pull the folding lever upwards simultaneously.
- 3 Slightly lift the stroller and open it.

Using the swivel wheels (Figure 1.2)

- 1 To use the swivel wheels - Lift the swivel wheel locks (left and right) to release. (according to the moving direction).
- 2 Swivel wheels not in use - Press down the swivel wheel locks (the ones at the same direction of the user) to lock.

⚠ WARNING: When you switched the normal use or handle, please make sure to raise the swivel wheel locks to release the locks. If you do not release the locks, there is a possibility that the wheels are not automatically switched. When reversing the handle, please release swivel locks (total 4 places) When the wheels are locked in the wrong direction, the stroller may damage to the parts while open.

Using the leg support bar (Figure 1.3)

Apply the leg support for better comfort when child is asleep.

- 1 Press the stoppers down which are located at wheels on both left and right sides.
- 2 Lift the stoppers to unlock.

To store the leg support bars

Release the snaps and push the bars back to the seat base.

⚠ WARNING: Make sure to snap the seat cushion onto the leg support bars while carrying the baby on stroller.

Using the stoppers (Figure 1.4)

- 1 To lock wheels, press the stoppers down which are located at wheels on both left and right sides.
- 2 Try to push the stroller back and forth slightly to ensure that the stoppers are properly engaged.

NOTE: Check the stoppers are fully engaged by gently attempting to push the stroller.

⚠ WARNING: Always engage the stoppers when you leave the stroller.

Release the stoppers (Figure 1.5)

Lift the stoppers to unlock.

Open the front guard (Figure 1.6)

- 1 Press and hold the button at the end of the front guard as illustrated.
- 2 Detach the front guard.

Attach the front guard (Figure 1.7)

To attach front guard, lift and plug into the projected part at the end of the armrest.

⚠ WARNING: Do not hold of the front guard to lift the stroller.

Detaching the front guard cover (Figure 1.8)

- ① Press and hold on the front guard buttons and release the front guard.
- ② Detach the front guard cover from the front guard.

Sun Canopy (Figure 2.1)

Unfold the canopy from backward.

(Figure 2.2)

Full size canopy: Pull canopy forward to adjust the size.

Top window (Figure 2.3)

- ① Open top window by releasing snaps.
- ② Fasten the snap to close top window.

Install and adjust the crotch belt (Figure 2.4)

- ① Attach shoulder belts to the shoulder belt hook of the left and right insert plastics.
- ② Pull out the crotch belt and put the insert plastics into the buckle until a "Click" sound is heard.
- ③ Tightening
 A Pull out the center belt to the end.
 B Follow the direction of arrow and pull out the belt to end.
 C Follow the direction of arrow and pull the belt to the end.

Pull the center belt end Pull the shoulder belts and waist belts to check if it is secured.

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use seat belt.
NOTE: When changing the seat recline angle, always check the harness to ensure it is still optimally adjusted.

Adjusting the waist belt (Figure 2.5)

Pull the belt in the direction as illustrated to adjust its length.

NOTE: Always leave at least 3cm at the belt end.

NOTE: To release harness, go in the steps reverse.

The steps of adjusting shoulder and waist belts are the same.

Adjusting the backrest (Figure 3.1)

Support the backrest with one hand before reclining the backrest.

The headrest will be lifted automatically after the backrest is reclined. (movable headguard)

(Figure 3.2)

Pull the reclining cords as illustrated to raise the seat back.

NOTE: Raising the backrest may be difficult while a child is leaning on the backrest.
The reclining belt sometimes is twisted , Correct the twisted reclining belt by the following steps:

Set the backrest down to the lowest.

Hold the belt mounting part and turn to the direction of the twisted reclining belt.

Reversing handle (Figure 3.3)

Lift and release the handle locks to change the handle direction until the locks are secured in places.

Detaching the sun canopy (Figure 3.4)

Pull out the canopy joint end gradually, pull up the canopy away from the holder.

Attaching the sun canopy (Figure 3.5)

- ① Switch the handle to face rear. Refer to this page "Reversing the handle".
- ② Recline the backrest to the lowest angle. Refer to this page "Adjusting the backrest".
- ③ Place the canopy facing the proper direction.
- ④ Plug the canopy joint into the canopy holder.
- ⑤ Lift up the backrest, and fasten the canopy snaps.

Folding the stroller (Figure 3.6)

- 1 Slide to release the safety lock of direction as illustrated.
- 2 Grip the folding lever and slightly lift up the handle, then press down the handle to fold the stroller.

⚠ WARNING: When folding the stroller, please ensure your child and other children are kept at a safe distance. Please ensure that they are not in contact with mounting parts and remove all items from the basket before folding the stroller.

Basket (Figure 4.1)

The basket can carry a maximum weight of 5kgs. You can attach and remove it using the belts and snaps according to step 1, 2, 3 and 4.

Detaching the seat cushion(Figure 4.2-4.6)

- 1 Release front snaps and elastic bands underneath of the seat, and on both sides of seat. Remove the shoulder belts from the shoulder belt hooks.
- 2 Detach the snap on the seat cushion from the leg support bar (if the leg support bar is in use)
- 3 Pull out crotch belt from seat cushion.
- 4 Release both elastic bands from backrest sides.
- 5 Pull out shoulder and waist belts from seat cushion.
- 6 Release the snaps of elastic on both cushion sides and unwind (one circle) from the connections of armrest sides for detachment.

NOTE: To install seat, go in the steps reverse.

⚠ WARNING: Make sure the seat cushion has been correctly attached before use.

Attaching the waist belt(Figure 4.7)

- 1 Remove two of insert plastics buckle from the waist belt.
- 2 According to the direction of arrow instructions Pull the waist belt through the 4 slits on the base board with the reverse side(waist belt) facing up.
- 3 Re-attach the insert plastic buckle.

NOTE: Make sure to pull through all waist belt insert outlets(total 4 places)when attaching the waist belt.

Adjust shoulder harnesses heights (Figure 4.8)

- 1 Pull out shoulder harnesses from seat cushion and base seat.
- 2 Set the correct slots of shoulder harnesses through on the base seat.
- 3 Set correctly the harness shoulder heights and pull it out through relevant slots of seat cushion.

NOTE: The lowest shoulder belt insert outlet should be used for children under 6 months.

Installing the dacco cushion (Figure 5.1)

Correct position of head support - The cushion pad of the head support should just touch at the child's neck. Below is the age reference of using dacco cushion.

	1Month	starting to sit without aid	36Months
Head pad	←→		
EggShock pad	←→		
	Attached in the head pad		
Body & Hip support	←→		

※ Indicated age for reference only , please apply according to child's body size.

Installing the head support (Figure 5.2)

Loop the head support belt through the head support hole, the belt is tipped opposite through the hole to attach. After it is installed, check if it is well secured to the seat cushion or not by slightly pulling.

Reference for head support insertion outlets ① ②

① for child from around 1 month to 4 months

② for child from around 4 months to 7 months.

Installing Body & Hip support (Figure 5.3)

a. Using the supporting belts (upper position) of the Body & Hip support to pass thru the holes of the seat cushion body support location. To fix the supporting belts by opening the tail at the end.

b. Using the supporting belts (upper position) of the Body & Hip support to pass thru the holes of the seat cushion hip support location. To fix the supporting belts by opening the tail at the end.

c. The both sides of waist belts pass thru the upper holes of the Body & Hip support
The crotch belt pass thru the lower belt hole of the Body & Hip support.

⚠ WARNING: Even the baby is under 3 years old, please stop using the Body & Hip support if it does not fit the baby size. To take out the Body & Hip support, follow the reverse steps of the installation.

To use with EggShock pad (Figure 5.4)

Putting into the head support to use.

The EggShock pad can be inserted into the head support of Dacco Seat to protect child from the vibrations from the ground when strolling. Insert the EggShock pad from the rear packet of the head support .

Putting into seat cushion to use. Insert the Eggshock pad from the rear packet of the seat cushion.

Installing the ASTM foot-cover (Figure 5.5)

1. Press and hold the button at the left end of the front guard, put a band and foot cover onto the front guard as illustration.

2. Tie up another band to the projected part, plug the front guard into the projected part at the end of the armrest.

3. To attach front guard and fasten the holding strings to the rear leg tubes to complete the installation.

EN

Hints for maintenance

- Never apply force on any mechanism or moving parts.
- To prevent mildew forming, do not store this product in a wet or humid environment.
- Avoid prolonged exposure of the product to rain or snow.
- Clean the plastic and metal parts with a wet cloth. For stubborn stains, use a diluted mild detergent.
- You may lubricate moving parts if the operation or movement of the stroller is not smooth. Do not apply excessive lubricant as it may stain with dust which may cause malfunction. Please do not apply any lubricating oil on handle lock (open/fold lock), safety belt buckle, front guard plug, safety lock, folding lever and swiveling lock that will cause malfunction.

Cleaning and maintaining fabrics

- ✕ Be careful not to injure the plastics on canopy and the snaps from basket.
- ✕ Due to the characteristic of the product, the color may fade after numbers of washing.
- ✕ It is recommended to wash with neutral detergent which does not contain fluorescent brightener, bleach etc.
- ✕ Always keep clean due to the condition of storage, the mildew may be generated.
- Washing of the Body & Hip support, the shoulder belt, the waist belt .
 - Hand wash in warm water or machine-wash gently .
 - When using the washing machine, put the laundries into the washing net before washing. Otherwise a fray and damage may cause.
 - Detach the seat cushion and wash according to the washing instructions.
 - It is recommended to wash and spin separately with other clothes.
 - Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
 - Do not use drying machine or dry cleaning.
- Washing of the canopy, crotch belt and the basket.
 - Do not soak into the water. Use sponge or brush wipe off the dirt with warm water.
 - After wipe off the dirt by detergent, use a cloth to wipe off the excess water and detergent.
 - Dry in shade area after wipe off water by dried cloth.

Supplier:

Combi Hong Kong Limited
Rm 1003, HK Pacific Centre, 28 Hankow Road,
Tsimshatsui, Kowloon, Hong Kong