Combi

Combi Child Car Seat Joytrip Advance Kids

User Manual

- For the safety of the child, please read this user manual carefully before use and use
- the child car seat properly.
 Store this user manual in the storage pocket of the base cover.

This product is an i-Size booster seat, and is certified according to the UN R129/03 standard.

- This product can be installed to vehicle seats approved for installation of ISOFIX child car seats. However, this does not mean that this child car seat can be installed to any vehicle seat equipped with ISOFIX anchors (bars). When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to see if it is compatible with ISOFIX size class.
- This mode is only suitable for vehicles equipped with 3-point seatbelts approved under UN R16 standard or other equivalent standards.

How to use Maintenance and Other

Before

Use

Applicable child height Height of 100 cm to 150 cm

Do not use the child car seat if the child does not meet the following conditions. Applicable child height: Height of 100 cm to 150 cm.

To avoid causing stress to the child, avoid continuous long-time usage and give the child a break from the child car seat about once every hour.

Table of Colntents

Before Use

Before Use	2
Name of Parts	
Use Conditions	5
Applicable Vehicle Seats	
Types of Vehicle Seatbelts and Precautions for Use	7
Inapplicable Vehicle Seats	8
For Safe Use of the Child Car Seat	10
Assembly Method	17

How to use

Preparation of Installation	20
Installing to the Vehicle	22
Checklist after Installation	29
Uninstalling from the Vehicle	31
Adjustment of head guard position	32
Seating the Child	33
How to Use Car Seatbelt Covers	36

Maintenance and Other

Attaching and Removing the Covers	37
Maintenance Method	41
Storage and Disposal	42

Before Use

Before Use

Thank you for purchasing this Combi child car seat.

For the safety of the child, please read this user manual carefully before use and use the child car seat properly.

< About using second-hand child car seats >

- Never use a child car seat with an unclear usage history, especially one with an unclear accident history.
- Never use a child car seat if it has cracks, large scratches or loose fasteners. A strong impact may have been applied to the child car seat due to a collision or dropping it.

The child car seat is designed to reduce injury to child in case of traffic accident, etc. However, there is no guarantee that the child car seat can com-pletely protect the child from injury. A child using the child car seat must be accompanied by an adult.

Labels

The descriptions in this manual use the labels DANGER, WARNING and CAUTION to indicate important items for safe and proper use of the child car seat. These are very important items that indicate potential consequences if not followed properly, and are categorized according to the level of severity. Always make sure to follow these items.

Label	Label contents
	Improper handling will result in imminent risk of death or serious injury.
	Improper handling may result in death or serious injury.
	Improper handling may result in injury or damage to property.
HINT	Useful hints for using the child car seat.

Name of Parts


Check that all parts are present before use.

•Store the receipt (proot ot purchase) together with this manual.



※ This manual is intended to be simple and easy to understand, so there may be differences between the illustrations in the book and the actual product.

Package contents

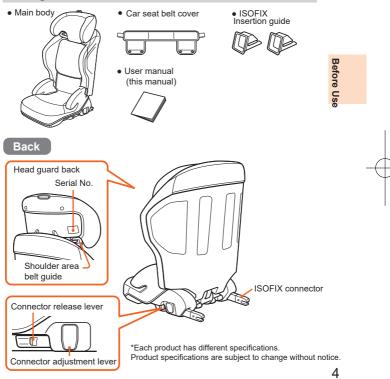

Use conditions

The child car seat is used in the following modes according to the weight of the child.

Use status		
Conditions	Height of 100 cm to 150 cm	
How to restrain the child	Fasten the child directly with a car seat belt.	
	A	В
How to fasten the child car seat in the vehicle	Fasten the child car seat in the vehicle seat with the ISOFIX connector and a vehicle seatbelt that restrains the child.	Fasten the child car seat in the vehicle seat with a vehicle seatbelt that restrains the child

Do not use the child car seat if the child does not meet the following conditions. Applicable child height: Height of 100 cm to 150 cm.

Applicable Vehicle Seats

This child car seat can be installed to vehicle seats approved for installation of ISOFIX child car seats.

However, this does not mean that the child car seat can be installed in any vehicle equipped with ISOFIX anchors (bars).

When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to make sure the ISOFIX size classes noted below are supported.

ISOFIX size classes of this product

Height of the child	Anchors
100 cm to 150 cm	B2

ISOFIX anchoring system

ISOFIX anchors are metal fixtures (bars) provided between the vehicle backrest and seat in order to install an ISOFIX child car seat. Depending on the type of vehicle, the name or location may vary depending on the type of vehicle, so check your vehicle's owner's manual. Before Use

i-Size

ISOFIX 🧇

anchor

Conformity mark Compatible mark

Types of Vehicle Seatbelts and Precautions for Use

Depending on the type of seatbelt, the child car seat may not be able to be installed or may be installed differently.

This mode is only suitable for vehicles equipped with a 3-point seatbelt approved under UN R16 standard or other equivalent standards.

- . Be sure to install the child car seat on a vehicle seat with a 3-point seatbelt.
- Never install the child car seat on a vehicle seat with a 2-point seatbelt. Installing the child car seat on such a vehicle seat may prevent the child car seat from functioning properly, which is dangerous to the child.

2-point seatbelt

As shown in the figure, a seatbelt that does not have a shoulder belt and supports the body at two points on the right and left of the waist belt.



3-point seatbelt

As shown in the figure, a seatbelt that supports the body at three points: the right and left sides of the waist belt and the shoulder belt.



Types and characteristics of seatbelts (differentiation)		Precautions for installation
ELR	Pull the seatbelt slowly to move it in and out freely, and pull it vigorously to lock it.	Slowly pull out the seatbelt and attach the child car seat.
AELR	If you pull out all the seatbelt and then let it rewind, the child car seat securing function will work and you will not be able to stretch the seatbelt anymore. (It will be released when the entire seatbelt is rewound.)	It is dangerous to completely pull out the seatbelt. Return the seatbelt once to cancel the child car seat securing before attaching the child car seat.
Other	Seatbelts that do not apply to the above	The other seatbelts cannot be used.

※ If you are unsure of the type of seat belt, please contact your automobile manufacturer.

Before Use

Inapplicable Vehicle Seats

Continue

Do not use the child car seat if it cannot be secured firmly, even if none of the conditions noted below apply.

- We do not recommend mounting car seats on the front passenger seat regardless of if there are airbags or not; thus we have not conducted a vehicle model compatibility survey on the front passenger seat.
- Vehicle seat equipped with a front airbag.
-Installation is possible to a vehicle seat with only a side airbag.



- Extreme bucket seat
-Vehicle seat that goes deep in the center of the seatbase.



• Vehicle seat facing backwards or sideways relative to driving direction.



• Vehicle seat with a seat an extremely uneven surface that prevents stable installation.



- Vehicle seat with extremely protruding vehicle headrest
-Due to the shape of the vehicle headrest, it is not possible to recline the back of the seat or adjust the headrest of the child car seat.
 - If the headrest of the vehicle seat can be removed, which enables reclining or adjusting the headrest, the child car seat can be attached to such a seat.



Before Use

Inapplicable Vehicle Seats

 Vehicle seat that is not equipped with a vehicle seatbelt.



• Vehicle seat with a 2-point seatbelt.



 Vehicle seat with an extremely short vehicle seatbelt.



- Vehicle seat with a passive seatbelt.
- ※ Passive seatbelt
 -A device that automatically attaches the vehicle seatbelt when you sit in a vehicle seat and close the door. (Automatic seat belt)



 Vehicle seat with a vehicle seatbelt coming from the middle of the seat
Vehicle seat where the seatbelt comes from a position before the waist belt guide of the child car seat.



For Safe Use of the Child Car Seat Continue

Improper handling will result in imminent risk of death or serious injury.

 Do not seat a child who does not satisfy the use conditions, or install the child car seat to an inapplicable vehicle seat.



• Do not install the child car seat to a vehicle seat equipped with a front airbag.

In case of collision, the deploying airbag will strongly impact the child seat, which is dangerous to the child. ...Installation is possible to a vehicle seatwith only a side airbag.



• Do not allow the child to stand, crouch or kneel on the child car seat.



Before Use

For Safe Use of the Child Car Seat

• Do not install the child car seat by a method other than described in this user manual and indicated on the main body.



 When you sit your child in the junior seat mode, make sure that the vehicle seatbelt insert tongue is properly inserted into the vehi- cle buckle and will not come out.



▲ Evacuation in case of emergency

In case of emergency, parents should immediately unbuckle the seat belt of the vehicle so that children can escape from the vehicle in time.



Improper handling may result in death or serious injury.

 The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible.



 Do not modify or improperly repair the child car seat.



 If a two- or three-door vehicle has a per son in the back seat, do not attach the child car seat to the front passenger seat. It will prevent the child from escaping in an emergency.



 Do not leave the child alone in the vehicle. On days with strong sunlight, the temperature inside the vehicle may become high and the child may become dehydrated. It may also cause unexpected accidents. A child using the child car seat must be accompanied by an adult.



 Keep the child chair fastened with the connector and top tether hook or the vehicle seat belt even when the child is not sitting. Otherwise, the child car seat may roll inside the vehicle, interfering with driving in case of sudden braking.



Before Use

For Safe Use of the Child Car Seat

 Do not install the child car seat in a seat with the vehicle seatbelt damaged in any way.



 When using a vehicle seatbelt with a child seat fastening function, do not enable fastening. The belt will be too tight around the child and their chest will be compressed.





Improper handling may result in injury or damage to property.


• Make sure the child car seat does not get jammed between the vehicle doors or other movable parts.

• Exposing the child car seat to direct sunlight may case the main body, insert tongue and other parts to become hot and burn the child. Touch each part and check that it is not too hot before seating the child.

- Depending on the shape and surface material (leather, etc.) of the vehicle
- material (leather, etc.) of the vehicle seat, scratches or marks may remain on the vehicle seat after installation.

 Do not use the child car seat with the seat cover and other sewn parts or the urethane and other cushioning removed. Also do notreplace these parts with parts not specifically authorized by Combi for this product. (This may negatively affect safety performance in the event of collision.)

• Be careful not to get your fingers caught in the gap between the seat and backrest.











Continue

For Safe Use of the Child Car Seat

- If you have any unfastened ob-jects in the vehicle, be careful as they may hit the child in the event of any sudden braking or a collision.
 - X
- If you use the child car seat as a normal chair, the child sitting may fall off and be injured. Only use the child car seat as described in this user manual.



 Do not install a child car seat on a vehicle seat with cushions on it. The child seat will not be firmly fastened.



- Do not operate or adjust the child car seat while driving. Also, make sure that other children on board do not touch the child car seat.
- Do not expose the child car seat to wind or rain.
- Users should be especially careful when fastening or adjusting the child car seat to prevent fingernails becoming jammed in gaps or moving parts.

△ Daily inspection

To ensure proper function of the child car seat, check the following items before use:

%When installed using the fixed method A of the vehicle on page 5 or page 22



Check that the connector adjustment lever color indicators show the locked condition ('red' is not visible).


Check that the connectors are fastened securely to the ISOFIX anchors of the vehicle.

Check that the connector release button color indicators show the locked condition ('green' is visible).

Try to rock the base in all directions to make sure that the child car seat is securely fastened to the vehicle seat.


Assembly Method


The seat and backrest come unassembled in the sales package.

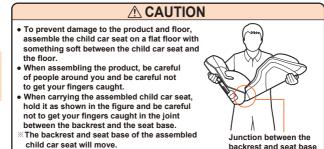

Installing the backrest


Place the backrest and seat base on a flat floor with something soft between the floor and the backrest and seat base.



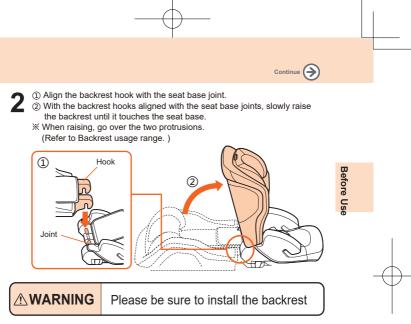

Backrest usage range

- ① When you raise the backrest from the horizontal position, you will go over the first protrusion.
- ② When you raise it further, you can go over the second protrusion and make the backrest self-supporting. Use the backrest in the range between the points where you go over the first and second protrusions.




% The removal is the reverse procedure from installing the backrest.

Assembly Method

Attaching the seat cover installing rubber ring

Lift up the headrest cover, then lift up the backrest cover and attach the left and right 2 seat cover fixing straps to the seat cover fixing hooks. (The hook can be seen when you open the backrest cover.)

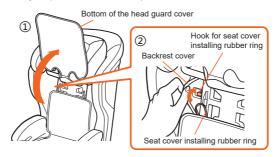

% The seat cloth cover is fixed hook, open the backrest cover as shown in Figure 2. (Picture 2 is on the left side when viewed from the front)

Preparation of Installation

Continue (-)

- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.
- Do not install the child car seat to a vehicle seat equipped with a front airbag. In case of collision, the deploying airbag will strongly impact the child car seat, which is dangerous to the child.

• Do not install the child car seat in a seat whose vehicle seatbelt is damaged in any way.

① Park the vehicle in a flat location where all doors can be opened.




② Slide the front seat forward and tilt the backrest to the front to create space for easier installation to the vehicle.



Preparation of Installation

- Remove the vehicle headrest if possible.
- Store the removed vehicle headrest in the trunk or cargo compartment.
 Recline the vehicle seat backrest slightly if possible.

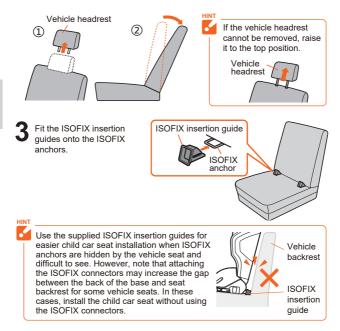

Installing to the Vehicle


Continue (-)

Can be install the in the following two ways.

Height of 100 cm to 150 cm		
How to restrain the child.	Restrain the child directly with the vehicle seatbelt	
	A	В
How to fasten the child carseat in the vehicle.	Install the child car seat in the vehicle seat with the ISOFIX connector and vehicle seatbelt.	Use the vehicle seatbelt that restrains the child to fasten the child car seat in the vehicle seat.

How to install in A


- ① While pulling the side connector adjustment lever.
 - (2) pull out the ISOFIX connector as far as possible.
 - ③ Release the connector adjustment lever and check that the indicator A shows the locked condition ('red' is not visible).
 - % Perform the above operation on the right and left sides.

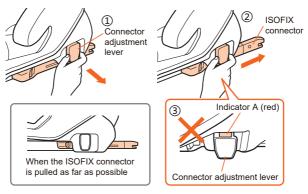


Installing to the Vehicle


Attach the ISOFIX anchors to the connectors.

- ① Fit the ISOFIX connectors onto the right and left ISOFIX anchors of the vehicle seat and push the ISOFIX connectors until they lock with a 'click' sound.
 - (2) Check that the right and left color indicators B show the locked condition ('green' is visible).

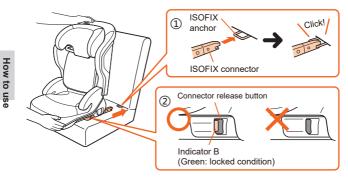



- Fit the ISOFIX connectors onto the right and left ISOFIX anchors of the svehicle eat and push the ISOFIX connectors until they lock with a 'click' sound.
- ② Check that the right and left color indicators B show the locked condition ('green' is visible).




HINT

- When pushing the child car seat, adjust the position while checking the length of the ISOFIX connector so that the difference between the right and left remains small.
- In some vehicles there may be a gap between the vehicle seat backrest even when the back of the child car seat is pushed firmly.

Installing to the Vehicle




Adjust the installing position so that there is no gap between the child car seat and the vehicle seat backrest.



If the vehicle seat backrest cannot be reclined, adjust the reclining angle of the child car seat to make the gap between the back of the base and vehicle seat as small as possible.

Backrest usage range

- When you raise the backrest from the horizontal position, you will go over the first protrusion.
- ② When you raise it further, you can go over the second protrusion and make the backrest self-supporting. Use the backrest in the range between the points where you go over the first and the second protrusions.



 If the backrest of the vehicle seat can be reclined, adjust the reclining angle of the vehicle seat so that the backrest of the child car

seat is set to the angle shown in the Backrest usage range. If the backrest tilts further than the Backrest usage range, the child car seat will not function properly in case of a collision, which is dangerous to the child.



 If the child car seat is used with an extremely large gap between the child car seat and the vehicle seat, the child car seat will not function properly in an accident, which is dangerous to the child.

How to use

Fasten the child car seat with the vehicle seatbelt.

Pull out the vehicle seatbelt.

- (2) Pass the vehicle seatbelt through the shoulder area belt guide.
- (3) Pass the vehicle seatbelt through the right and left waist belt guides.
- ④ Pass the vehicle seatbelt through the shoulder area belt guide and then through the waist belt guides on the side near the vehicle buckle.
- (5) Insert the insert tongue into the vehicle buckle until they lock with a 'click' sound
- × If the ISOFIX cover interferes with installation, remove it from the ISOFIX bracket

Fasten the child car seat even when the child is not sitting, as it may hit the driver or passengers when suddenly braking or in a collision.

How to use



(3)(4) Waist belt guide



Installing to the Vehicle

If using the ISOFIX connector interferes with installing the vehicle seatbelt or vehicle buckle, do not use the ISOFIX connector; install the vehicle seat only with the vehicle seatbelt.


If the vehicle buckle or insert tongue hits the child car seat body and the vehicle seatbelt becomes loose, the installation becomes unstable. Do not use the child car seat unless it is stable. If you have any questions, please contact Combi's Customer Service Center.




How to install in B

Store the ISOFIX connector.

- ① While pulling the side connector adjustment lever.
- 2 pull out the ISOFIX connector as far as possible.
- ③ Release the connector adjustment lever and check that the indicator
 - A shows the locked condition ('red' is not visible).
- X Perform the above operation on the right and left sides.

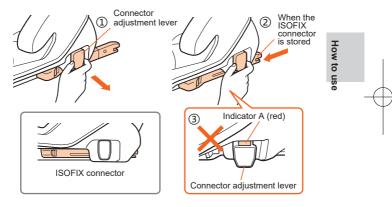



(Refer to Step 5 Fasten the child car seat with the vehicle seatbelt on page 26.)
 ※ If the ISOFIX insertion guides disturb the installation, remove the ISOFIX insertion guides from the ISOFIX anchors.


Checklist after Installation

After the child is seated and the vehicle seatbelt is fastened, check the following to make sure that the child car seat is installed properly.

Check ① to ⑨ for fastening method A.

Check ① to ⑥ for fastening method B.

- Check that there is no large gap between the backrest of the vehicle seat and the child car seat.
- ② Check that the vehicle seatbelt has passed through the shoulder area belt guide, does not compress the child's neck and is not off the shoulder of the child.
- (3) Check that the vehicle seatbelt fits the child and is not twisted or loose.
- ④ Check that the vehicle seatbelt is around the child's pelvis position.
- (5) Check that the insert tongue of the vehicle seatbelt is securely inserted into the vehicle buckle and cannot be disconnected.
- 6 Check that the vehicle seatbelt passes through the right and left waist belt guides.
- ⑦ Check that the connector release button indicator B shows 'green'.
- (8) Check that the indicator A red part of the connector adjustment lever is not visible.
- ③ Check that the right and left sides of the child car seat main body and the vehicle seat are parallel. (The ISOFIX connector is not pushed further on only one side.)

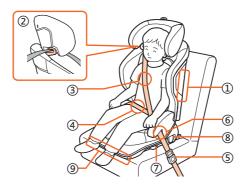

29




- If the armrests of the vehicle seat may hide the indicator and making it difficult to check visually : Insert the ISOFIX connectors into the ISOFIX anchors and confirm that the right and left connectors lock with a 'click' sound. After that, make sure that the ①, ④ in Checklist after installation are properly performed.
- If the shape of the seat base may make it impossible to operate the connector adjustment lever : Adjust the length of the ISOFIX connectors so that it touches the backrest of the vehicle and insert the ISOFIX connectors into the ISOFIX anchors to lock them. Then, confirm that the right and left ISOFIX connectors lock with a 'click' sound. After that, make sure that the
 (1), (2) in Checklist after Installation are properly performed.



Uninstalling from the Vehicle

- Press the right and left connector release buttons with your middle and ring fingers to remove the ISOFIX connector from the ISOFIX anchors.
- 2 Check that the indicator B shows the unlocked condition ('green' is not visible)



When the ISOFIX connector is hard to release:

When the ISOFIX connector is installed properly, the repulsion force of the vehicle seat may make it difficult to release the ISOFIX connector. If it is difficult to release, use the following method to reduce the repulsion force from the vehicle seat, one side at a time, to release it.

 While pushing the seat base into the vehicle backrest, operate the connector adjustment lever to extend the ISOFIX connector.

(2) Push the connector release button.




Adjustment of head guard position

Change the baby shoulder belt and head guard positions according to the child's growth.

The baby shoulder belt and head guard positions can be adjusted in 11 levels.

① While pulling the head guard adjustment lever, adjust the height of the head guard.

- ② Release the head guard adjustment lever in the proper position.
- ③ Move the head guard vertically to check that it is fastened.

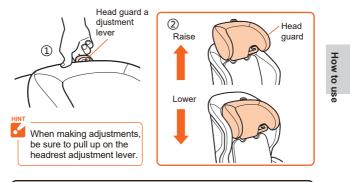

When adjusting the baby shoulder belt position, keep the child's hands and fingers away. Also, pay attention to other passenger's hands. Otherwise, their hands or fingers may get caught and they may be injured.

Seating the Child

Remove the insert tongue from the vehicle buckle once, have your child sit deep in the child car seat and adjust the height of the head guard to suit your child. (Refer to Step 2 of Adjustment of head guard position on page 32.)



Continue (

- ① Pull the vehicle seatbelt forward.
- 2 ② Pass the vehicle seat belt through the shoulder area belt guide.
 - ③ Pass the vehicle seatbelt through the right and left waist belt guides.
 - $\textcircled{\sc 0}$ Pass the vehicle seatbelt that was passed through the shoulder area
 - belt guide through the waist belt at the vehicle buckle side.
 - (5) Insert the insert tongue into the vehicle buckle until they lock with a 'click' sound.





If the vehicle seatbelt is loose, pull the vehicle seatbelt (shoulder area) upward to adjust the tension.



Seating the Child

- This product becomes unstable if it is fastened with the vehicle seatbelt. If the child gets on and off by themself without the assistance of an adult, they may slide off the vehicle seat or fall down. Be sure to have an adult take them down.
- Sitting the child as shown below may cause the child car seat to function improperly, which is dangerous to the child.
 - Make sure that the child's arm comes over the vehicle seatbelt.
 - ×
 - The child is sitting with their body leaning to the left or right.

• The child squeezes or leans forward.



• The child crouches, sits straight or kneels on the seat.




35

How to Use Car Seatbelt Cover

An attached car seatbelt cover may be used so that the vehicle seatbelt does not come into direct contact with the child. If you do not use a seat belt cover, you can also use the vehicle seat belt directly to secure the child in the vehicle seat as shown in the illustration on page 34.

- ① Attach the loop at the top of the car seat belt cover to the shoulder belt guide.
- Wrap the car seat belt cover around the vehicle seat belt and fasten it with the snap buttons at the upper and lower positions. Place the flap of the seat belt cover on the vehicle seat belt as shown in the figure below.
- ③ Secure the child to the vehicle seat with the child restraint as shown in "Seating the Child" on page 33.

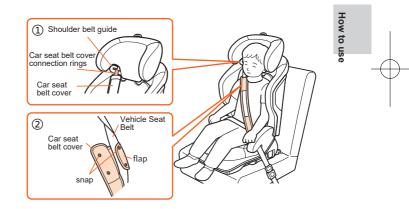


Attaching and Removing the Covers

Attaching and removing the head guard cover

- ① Pull up the head guard to the top level. (Refer to Adjustment of head guard position on page 32.)
- ② Remove the head guard installing rubber rings (one each for the right and left sides) from the back of the head guard.
- ③ Remove the head guard cover installing hooks (one each for the right and left sides) from the back of the head guard.
 - X A triangle arrow is placed as a mark.
- ④ Remove the hooks (two places from the rear upper section of the head guard cover).
- (5) Remove the head guard cover from above.

% Installation is the reverse procedure from removal.

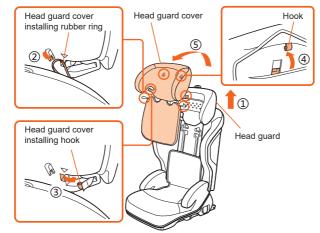


Maintenance and Other

Attaching and Removing the backrest cover

Continue

- Remove the hooks (one for the left side and one for the right side) from the bottom of the backrest cover.
- (2) Remove the two hooks from the top of the backrest cover.
- ③ Remove the sides of the backrest cover from the backrest side groove of the childcar seat body.


X Installation is the reverse procedure from removal.

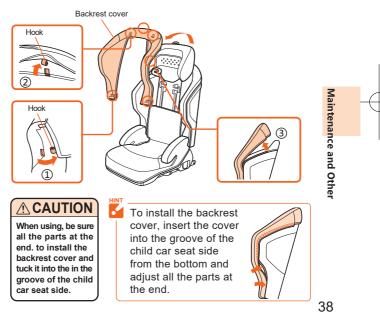

Attaching and Removing the Covers

Removing the backrest and seat


- ① Store the ISOFIX connector. (Refer to How to install in B on page 28.)
- ② Lower the head guard to the bottom. (Refer to Step 1 of Adjustment of head guard position on page 32.)
- ③ Tilt the backrest until it is even with the seat base.
- ④ Hold up the backrest to remove the hooks from the joints on the seat base.

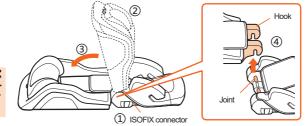

Attaching and Removing the Covers

- Remove the backrest and seat. (See the procedure under "Removing the backrest and seat" on page 39.)
- 2 Remove the seat cover installing rubber ring.
- ③ Remove the two hooks from the front of the seat cover.
- Remove the hooks (one for the right side and one for the left side) from the side
 of the seat cover.
- (5) Remove the hooks (one for the right side and one for the left side) from the rear of the armrests.
- 6 Pull out the armrest section and remove the seat cover

※ Installation is the reverse procedure from removal.

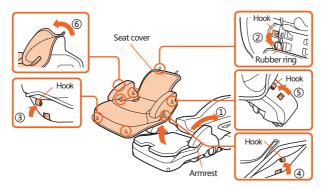

Maintenance and Other



Maintenance Method

Washing the seat cover and other sewn parts

Be sure to follow the washing instructions and cautions below.

- Follow the instructions noted on the washing label sewn onto the sheet cover.
- When using a washing machine, place the items in a laundry net. Failure to do so may result in fraying or other damage.
- Use the gentle cycle of the washing machine with cold or lukewarm water, or wash by hand.Do not use bleach.
- Use a neutral detergent. Do not use detergent containing fluorescent brightener or bleach. This may cause chapped skin or a rash.
- When using a horizontal washing machine (a washing machine with the drum facing horizontally or inclined), make sure the water level is sufficient.
- Color fading may occur due to the nature of the product.
- It is recommended to wash separately from other clothing and lightly colored items.
- Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
- · Do not use an iron.
- Do not use a dryer or dry cleaning.

Maintenance of the main body

Normally wipe clean with a well-wrung wet (water) cloth. When extremely dirty, remove the dirt using a solution or neutral detergent diluted with water, then wipe with a wet water (cloth) and dry in shade.

Urethane materials

- The dyestuff used in the seat cover and other sewn parts may transfer to the urethane materials on the back of these parts. However, this is not a problem for quality or safety.
- Urethane cushion materials for the seat base may not be washed.

Do not use undiluted neutral detergent, gasoline, benzene or other organic solvents when cleaning. These may damage the main body and baby belt, which is dangerous to the child.

Maintenance and Other

Storage and Disposal

Storage

Main body

When the child car seat will not be used for a long period of time, uninstall it and store in a well-ventilated place out of direct sunlight and away from children.

User Manual

Be sure to read and understand this user manual before use. Always keep this user manual in the storage pocket undre the seat cover.

Disposal

- . When disposing of this child seat, please follow the regulations in region.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.

Standard service life

The Standard Service Life of this product is ten years after new purchase. Once this standard service life has passed, material aging may prevent the child car seat from functioning properly, which is dangerous to the child.

To avoid unforeseen circumstances, refrain from use past the standard service life.

- Always make sure to store the receipt (proof of purchase) issued by the dealer and this user manual as a record of the new purchase date.
- Even within the standard service life, the product may malfunction due to use, environment and storage conditions, and quality is not guaranteed during this period.
- For reasons of overall product safety, repair of products past the standard service life cannot be accepted.
- Refrain from reusing products with an unknown usage history.

Combi
Combi Child Car Seat
Joytrip Advance Kids

Combi Corporation