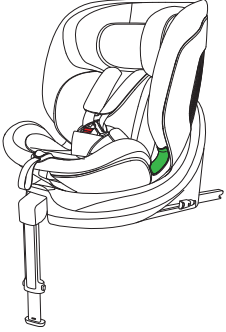


Combi

Combi Child Car Seat
Culmove Long+

For more information,
you can scan this QR code.

User Manual

- For the safety of the child, please read this user manual carefully before use and use the child car seat properly.
 - Store this user manual in the storage pocket of the base cover.
- 

This product is certified of UN R129/03 i-Size and i-Size booster car seat.

- This product can be installed to vehicle seats approved for installation of ISOFIX child car seat. However, this does not mean that this child car seat can be installed to any vehicle seat equipped with ISOFIX anchors (bars).
- When using the child car seat, always check the vehicle compliance and check the user manual of the vehicle to see if it is compatible with ISOFIX size class.

[Child seat mode]

- Applicable child: Height of 40cm to 105cm and weight of up to 18kg.
- Applicable for both forward installation and rearward installation.

[Junior seat mode]

- Applicable child: Height of 100cm to 150cm and weight of up to 36kg.
- This mode is only suitable for vehicles equipped with 3-point seat belts approved under UN R16 standard or other equivalent standards.


CAUTION

To avoid causing stress to the child, avoid continuous long-time usage and give the child a break from the child car seat about once every hour.

DANGER

Do not use forward facing before the child's age exceeds 15 months and before the child's height exceeds 76cm.

Name of Parts
Check that all parts are present before use.

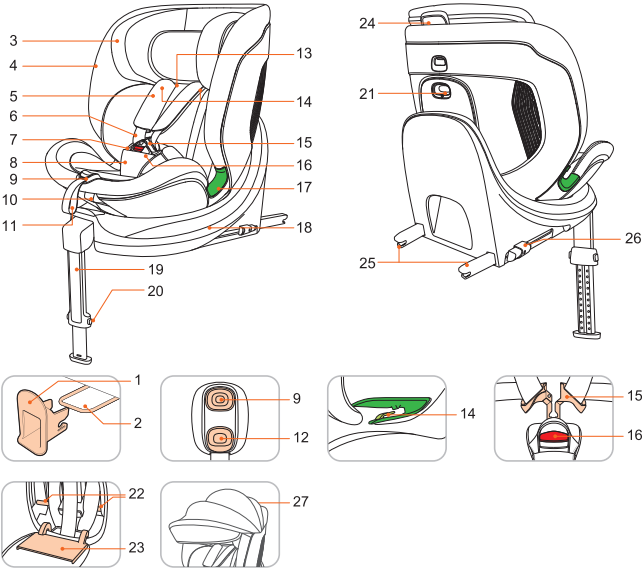

1. Insertion Guide (optional)

2. ISOFIX Anchor (vehicle)

3. Headrest

4. Seat Cover

5. Shoulder Pads

6. Shoulder Straps

7. Harness Buckle

8. Crotch Pad

9. Adjustment Button

10. Recline Handle

11. Crotch Strap

12. 360° Rotation Adjuster

13. Inner Seat

14. Belt Guidance

15. Buckle Tongues

16. Red Release Button

17. Belt Guidance

18. Base

19. Leg Support Harness

20. Adjustment Buttons

21. Instruction Back Cover Button

22. Shoulder Belt Connector

23. Instruction Back Cover (to store User Manual)

24. Headrest Height Adjuster

25. ISOFIX Connector

26. ISOFIX Buttons

27. Canopy

81437019
Ver. 01

DANGER

Improper handling will result in imminent risk of death or serious injury.

- Do not seat a child who does not satisfy the use conditions, or install the child car seat to an inapplicable vehicle seat.
- Do not install the child car seat to a vehicle seat equipped with a front airbag. In case of collision, the deploying air bag will strongly impact the child seat, which is dangerous to the child.
- ...Installation is possible to a vehicle seat with only a side airbag.
- Do not install the child car seat by a method other than described in this user manual and indicated on the main body.v
- Do not allow the child to stand, crouch or kneel on the child car seat. aa
- In the child seat mode, this product cannot be fastened with a vehicle seatbelt.
- When you seat your child in the junior seat mode, make sure that the vehicle seat belt insert buckle tongues is properly inserted into the vehicle buckle and will not come out.

Emergency Escape

- In case of accident or other emergency, an accompanying adult should press the buckle button to release the baby belt (the vehicle seatbelt in the junior seat mode) and evacuate the child from the vehicle immediately.

WARNING

Improper handling will result in imminent risk of death or serious injury.

- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level.In this case, immediately stop using the child car seat even if no damage is visible.
- Do not leave the child alone in the vehicle. On days with strong sunlight, the temperature inside the vehicle may become high and the child may become dehydrated. It may also cause unexpected accidents. A child using the child car seat must be accompanied by an adult.
- Do not modify or improperly repair the child car seat, or operate the child car seat in the way other than that recorded in this instruction manual.
- Keep the child chair fastened with the connector and top tether (in the child seat mode) or the vehicle seat belt (in the junior seat mode) even when the child is not sitting. Otherwise, the child car seat may roll inside the vehicle, interfering with driving in case of sudden braking.
- Do not install the child car seat to a vehicle seat where it may obstruct the exit of other passengers from the vehicle in an emergency.
- Please replace the child car seat after severe accident.
- If you have any unfastened objects in the vehicle, be careful as they may hit the child in the event of any sudden braking or a collision.Please properly place the luggage and items that are liable to be damaged in collision.

- In the child mode:**
- Always keep the baby belt fitting snugly. A loose belt may become wrapped around the child's neck and result in suffocation.
 - If the buckle becomes jammed with dirt, food crumbs or other objects and cannot be fastened securely or is too stiff to release easily, please contact Combi's local distributor for further inspection.
 - If the baby belt is damaged, cannot be use, please contact Combi's local distributor for further inspection.
 - Always fasten the adjustment belt to the seat cover when using the child car seat.
 - Cannot be use, a loose belt may become wrapped around the child's neck and result in suffocation.
 - The child may press the buckle button. Make sure that the insert tongues are not out of the buckle. If it comes out, the baby belt will not work properly and may become wrapped around the child's neck.
- In the Junior seat mode:**
- Do not install the child car seat in a seat with the vehicle seat belt damaged in any way.
 - When using a vehicle seat belt with a child seat fastening function, do not enable fastening. The belt will be too tight around the child and their chest will be impressed.

CAUTION

Improper handling may result in injury or damage to product.

- Make sure the child car seat does not get jammed between the vehicle doors or other movable parts.
- Exposing the child car seat to direct sunlight may case the main body, insert buckle tongues and other parts to become hot and burn the child. Touch each part and check that it is not too hot before seating the child.
- Depending on the shape and surface material (leather, etc.) of the vehicle seat, scratches or marks may remain on the vehicle seat after installation.
- If you use the child car seat as a normal chair, the child sitting may fall off and be injured. Only use the child car seat as described in this user manual.
- Do not use the child car seat with the seat cover and other sewn parts or the urethane and other cushioning removed. Also do not replace these parts with parts not specifically authorized by Combi for this product. (This may negatively affect safety performance in the event of collision.)
- Users should be especially careful when fastening or adjusting the child car seat to prevent fingernails or artificial nails from becoming jammed in gaps or moving parts.
- Do not operate or adjust the child car seat while driving. Also, make sure that other children on board do not touch the child car seat.
- Do not install, remove or carry the child car seat with a child on it. Do not carry the child car seat with the baby belt.
- Do not expose the child car seat to wind or rain.

Inapplicable Vehicle Seats

Do not install the child car seat to a vehicle seat that meets any of the following conditions.

Do not use the child car seat if it cannot be secured firmly, even if none of the conditions noted below apply.

※ We do not recommend mounting car seat on the front passenger seat regardless of if there are airbags or not space; thus we have not conducted a vehicle model compatibility survey on the front passenger seat.




Only when used in child seat mode.

- Vehicle seat that is not equipped with ISOFIX anchors (bars) and top tether anchor.
- Vehicle seat facing backwards or sideways relative to driving direction.
- Vehicle seat equipped with a front airbag.
- ...Installation is possible to a vehicle seat with only a side airbag.
- Vehicle seat with a seat an extremely uneven surface that prevents stable installation.
- Extreme shaped bucket seat
- ...Vehicle seat that goes deep in the center of the seat base.
- Vehicle seat with extremely protruding vehicle headrest.
- ...Due to the shape of the vehicle headrest, it is not possible to recline the back of the seat or adjust the headrest of the child car seat.
- ※ If the headrest of the vehicle seat can be removed, which enables reclining or adjusting the headrest, the child car seat can be attached to such a seat.
- Do not install it if the car seats or doors are movable.

Only when used in the junior seat mode

- Vehicle seat that is not equipped with a vehicle seat belt.
- Vehicle seat with a 2-point seat belt.
- Vehicle seat with an extremely short vehicle seat belt.
- Vehicle seat with a passive seat belt.
- ※ Passive seat belt ...A device that automatically attaches the vehicle seat belt when you sit in a vehicle seat and close the door (Automatic seat belt).
- Vehicle seat with a vehicle seat belt coming from the middle of the seat.
- ...Vehicle seat where the seat belt comes from a position before the waist belt guide of the child car seat.

Requirements for Use

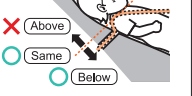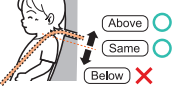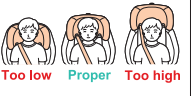Mode	Child Seat Mode		Junior Seat Mode
	Rear-Facing Installed facing opposite to the direction of travel	Forward-Facing (Installed facing the direction of travel)	
Use status			
Applicable Child Height	40cm ~ 105cm	76cm ~ 105cm	100cm ~ 150cm
Reclining Angle	Rear-Facing: Positions 1~4 can be used	Forward-Facing: Positions 1~4 can be used	Forward-Facing: Only position 1 can be used
Adjusting Baby Seat Belt Position	Adjust the baby shoulder belt so that it is at or slightly below the child's shoulder. 	Adjust the head guard height so that the baby shoulder belt is at or slightly above the child's shoulder. 	Adjust the head guard height so that the shoulder area belt guide is slightly above the child's shoulder. 
Using Head Cushion and Body Cushion	When the baby is with a height of 40cm to 75cm, be sure to use head cushion and body cushion at the same time. Be sure to attach the inner cushion correctly and make it fit the child's body completely before use.	DO NOT USE	DO NOT USE
How to Restrain the Child	 5-point Baby Belt  Vehicle Seat Belt	 5-point Baby Belt  Vehicle Seat Belt	 5-point Baby Belt  Vehicle Seat Belt
How to Fasten the Child Car Seat in the Vehicle	 ISOFIX  Leg Support Harness  Vehicle Seat Belt	 ISOFIX  Leg Support Harness  Vehicle Seat Belt	 ISOFIX  Leg Support Harness  Vehicle Seat Belt

Applicable Vehicle Seats


This child car seat can be installed to vehicle seats approved for installation of ISOFIX child car seats. However, this does not mean that the child car seat can be installed to any vehicle equipped with ISOFIX anchors (bars).

When using the child car seat, always check the vehicle compatibility chart and check the user manual of the vehicle to make sure the ISOFIX size classes noted below are supported.

Use Condition	Anchors
Rear-Facing	ISO / R2
Forward-Facing	ISO / F2X

ISOFIX Anchoring System

ISOFIX anchors are metal fixtures (bars) provided between the vehicle backrest and seat in order to install an ISOFIX child car seat. The name and position may differ according to the vehicle, so always check the user manual of the vehicle.

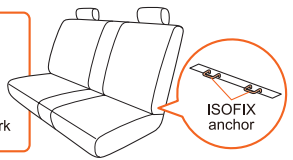

Junior Seat Mode (Height: 100cm~150cm) i-Size Booster Seat

This is an i-Size Booster Seat Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

- When the child seat used as non-integral class, do not use Leg Support Harness when your child's height between 100-150cm.
- The child restraint may not fit in all approved vehicles when used in height above 135cm.

Using Junior Seat Mode (Height: 100cm~150cm)

Depending on the type of seat belt, the child car seat may not be able to be installed or may be installed differently.


This mode is only suitable for vehicles equipped with a 3-point seat belt approved under UN R16 standard or other equivalent standards.

DANGER

- Be sure to install the child car seat on a vehicle seat with a 3-point seat belt.
- Never install the child car seat on a vehicle seat with a 2-point seat belt. Installing the child car seat on such a vehicle seat may prevent the child car seat from functioning properly, which is dangerous to the child.


2-point Seat Belt

As shown in the figure, a seat belt that does not have a shoulder belt and supports the body at two points on the right and left of the waist belt.

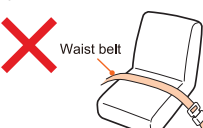

3-point Seat Belt

As shown in the figure, a seat belt that supports the body at three points: the right and left sides of the waist belt and the shoulder belt.

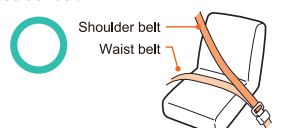

Types and characteristics of seat belt (how to distinguish them)		Precautions for installation
ELR	Pull the seat belt slowly to move it in and out freely, and pull it vigorously to lock it.	Slowly pull out the seat belt and attach the child car seat.
ALR	If you pull out all the seat belt and then let it rewind, the child car seat securing function will work and you will not be able to stretch the seat belt anymore. (It will be released when the entire anymore seat-belt is rewound.)	It is dangerous to completely pull out the seat belt. Return the seat belt once to cancel the child car seat securing before attaching the child car seat.
Other	Seat belts that do not apply to the above.	The other seat belts cannot be used.

※ If you are unsure of the type of seat belt, please contact your automobile manufacturer.

WARNING

This certification will be invalidated if you make any modifications to the child car seat. Only the manufacturer is permitted to make modifications to the child car seat.

The **Culmove Long+** is exclusively intended to secure your child in your vehicle.

Tested and approved according to ECE* R129		
Body Size	Installation method	Installation direction
40-105cm;≤18kg	ISOFIX + Leg Support Harness	Rear-Facing
76-105cm;≤18kg	ISOFIX + Leg Support Harness	Forward-Facing
100-150cm	Seat Belt + ISOFIX	Forward-Facing
	Seat Belt	

*ECE=European Standard for Child Safety Equipment.

The child car seat has been designed, tested and approved according to the requirements of the European Standard for Child Safety Equipment (ECE R129/03). The seal of approval "E" (in a circle) and the approval number are located on the orange approval label (sticker on the child car seat).

DANGER

Use the Culmove Long+ exclusively for securing your child in your vehicle. It is in no way suitable for using as a seat or toy at home.


1. ISOFIX Connector and Leg Support Installation

- Park the vehicle in a flat location where doors can be fully opened. Slide the front seat forward and tilt the backrest to the front to create space for easier installation to the vehicle.
- Remove the vehicle headrest if possible.
※ Store the removed vehicle headrest in the trunk or cargo compartment. Recline the vehicle seat backrest slightly if possible.
- Fit the ISOFIX insertion guides onto the ISOFIX anchors.
※ However, note that attaching the ISOFIX connectors may increase the gap between the back of the base and seat backrest for some vehicle seats. In these cases, install the child car seat without using the ISOFIX connectors.

ISOFIX Connector


- If your vehicle is not fitted with ISOFIX insertion aids(vehicle) as standard, clamp the two ISOFIX insertion aids (1), which are included in the scope of delivery of the seat, with the opening pointing upwards, to the two ISOFIX fastening points (2) of your vehicle. If you don't have ISOFIX insertion aids (1), please ignore this step.

1.2

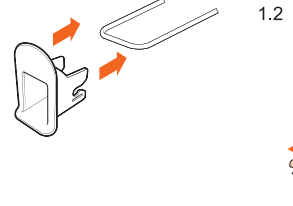

Press the ISOFIX buttons (26) to extend both both ISOFIX connectors from both sides of the base.

1.3

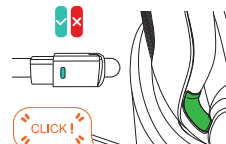


Push the car seat back until it rests firmly against the vehicle seat. A clicking sound will indicate that the ISOFIX connectors are fully engaged, and the indicators on both sides will change from red to green.

CAUTION

- The adult seat belt must not be twisted or have their places changed over.
- When using Junior Mode, do not use the seat if it is set at any angle

※ Example

Move the child car seat backwards and push the backrest against the vehicle seat.

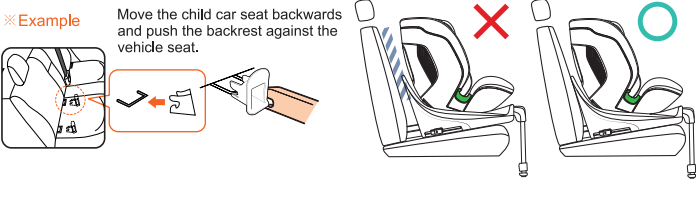


Leg Support

- 1.4 Release ISOFIX Buttons (26) towards each other to loosen the ISOFIX Anchors (2) on both sides. Move the ISOFIX Connectors (25) back into the seat base.
- TIP!**
The ISOFIX Connectors are protected against damage when they are pushed back into the seat base.
- 1.5 Pull the Leg Support Harness (19) away from the base bottom of the child car seat until the Leg Support Harness (19) is fully extended.
- 1.6 Press both Adjustment Buttons (20) and pull out the Leg Support Harness (19) until it makes firm contact with vehicle floor and the Leg Support Harness indicators are green.
- 1.7 Retract the Leg Support Harness (19) to the base.
- 1.8
- CAUTION**
The child car seat must always be secured when it is in the vehicle, even if no child is being transported.
- Move the child car seat backwards and push the backrest against the vehicle seat.

WARNING

If the vehicle buckle tongue hits the child car seat body and the vehicle seat belt becomes loose, the installation becomes unstable.

Do not use the child car seat unless it is stable.

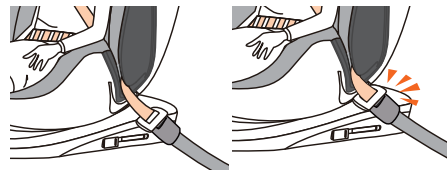

2. Rotation and Recline Functions

Rotation

- 2.1
- 360°

DANGER

When the seat is rotated to 90°, the user can place the child in this position, but this position must not be used during driving.

Pull the 360° rotation adjuster (12) out with your finger, rotate the seat shell. Rotate the seat shell 90° towards the vehicle door. Now you can put your child in or take him/her out easily.


Rotate the seat shell 90° again so it is facing either forwards or backwards, depending on the height of your child, until it engages with a clicking sound.

Recline

- 2.2
- FORWARD-FACING** 76-150CM
≤36KG
- 76-105cm: Positions 1 to 4 can be used.
100-105 cm: Use position 1 only.
- REAR-FACING** 40-105CM
≤18KG
- 40-105 cm: Positions 1 to 4 can be used.
- Pull the recline handle (10) and pull the seat outwards, then the seat can be adjusted. It can be adjusted to 4 positions for facing forwards use and 4 positions for facing backwards use. Different height need use different recline levels.

CAUTION


- When using in the rear-facing mode, there are four recline levels. If it is difficult to distinguish the levels, releasing the lever after adjusting one level at a time will make it easier to confirm the position.
- When using in the rear-facing mode, there are four recline levels. If it is difficult to distinguish the levels, releasing the lever after adjusting one level at a time will make it easier to confirm the position.

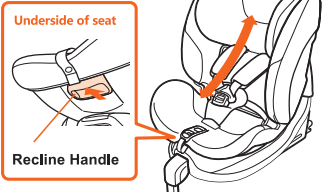

Child Seat Mode	Upright		Upright	
	1	2	3	4
Rear-Facing	1	2	3	4
Forward-Facing	1	2	3	4
Junior Seat Mode				
Forward-Facing	1	x	x	x

CAUTION

- Keep children's hands and fingers away from the lever during reclining operations. Also, be careful of passengers' hands, as fingers or hands may get caught and injured.
- Please note that if trash, food, or drinks drop into this area, it may cause a malfunction.
- After adjusting the seat, please check that the tilt lever has clicked back into place and that the seat is securely locked. (If the seat is not properly secured, this may compromise safety in the event of a collision.)

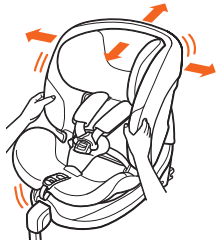

WARNING

When using Junior Mode, do not use it at any angle other than the most upright position (first level).

WARNING

- Do not use Forward-Facing before the child's age exceeds 15 months (refer to instruction).
- Do not use if the child under 40cm in height or over 150cm in height.
- Follow all instructions and safety labels when using the product.

3. Shoulder Belt Adjustments

- 3.1
- Press the strap adjustment button (9) and loosen the shoulder straps (6) of the child seat as much as possible.

- 3.2 To open the Harness Buckle (7) by pressing the red Release Button (16) then put the child in the car seat.
- 3.3 Put the two Buckle Tongues (15) together and push them into the Harness Buckle (7) until they engage with a clicking sound.

DANGER

If your child tries to press the ISOFIX buttons or the harness buckle button, stop immediately as soon as possible. Check whether the child car seat is correctly fastened and ensure that your child is correctly secured. Explain to your child the dangers associated with their actions.

- 3.4 Pull the Headrest Height Adjuster (24), select the correct height of the Headrest (3) and engage it in position that fits your child by releasing the adjuster.
- 3.5 Adjust the Headrest (3) to proper position, with Shoulder Straps (6) slightly higher or equal to child's shoulders. Make sure the distance between child's shoulder and the bottom of the headrest is lower than one finger.
- 3.6 Pull the Crotch Strap (11) until the strap lies flat and comfortable on your child's body.

WARNING

The shoulder area belt guide adjusts the vehicle seatbelt (shoulder area) so that it is fastened in the correct shoulder position for the child. As the child grows and the shoulder area belt guide is lowered, readjust the height of the head guard.


WARNING

- The child should take off his/her thick coat before sitting on the car seat. Otherwise, the child may not be held tightly.
- Do not dress the child in clothes in which the child's legs cannot be separated.
- Do not seat the child wrapped in a towel, etc.
- Do not seat the child incorrectly as illustrated on the right. The child car seat will not function properly, which is dangerous to the child.



WARNING

- Do not use the child car seat if the indicator does not change to green when the buckle tongues are inserted into the buckle.
- Check that the baby belt is not twisted or loose. Always pull down the baby waist belt to firmly hold the pelvis position.
- Always adjust the baby belt to the proper length. If the baby belt is not fit to the child's body, the child may tumble out of the child car seat in the event of collision or a loose baby belt may wrap around the child's neck and result in suffocation.

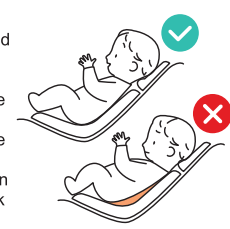

4. Mode Change: Child Seat to Junior Seat

- 4.1 40-105CM
- 4.2 76-105CM
- 4.3 100-150CM

40-105cm: Install in the rear-facing position with ISOFIX (refer to 1.2, 1.3).

76-105cm: Install in forward-facing position with ISOFIX (refer to 1.2, 1.3) and Leg Support (refer to 1.5 - 1.8).

100-150cm: Install in forward-facing position. Please store the 5-point harness first, then use ISOFIX combined with the adult seat belt, or use the adult seat belt alone.

For ISOFIX installation, please refer to 5.2, 5.3; if you are not, please skip this step. Install the car seat using the adult seat belt. Please ensure that the inner seat (13) has been removed.

- 4.4 Pull out the belt from the belt ALR (Automatic Locking Retractor).
- Diagonal belt through the same side of belt guidance (14) on headrest, then pull the diagonal belt and lap belt together through the other belt guidance (17) on the base.
- Keep the diagonal belt at the position of belt guidance (14) between the outside of the neck and shoulder (in the middle of point@and point@).
- 4.5 Insert the buckle tongue into the vehicle seat buckle until it clicks into place. Pull the belt in the direction of the arrow to tighten it, feeding any slack back into the ALR retractor.
- Finally, shake the child seat to ensure it is securely installed

WARNING

- Check that the vehicle seat belt is not twisted or loose.
- Always pull down the vehicle seat belt (waist area) to firmly hold the pelvis position.
- This product becomes unstable if it is not fastened with the vehicle seat belt. If the child gets on and off by them self without the assistance of an adult, they may slide off the vehicle seat or fall down. Be sure to have an adult take them down.
- Make sure that the child's arm comes over the vehicle seat belt.
- Do not allow the children to ride by mistake. Otherwise, the functioning of the child car seat may be impaired, which can be dangerous.
 - Make sure that the child's arm comes over the vehicle seat belt.
 - The child squeezes or leans forward.
 - The child is sitting with their body leaning to the left or right.
 - Children should sit upright, don't put the feet on the child car seat when the child is sitting.

5. 5-Point Harness Storage

The child's height is more than 100cm, the 5-point safety harness should be stored away and the child should be secured with the adult seat belt.

- 5.1
- 5.2 Remove the elastic band on the seat cover (4) from the hook. Hide the shoulder pads (5) behind of the seat cover (4).
- 5.3 Pull down harness buckle (7) across seat cover (4). Close and hide it to the storage.
- Reattach the 5-point harness: Follow the steps for <5-Point Harness Storage> in reverse order.

6. Canopy Installation and Usage

- 6.1
- The Sunshade (27) protects your child's head from sunlight. It is foldable; to open and close.
- Remove the connectors and connecting cords on both sides to separate the Sunshade.

DANGER

- Improper use of the canopy can be dangerous, as it may come into contact with the child in an accident or collision.
- Be sure to attach the canopy connectors into the side, and the buckle is fixed to the headrest when in use.
- Be careful when opening or closing the canopy, watch out for fingers and hands to avoid pinching injuries to the child or others.

Safety Notes

Notice

- Notice regarding i-Size category Enhanced Child Restraint Systems (40-105cm)
- This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.
- Notice regarding i-Size booster seat category Enhanced Child Restraint Systems (100-150cm)
- This is an i-Size booster seat Enhanced Child Restraint System.
- It is approved according to UN Regulation No.129, for use primarily in" i-Size seating positions"as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

DANGER

Please read this manual and the vehicle handbook carefully and make sure you understand all the instructions related to child car seats. Install and use the child car seat as described in the instruction manual. Failure to do this could result in serious injury or even death of your child. Keep the instructions together with the ECRS for future reference.

DANGER

Because of potential medical issues inherent to low birth weight and premature infants, always have a trained professional doctor or hospital staff assess the suitability of the ECRS prior to leaving the hospital or using the ECRS.

- Make sure** to use an inner pad, if the child's height is between 40cm and 75cm.
- Make sure** any straps holding the ECRS to the vehicle should be tight. Any straps restraining the child should be adjusted to the child's body.
- Make sure** straps should not be twisted, and Leg Support Harness should be firm contact with the vehicle floor.
- Make sure** in 100-150cm body size, the lap vehicle adult seat belt must be worn in such a way as to properly secure the pelvis of the child.
- Make sure** the ECRS is changed when it has been subject to violent stresses in an accident.
- Make sure** the rigid items and plastic parts of an ECRS shall be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- DO NOT** make any alterations or additions to the ECRS without the approval of the Type Approval Authority, or a danger occurs if not following closely the installation instructions provided by the manufacturer child restraint.
- HOT!** The child seat should be kept away from sunlight if the seat is not provided with a textile cover, otherwise it may be too hot for the child's skin.
- DO NOT** leave your child unattended in this restraint even for a short time.
- Make sure** any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured
 - a) **DO NOT** use the ECRS without the cover.
 - b) **DO NOT** replace seat cover with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
- DO NOT** use the ECRS if position of the vehicle seat buckle to the main load bearing points on the restraint is unsatisfactory, please contact the manufacturer in doubt about this point.
- DO NOT** use any load bearing points other than those described in the instructions and marked in the ECRS, please contact the manufacturer if in doubt about this point.
- DO NOT** use forward facing before the child's age exceeds 15 months (refer to instruction).

9. Storage and Disposal

Storage

Main body

When the child car seat will not be used for a long period of time, uninstall it and store in a well ventilated place out of direct sunlight and away from children.

Disposal

- When disposing of the child seat, follow the standards of your municipality or region.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.

Standard Service Life

The Standard Service Life of this product ten years after new purchase. Once this standard service life has passed, material aging may prevent the child car seat from functioning properly, which is dangerous to the child. To avoid unforeseen circumstances, refrain from use past the standard service life.

- Always make sure to store the receipt (proof of purchase) issued by the dealer as a record of the new purchase date.
- Even within the standard service life, the product may malfunction due to use, environment and storage conditions, and quality is not guaranteed during this period. Repairs past the warranty period of 'one year from the date of purchase' noted on the warranty card will entail a charge.
- For reasons of overall product safety, repair of products past the standard service life cannot be accepted.
- Refrain from reusing products with an unknown usage history.